


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

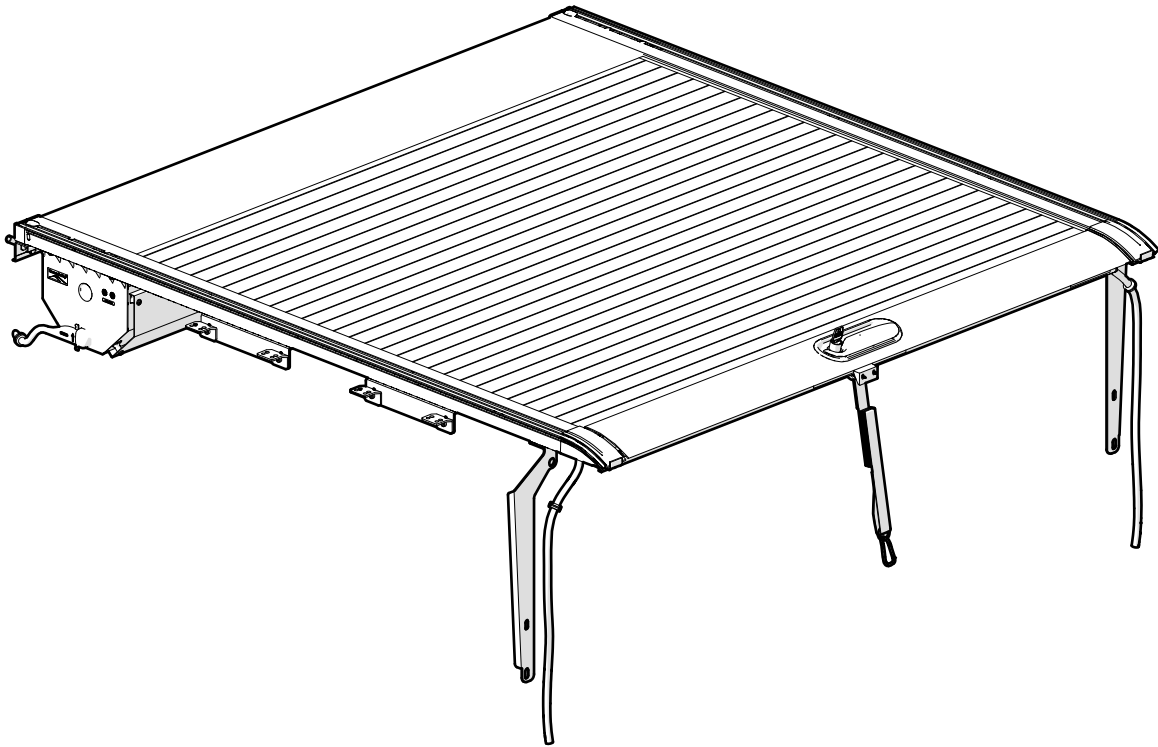

Model Year: 2011 →

Part Number: RR RC FO90 H04 Double Cab (DC)
RR RC FO91 H04 Super Cab (SC)

Weight: 31 / 36 kg

Installation Time: 2 hr

GR Installation instruction
Mountain Top Roll

S Monteringsanvisning
Mountain Top Roll

RUS Инструкция по установке
Mountain Top Roll

D Einbauanleitung
Mountain Top Roll

SF Asennusohje
Mountain Top Roll

TR Montaj Talimatı
Mountain Top Roll

E Instrucciones de montaje
Mountain Top Roll

CZ Návod k instalaci
Mountain Top Roll

RO Instructiuni de instalare
Mountain Top Roll

F Notice de montage
Mountain Top Roll

H Szerelési utasítás
Mountain Top Roll

NL Installatie-instructies
Mountain Top Roll

I Istruzioni de montaggio
Mountain Top Roll

PL Instrukcja montażu
Mountain Top Roll

DK Monteringsvejledning
Mountain Top Roll







P Instruções de instalação
Mountain Top Roll

GR Οδηγίες Εγκατάστασης
Mountain Top Roll





















N Monteringsveiledning
Mountain Top Roll

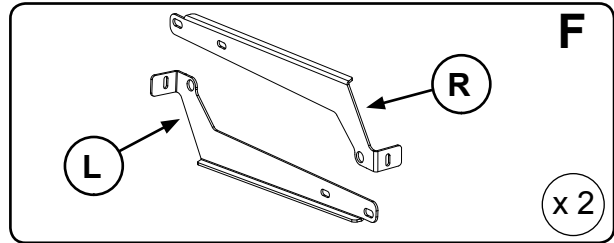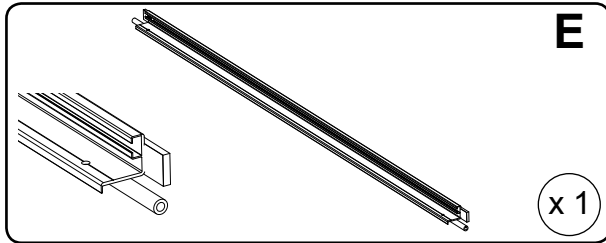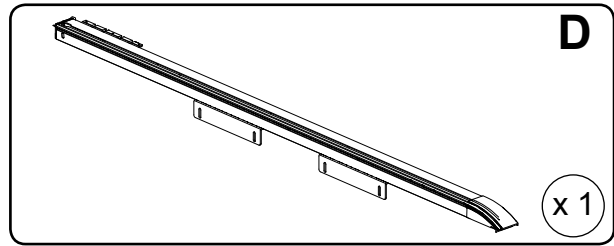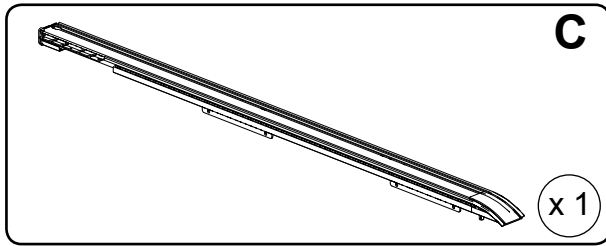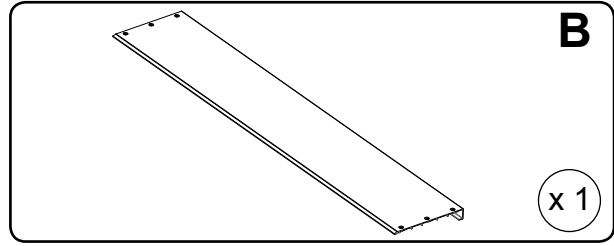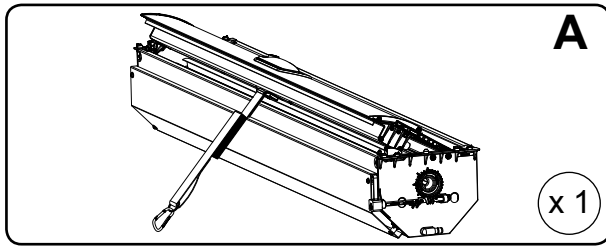Ford Wildtrak

Red Rock Roll Cover Installation instructions

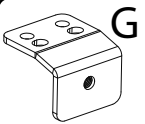

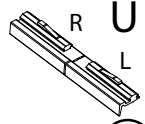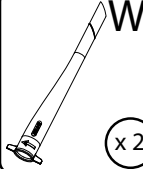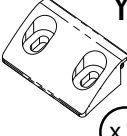

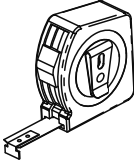
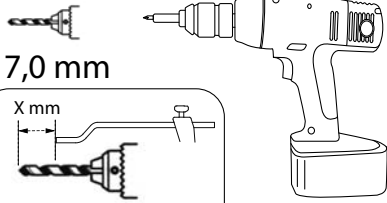
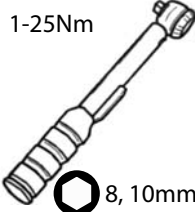
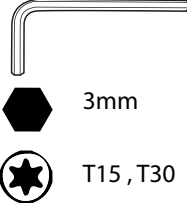



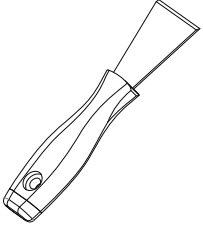

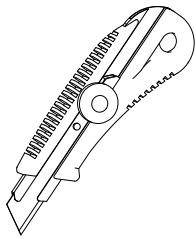
Kit
DC
SC

G  x12 SC x8 DC	H  x2	I  M6x12 x12 SC x8 DC	J  Ø6 x14 SC x10 DC	K  M6 x2	L  M6x12 x4	M  M6x25 x2
N  M5x6 x6	O  x6	P  x6	Q  600mm x2	R  x4	S  x2	T  x2
U  x2	W  x2	X  M6x25 x2	Y  x1	Z  x2	 Installation Manual x1	


Ford Wildtrak


Red Rock Roll Cover Installation instructions

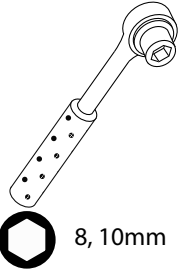

 <p>8, 10mm</p>	 <p>Rust protection Rostschutzmittel Anti-rouille Anti roest</p>		 <p>17,0 mm</p> <p>X mm</p>	
 <p>1-25Nm</p> <p>8, 10mm</p> <p>T15, T30</p>	 <p>3mm</p> <p>T15, T30</p>	 <p>LOCTITE 243</p>	 <p>H₂O</p>	
	 <p>Silicone</p>			

Ø 17mm

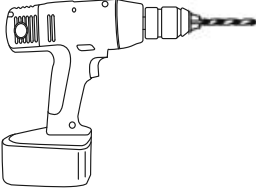

+



Rust protection
Rostschutzmittel
Anti-rouille
Anti roest



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

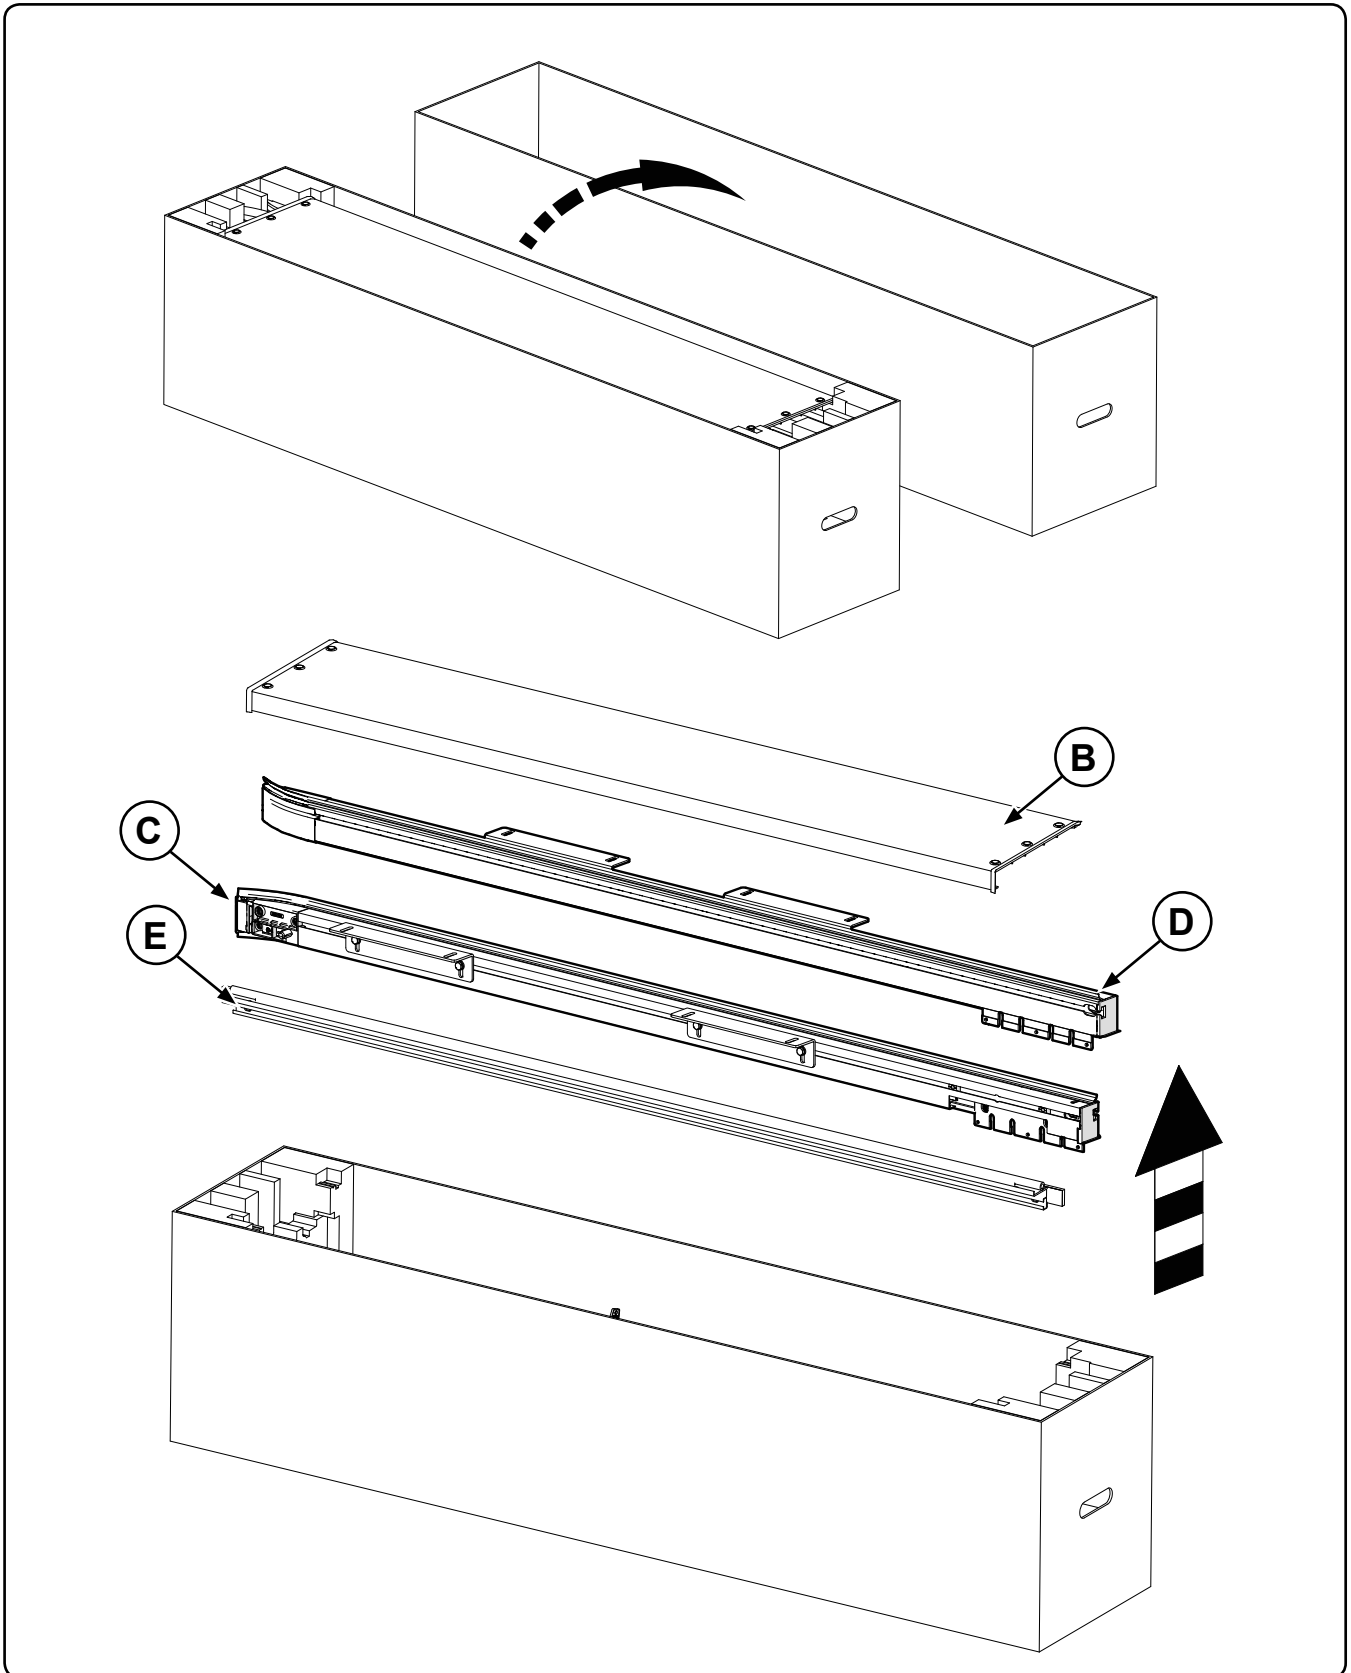




Ford Wildtrak

Red Rock Roll Cover
Installation instructions

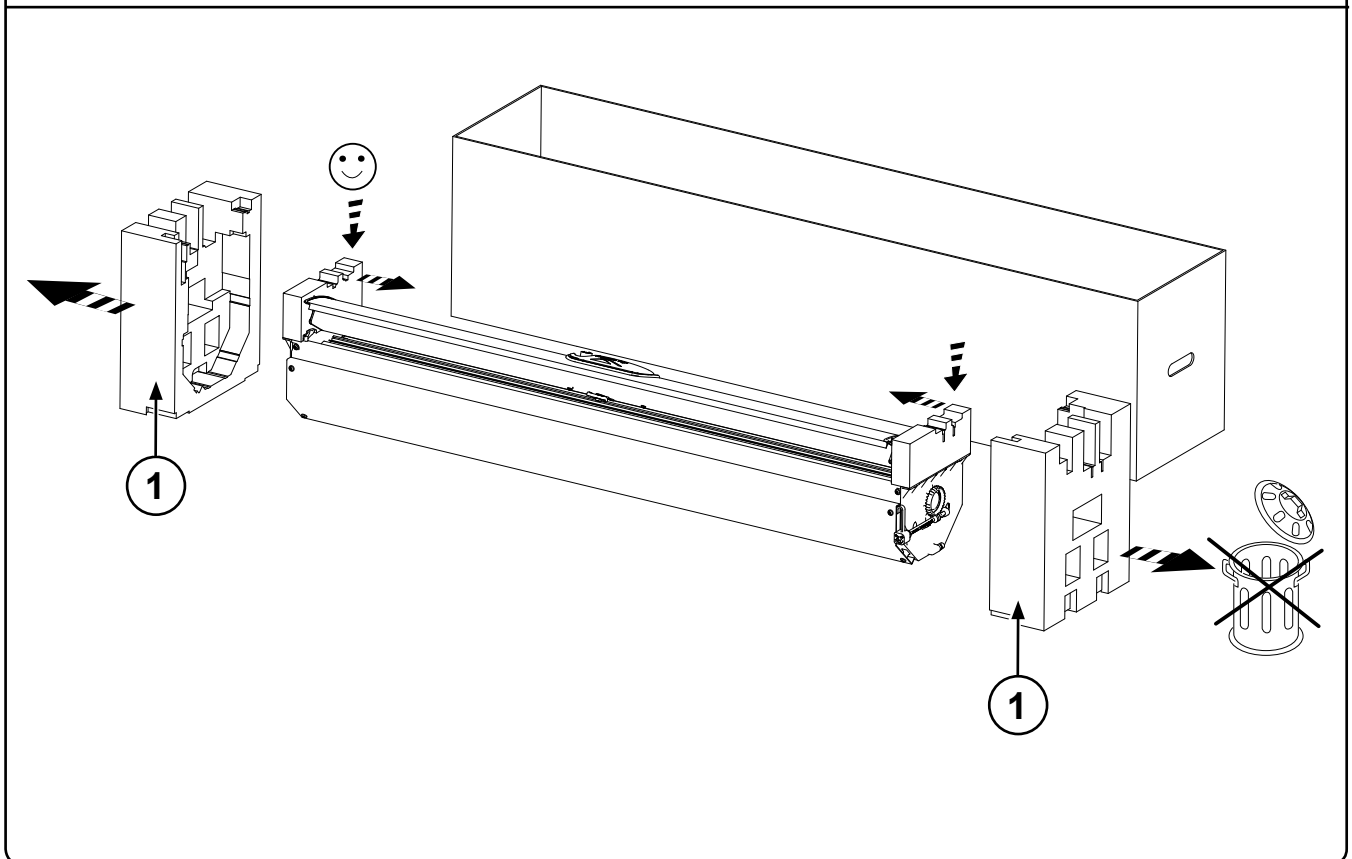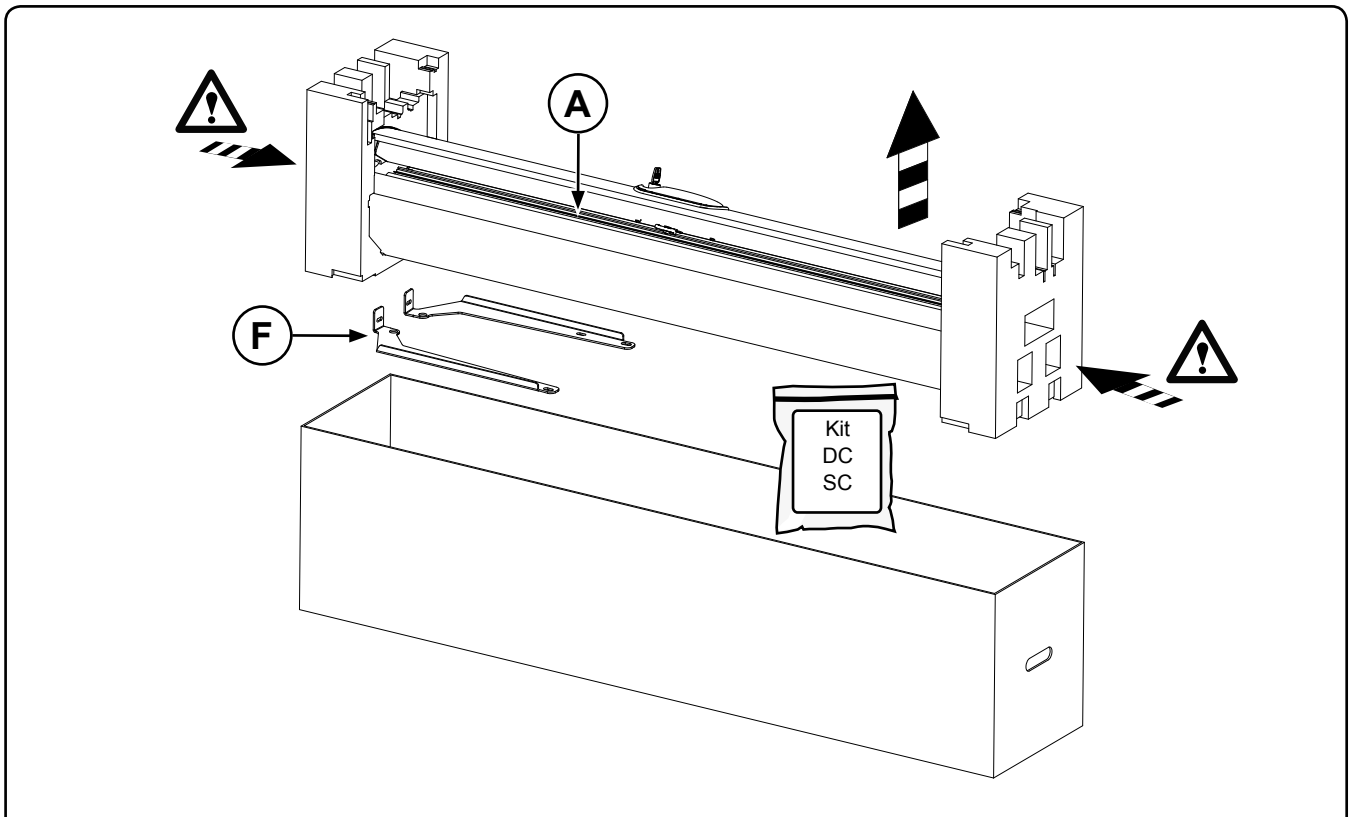


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

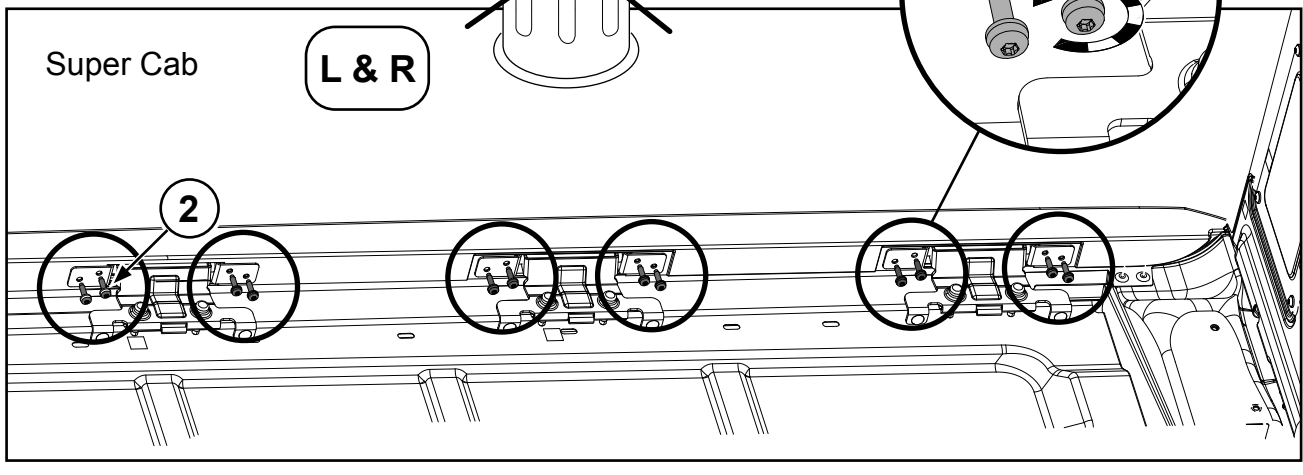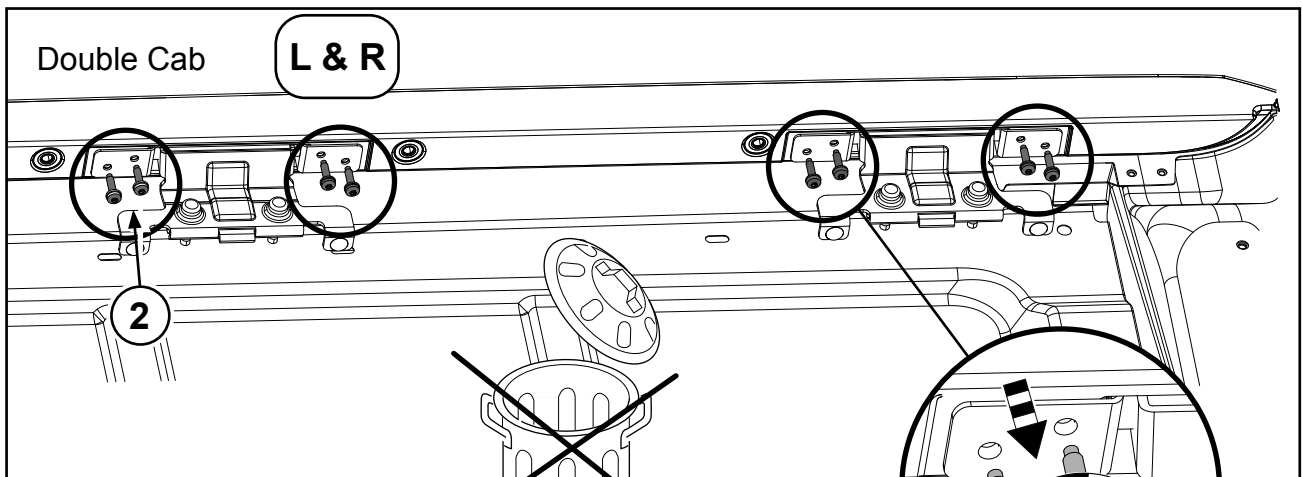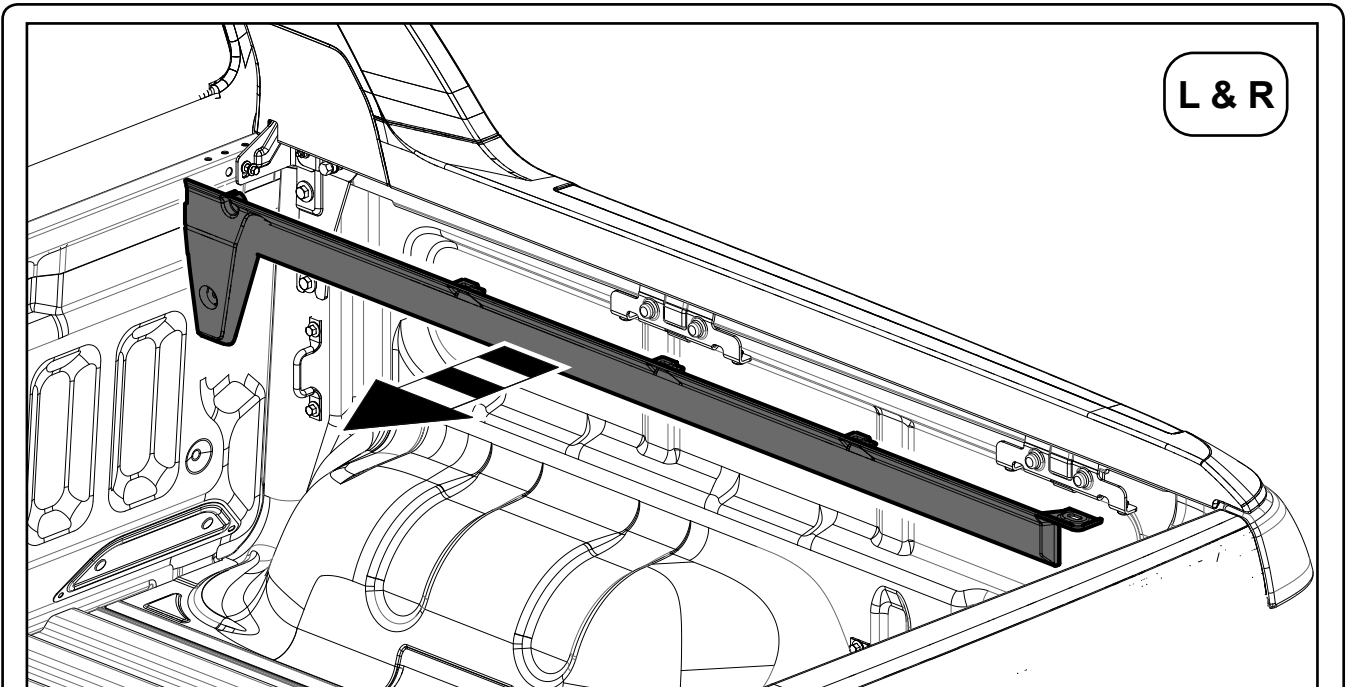



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

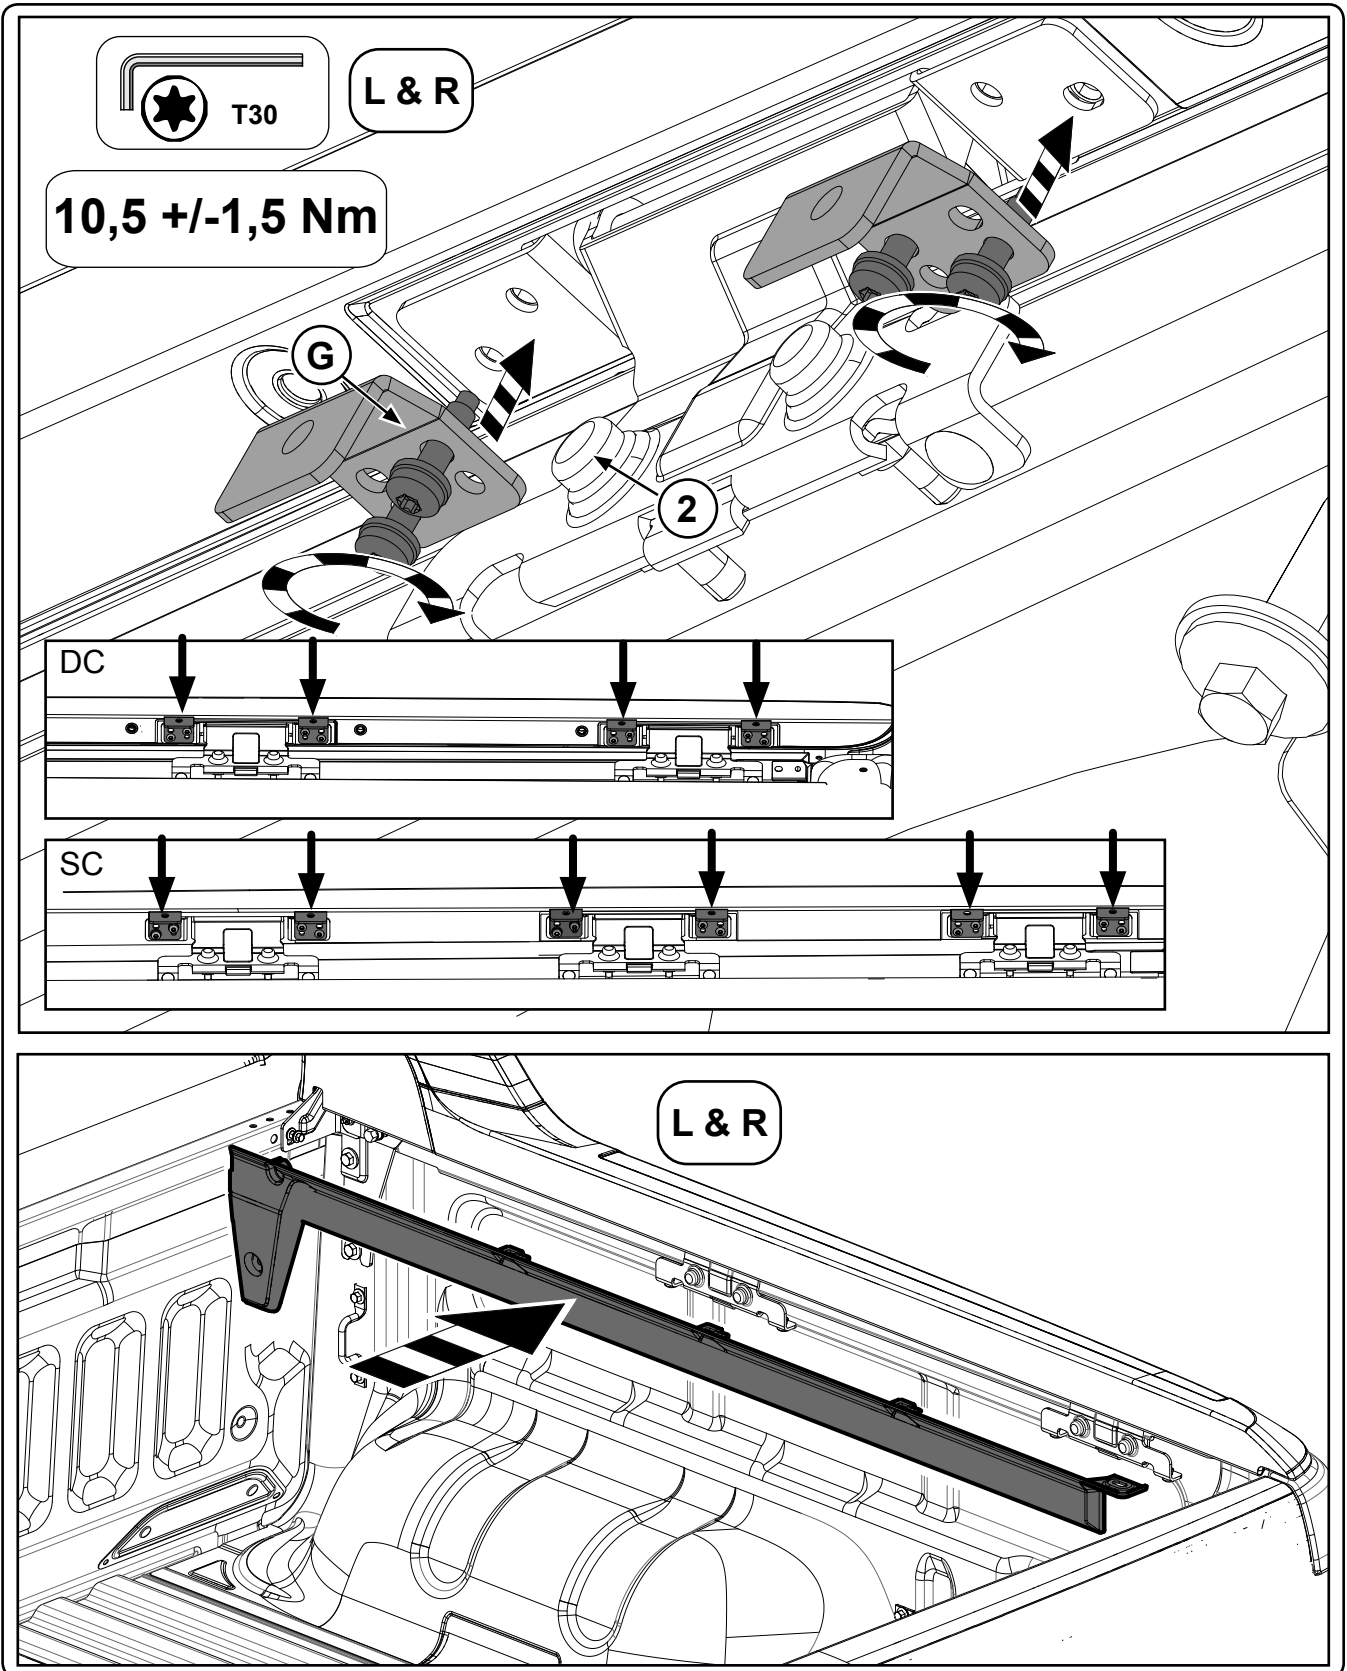





Ford Wildtrak

Red Rock Roll Cover
Installation instructions

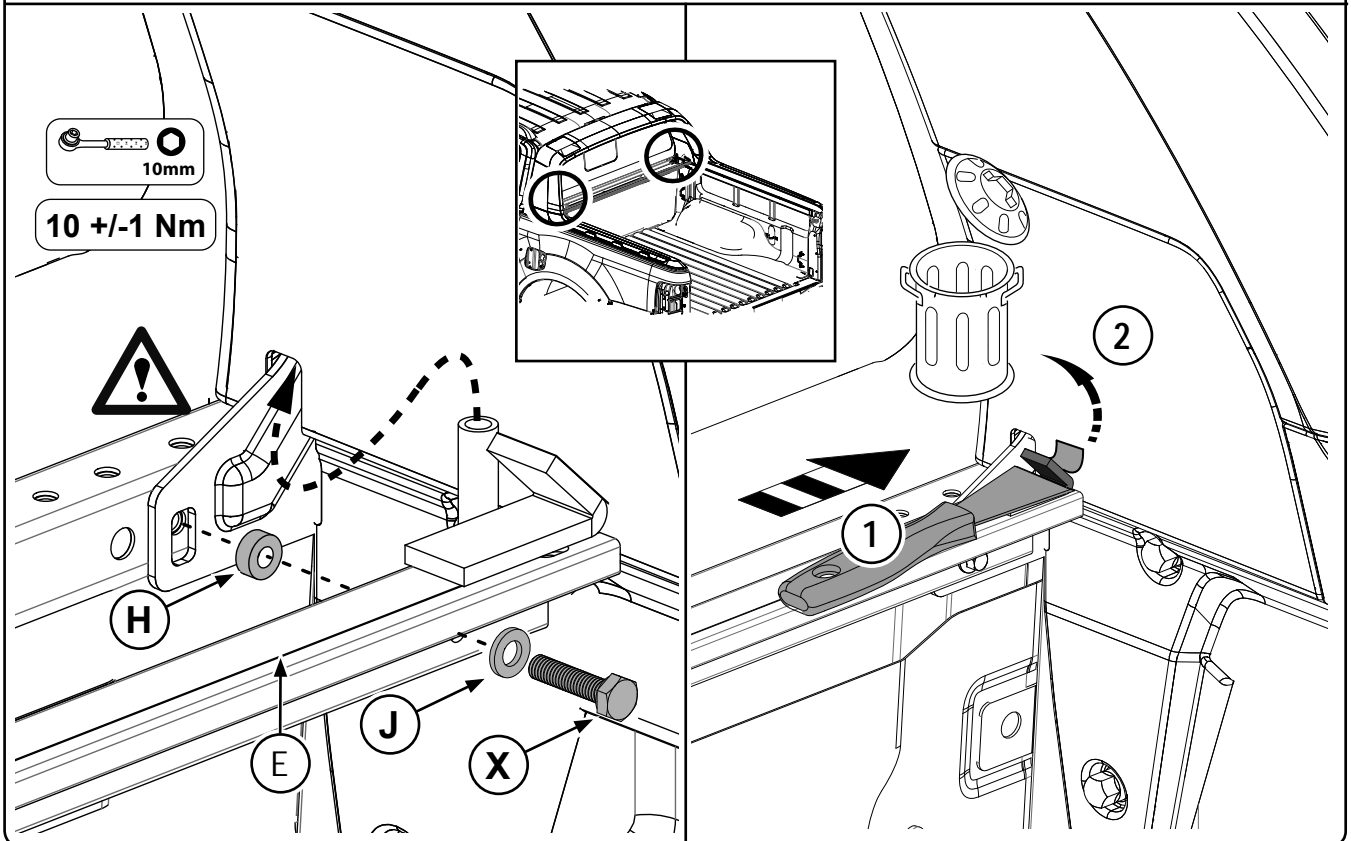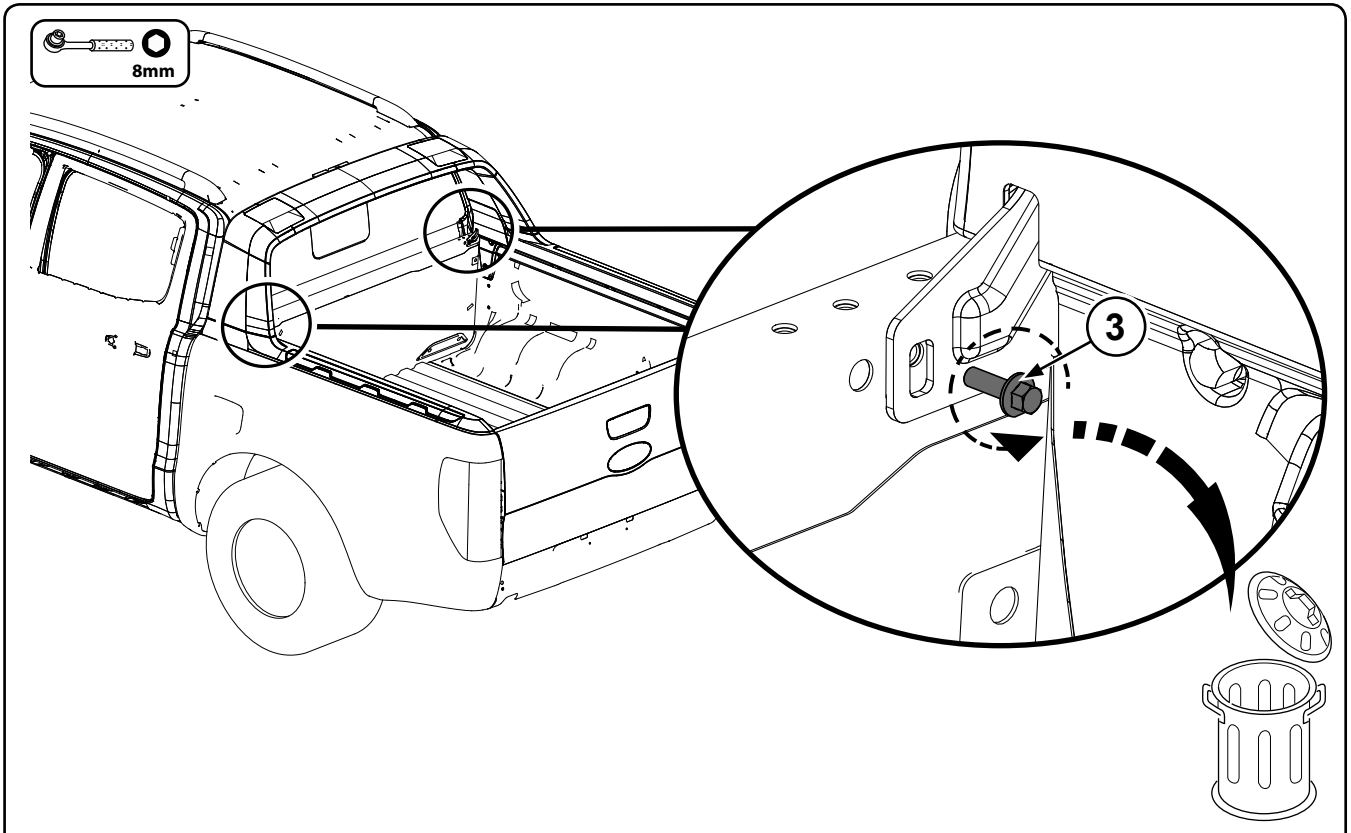



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

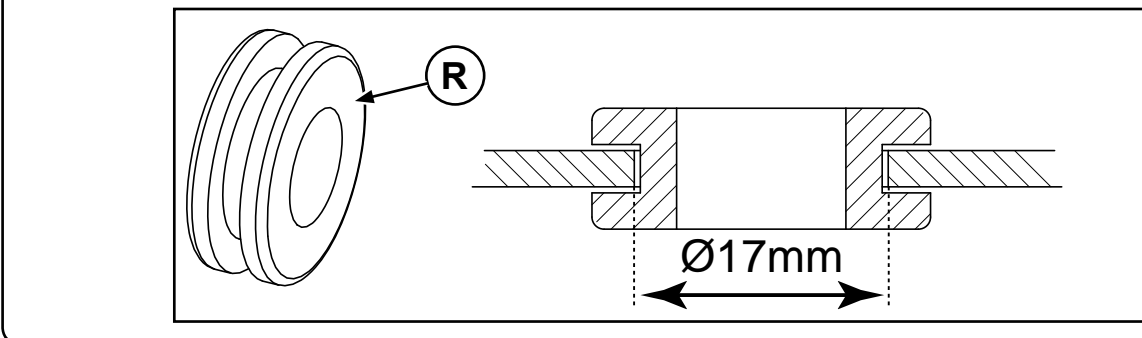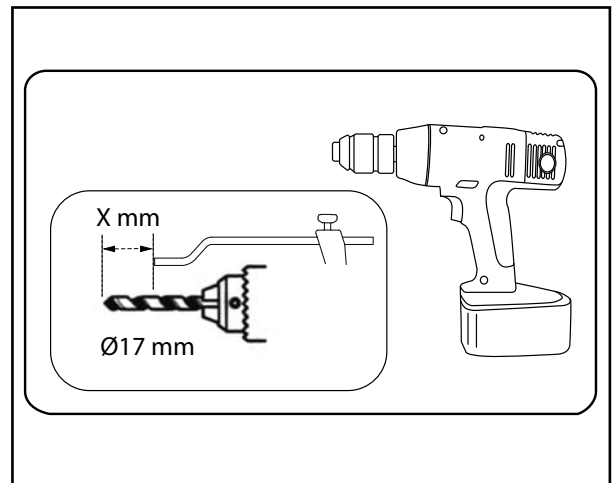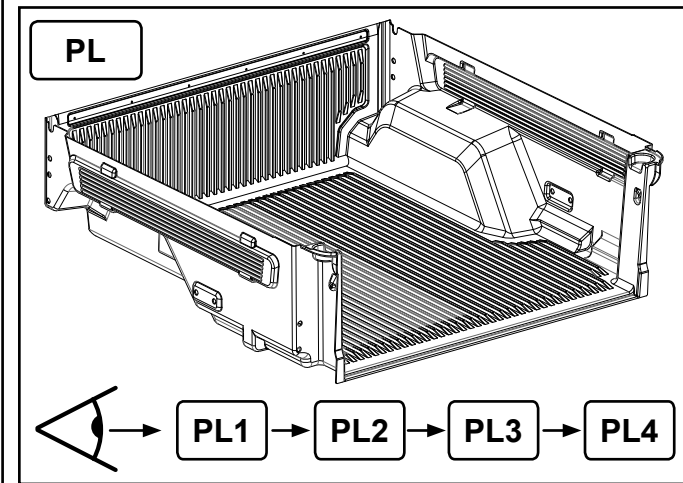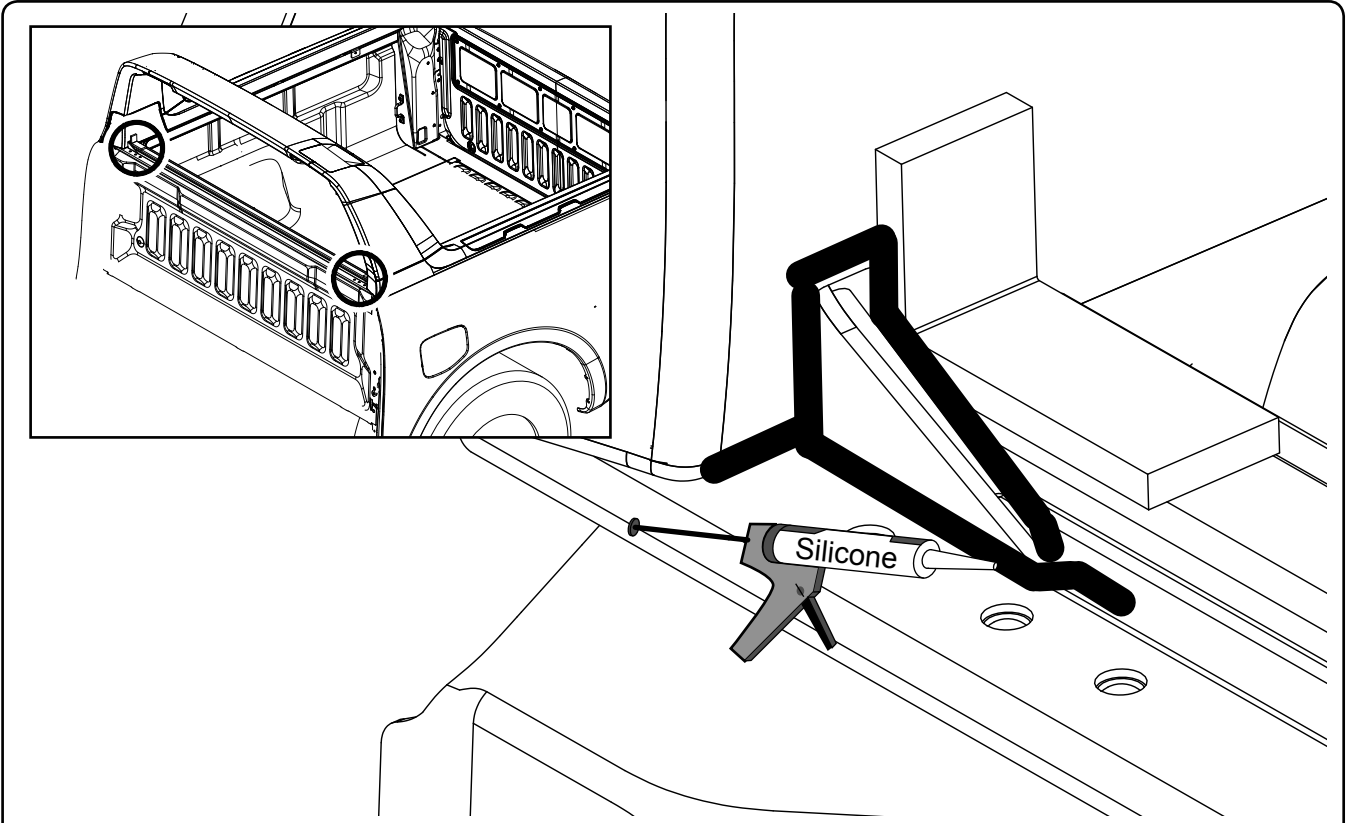



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

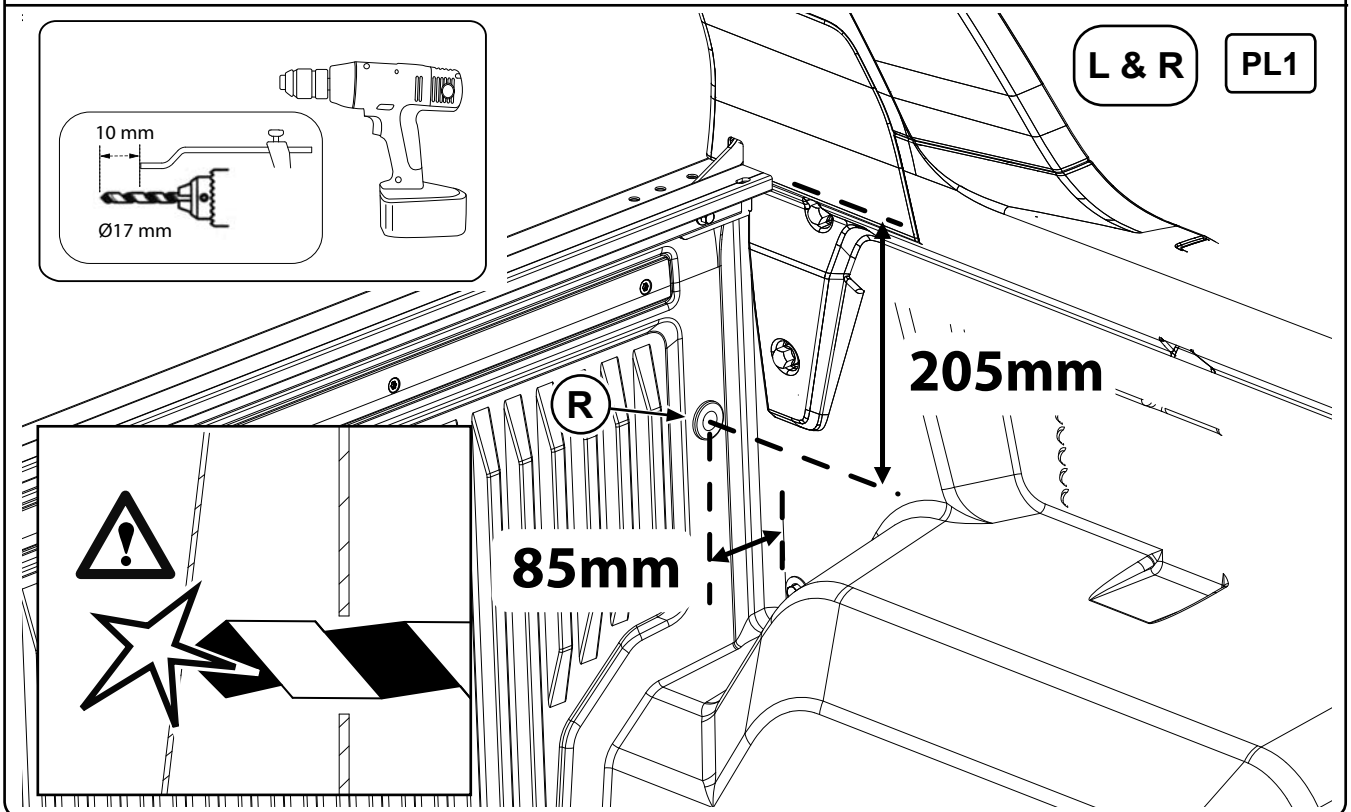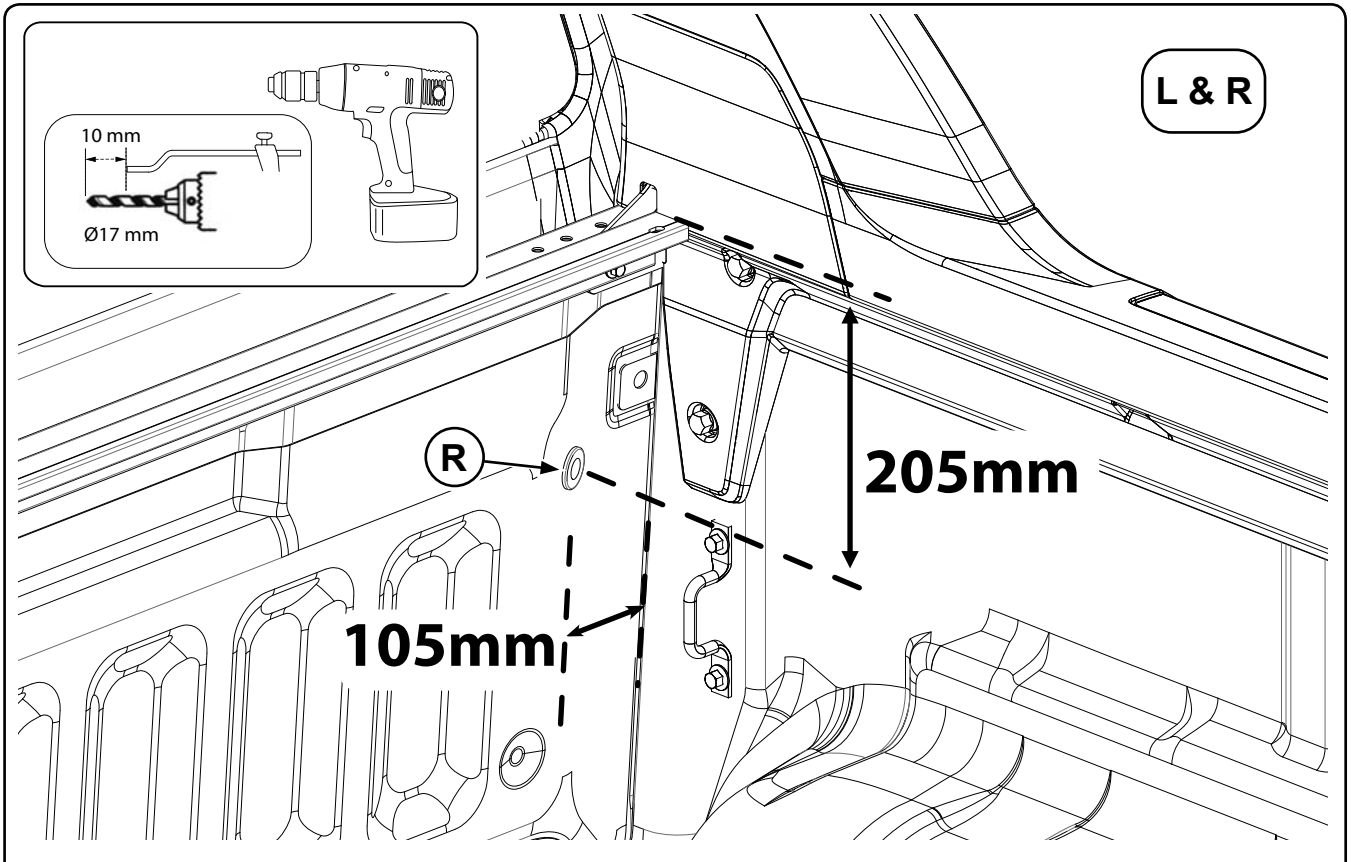



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

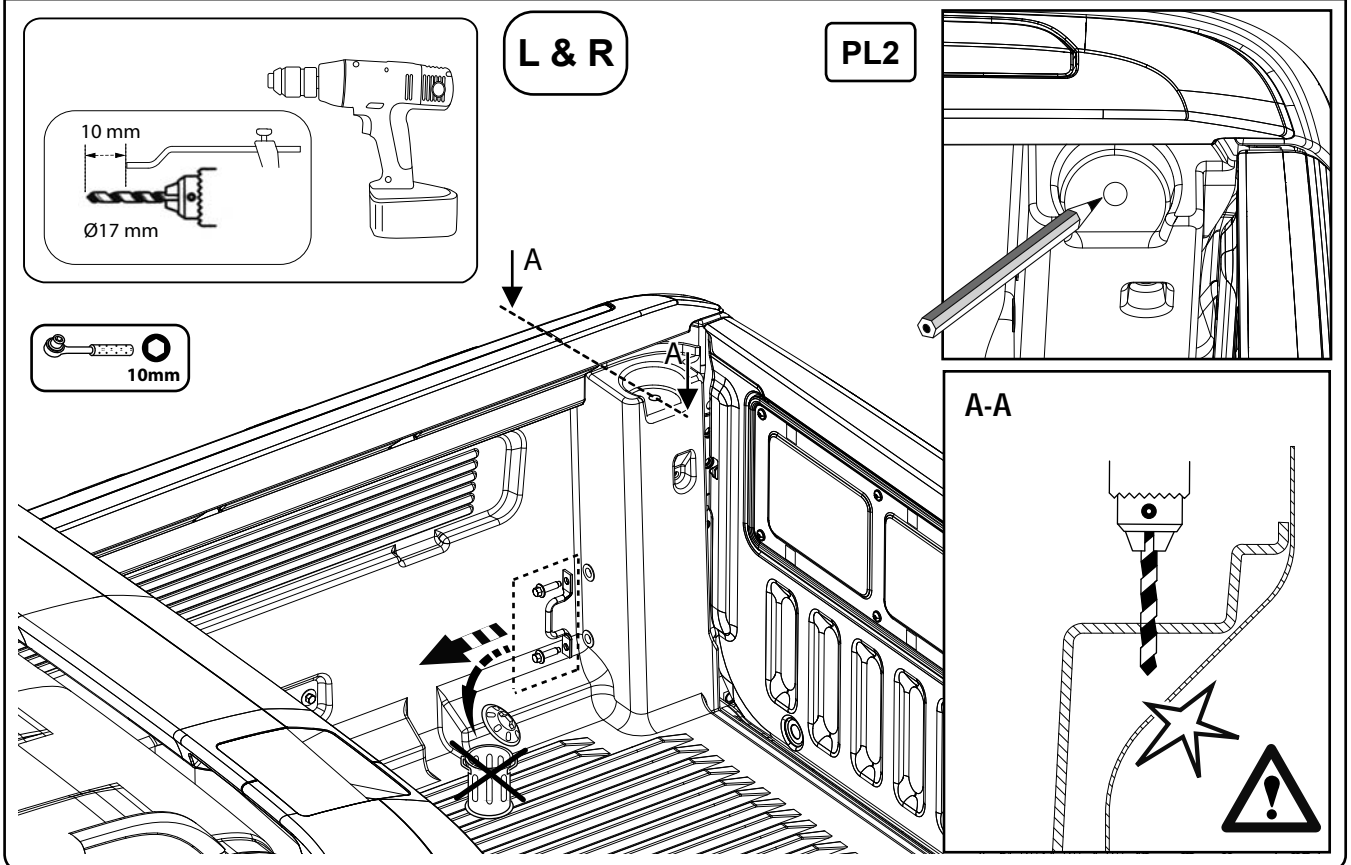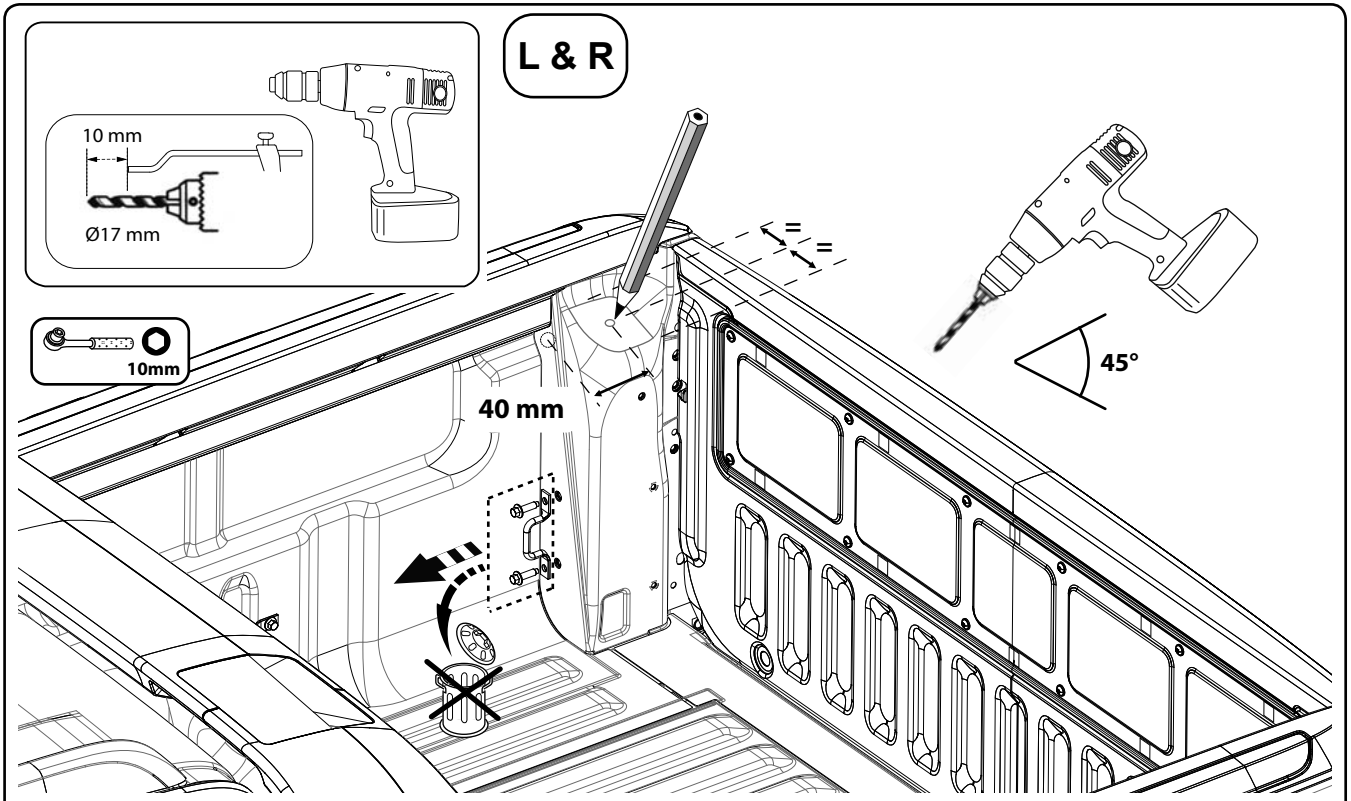

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

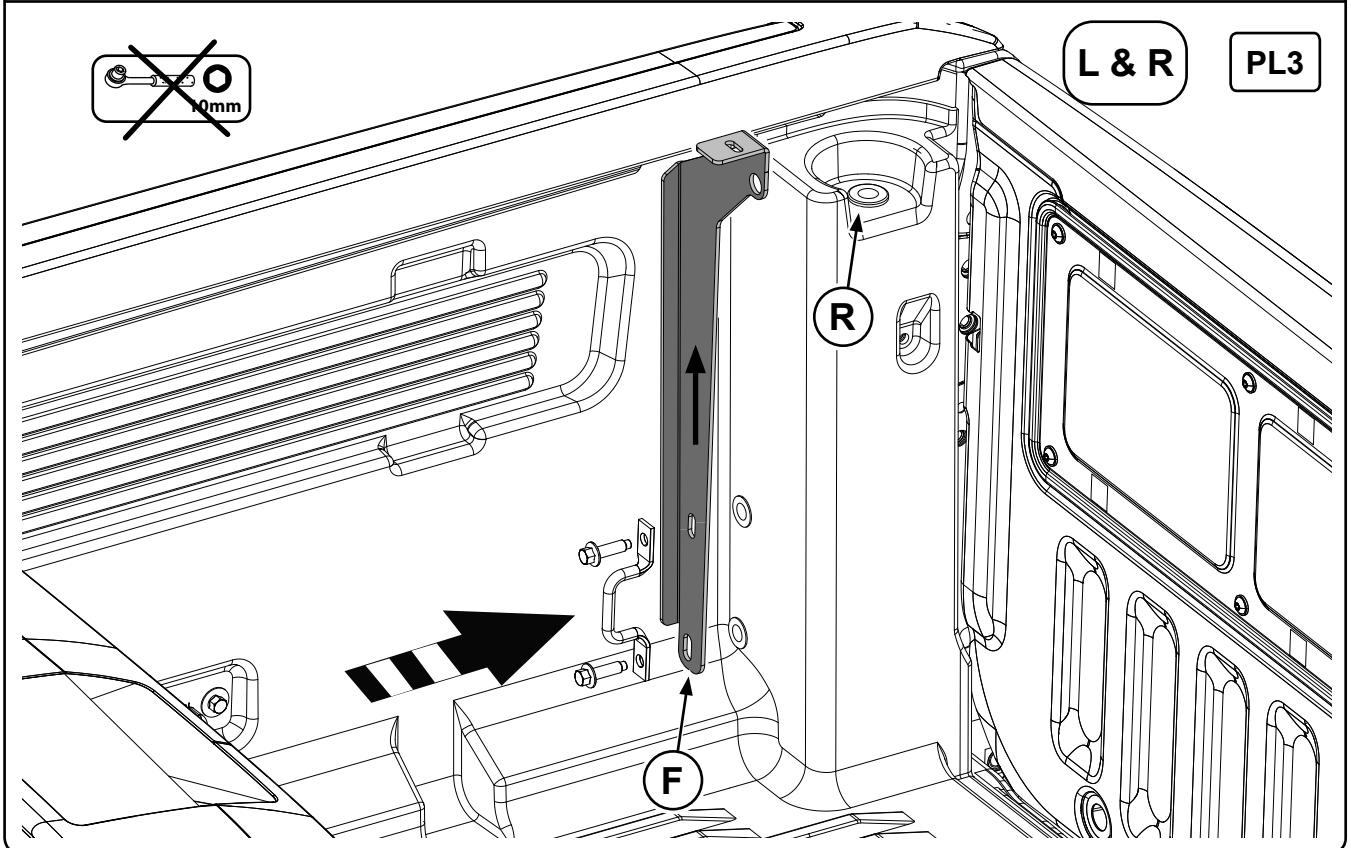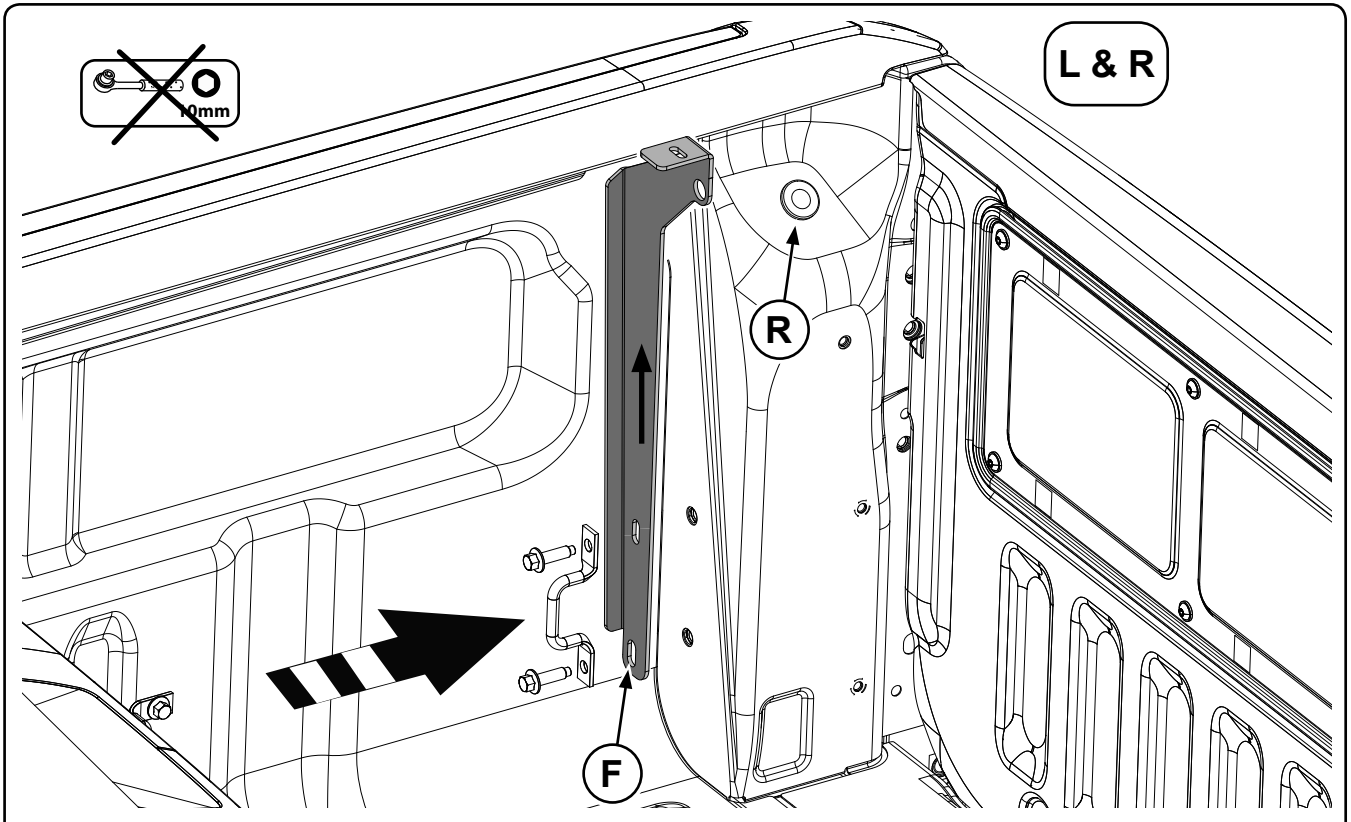

886 019

Issue: 01

24/10-2016

RR RC FO90 H04 / RR RC FO91 H04


Page 12/26

Phone: 03 9794 7033 Support: sales@redrockdirect.com.au website: www.redrockdirect.com.au

U:\Monteringsvejledninger\886 019.PDF


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

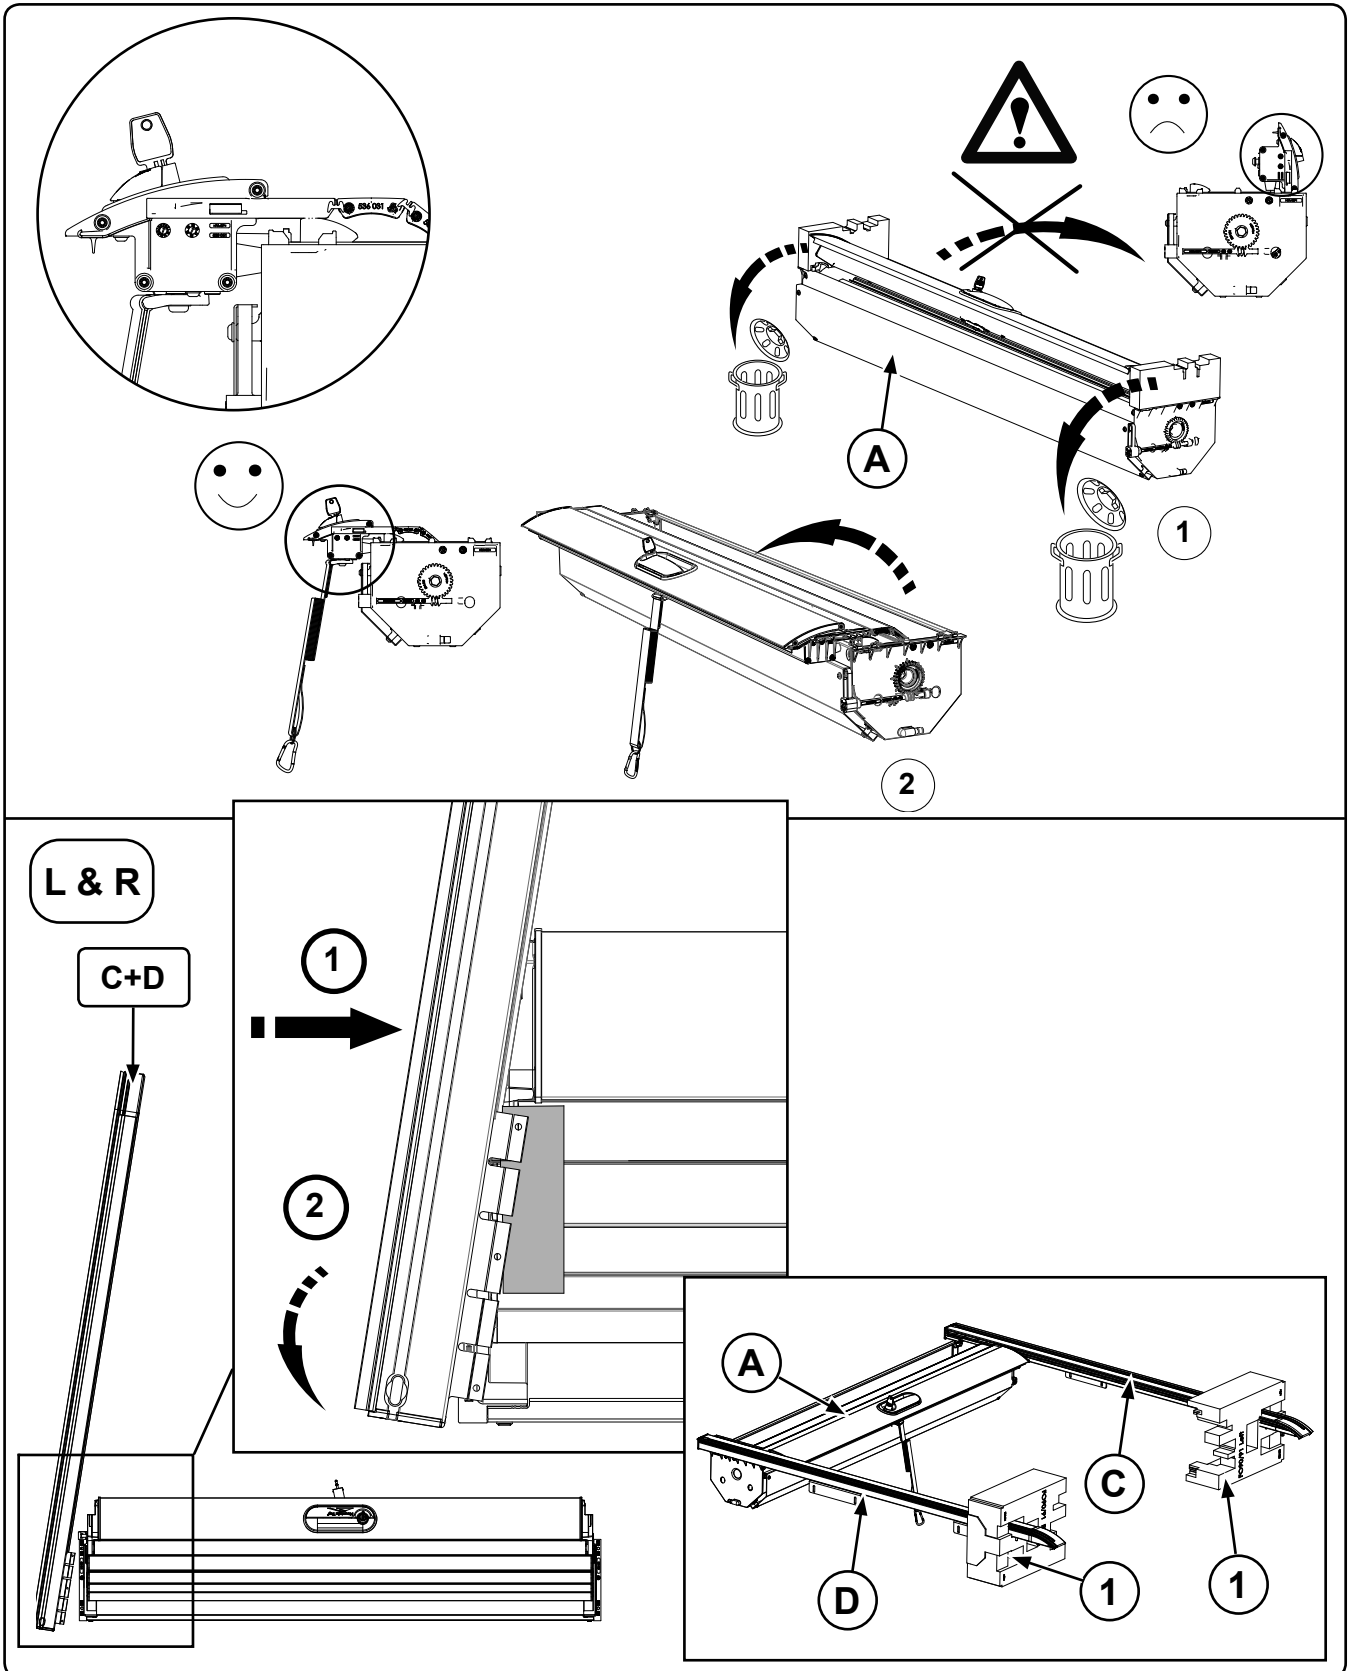



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

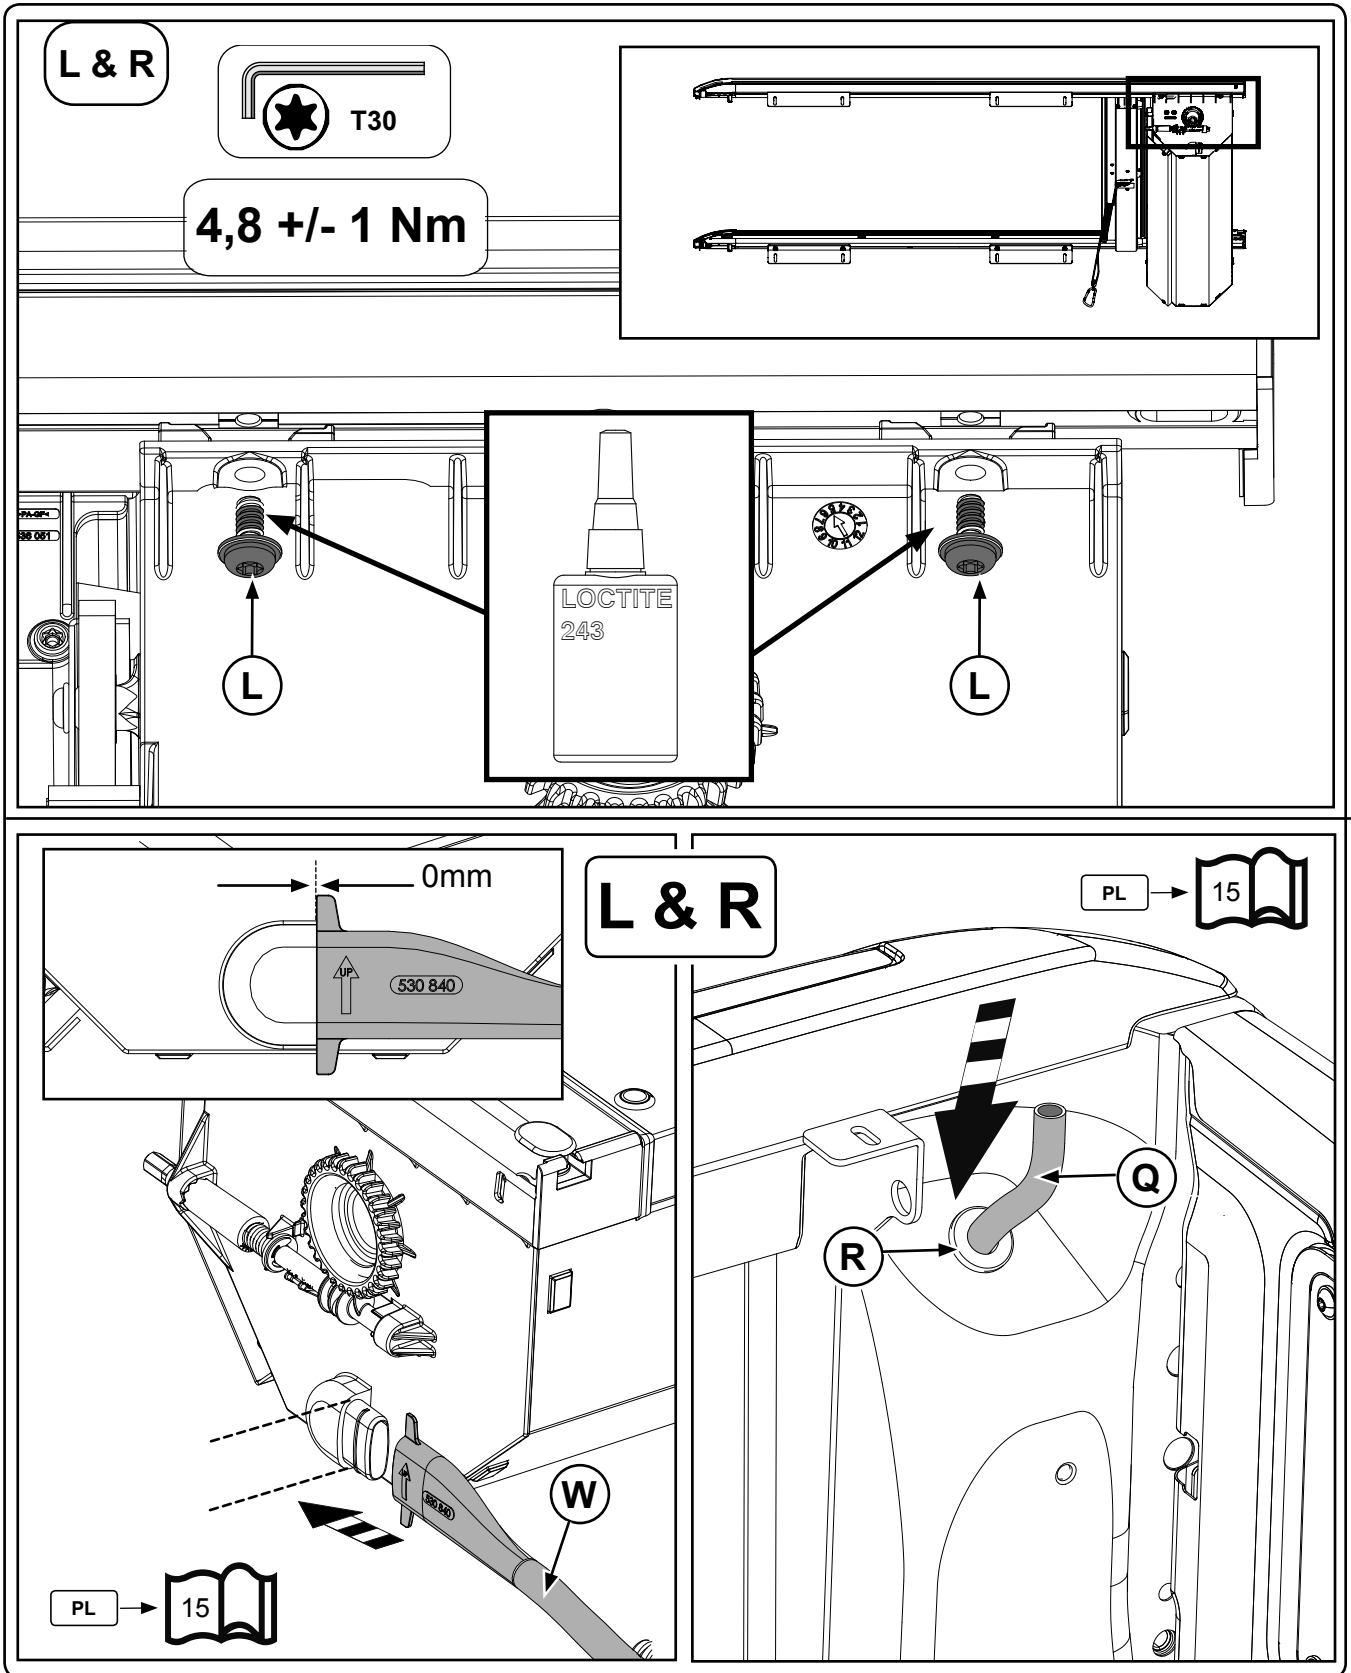



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

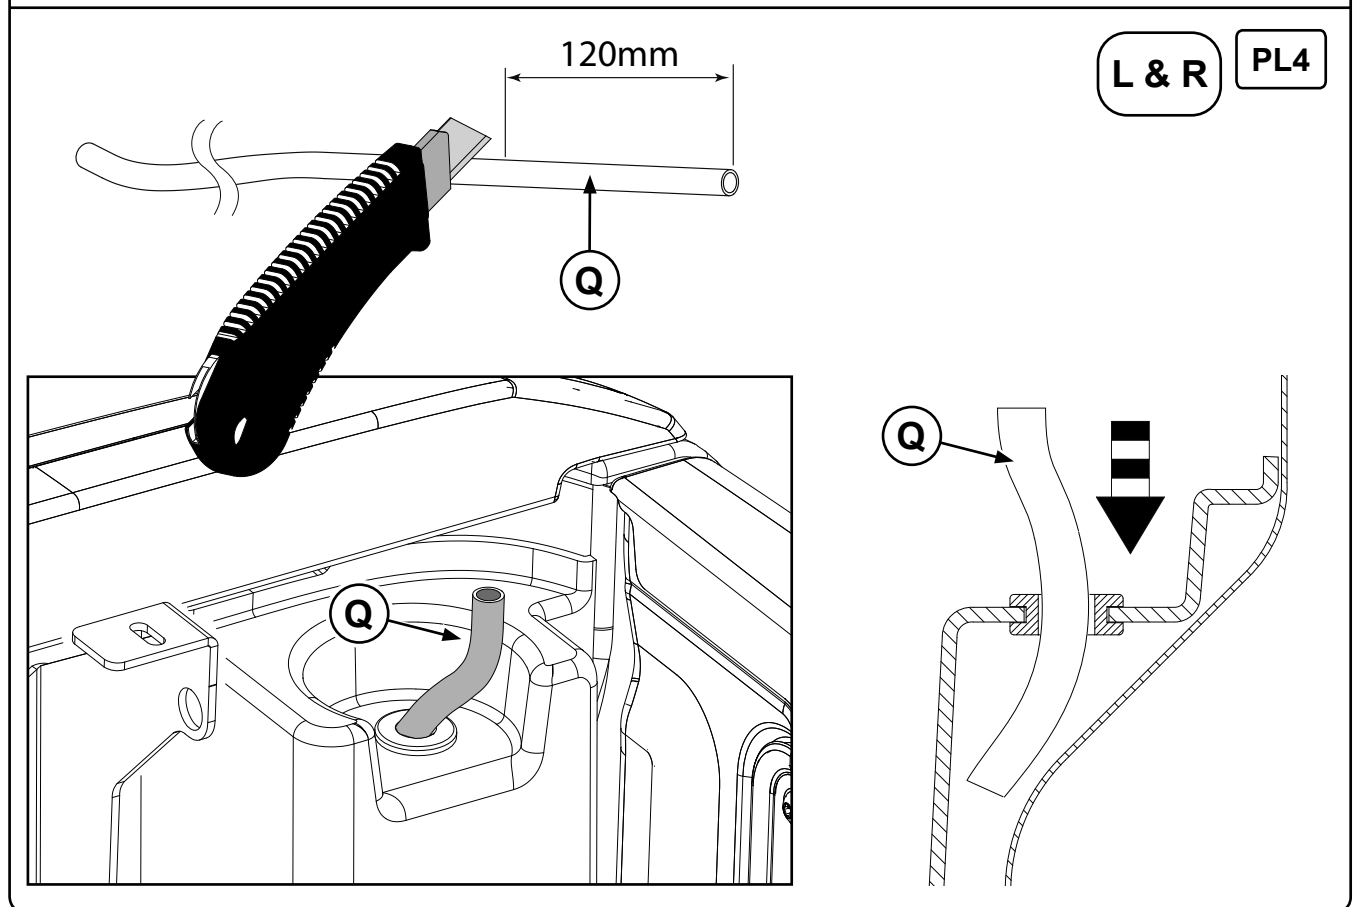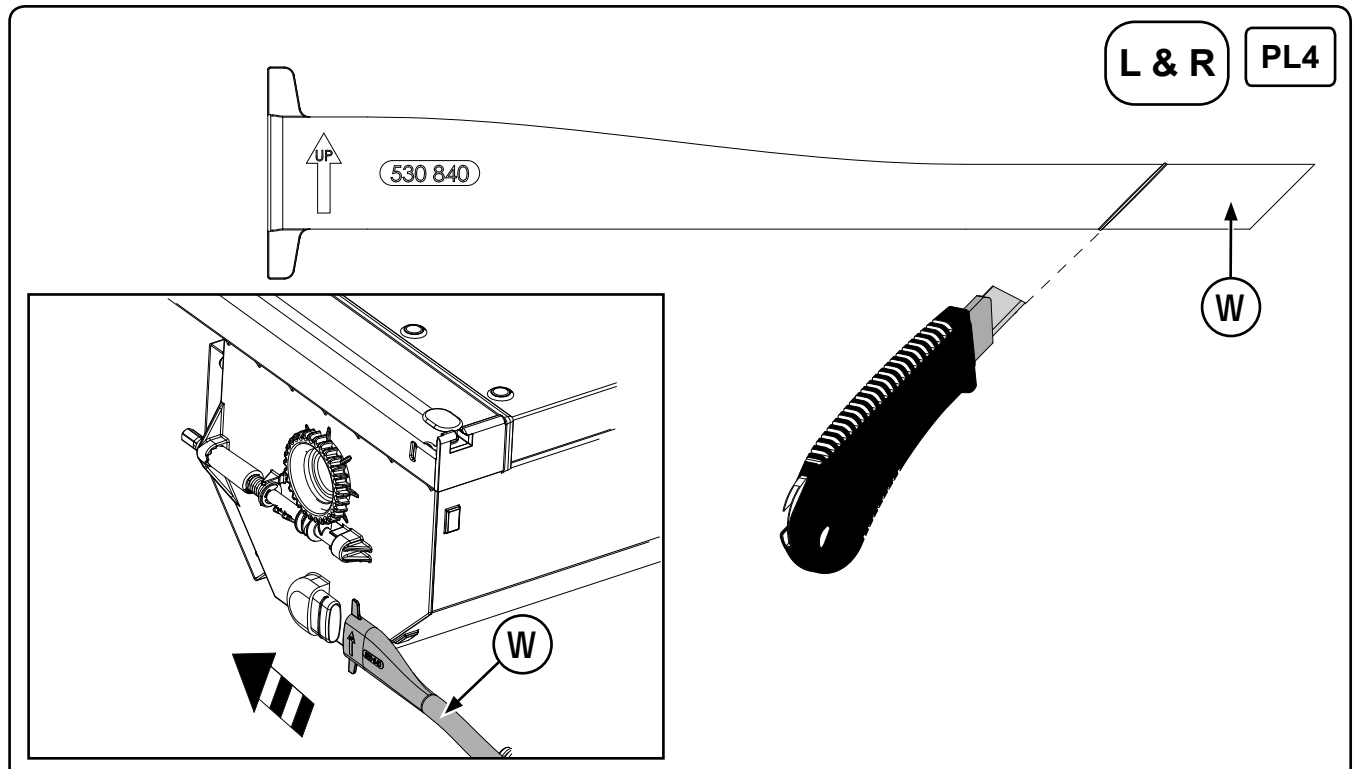


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

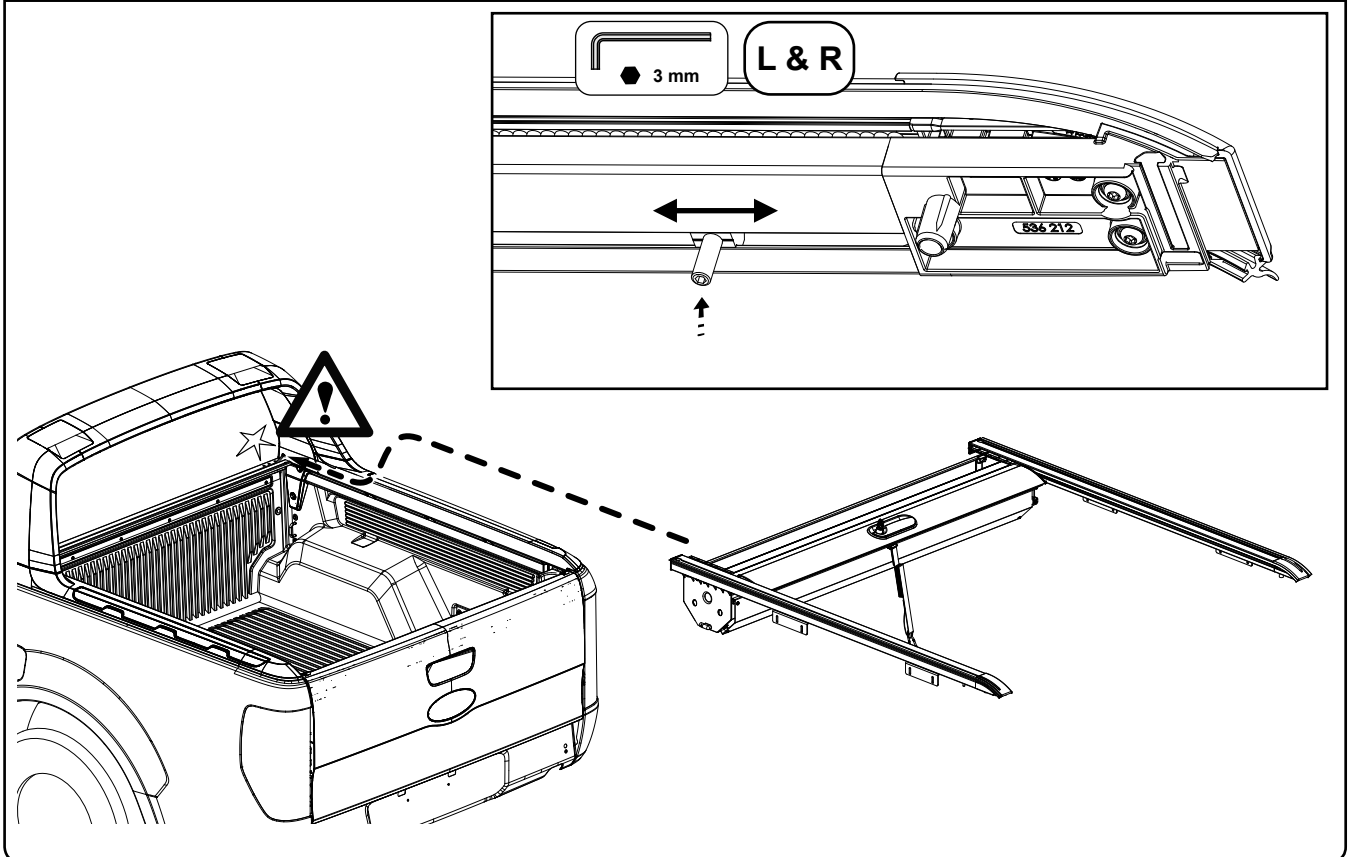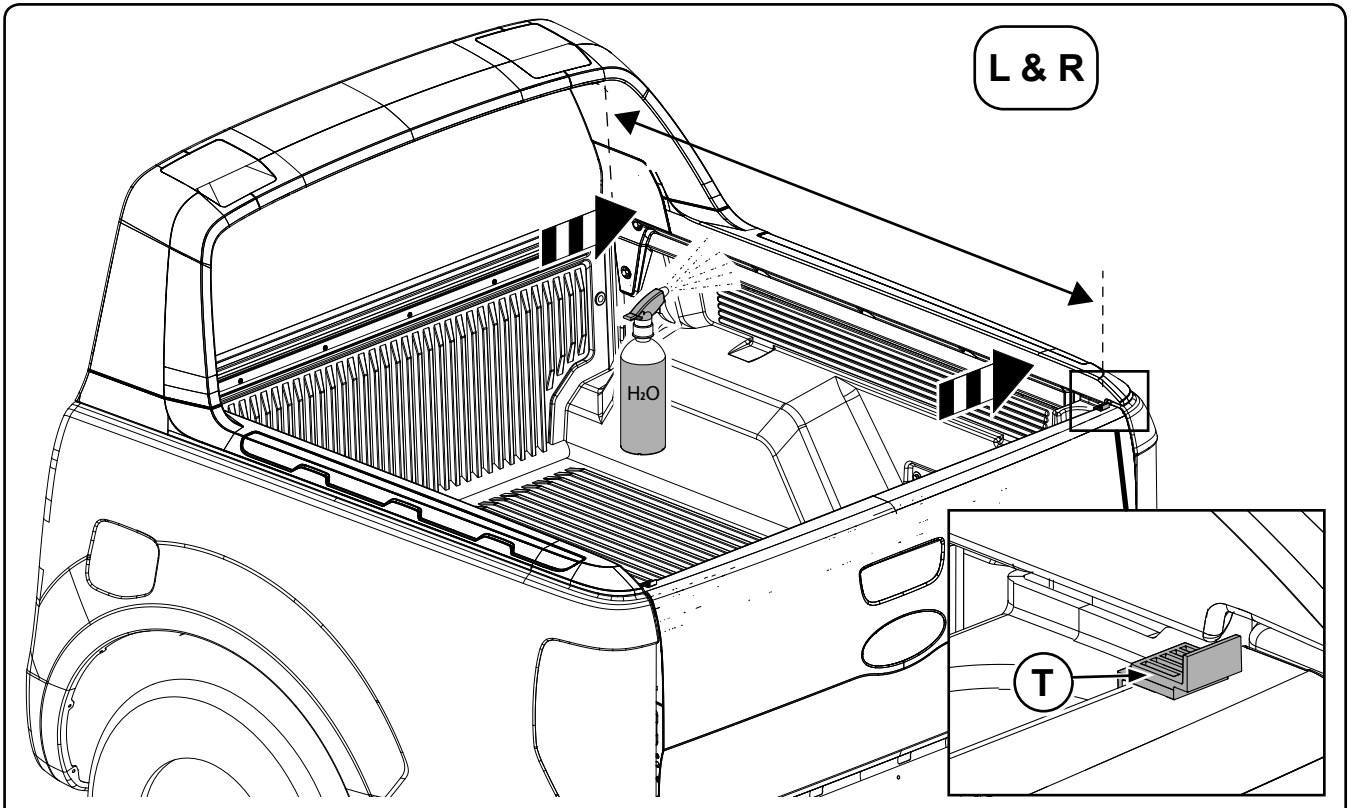


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

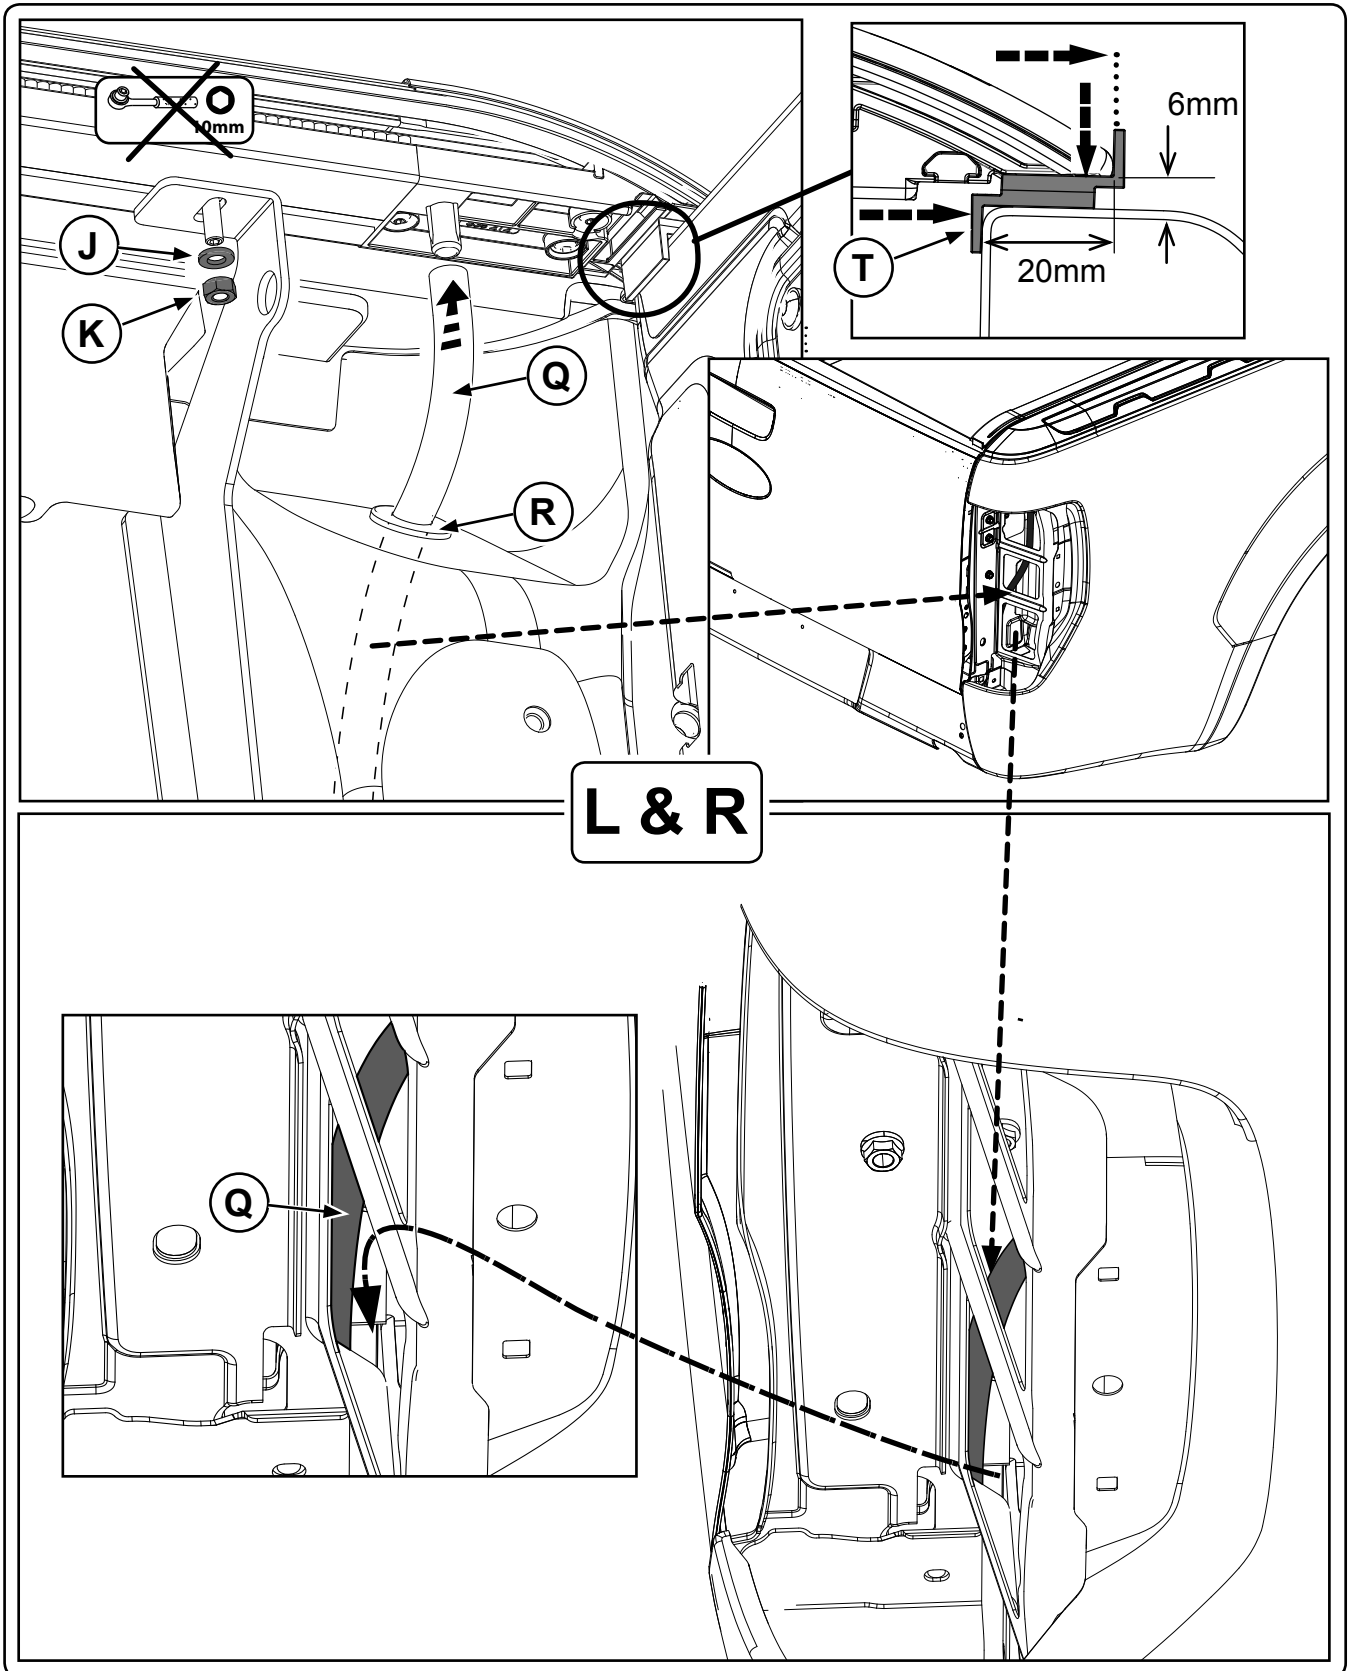



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

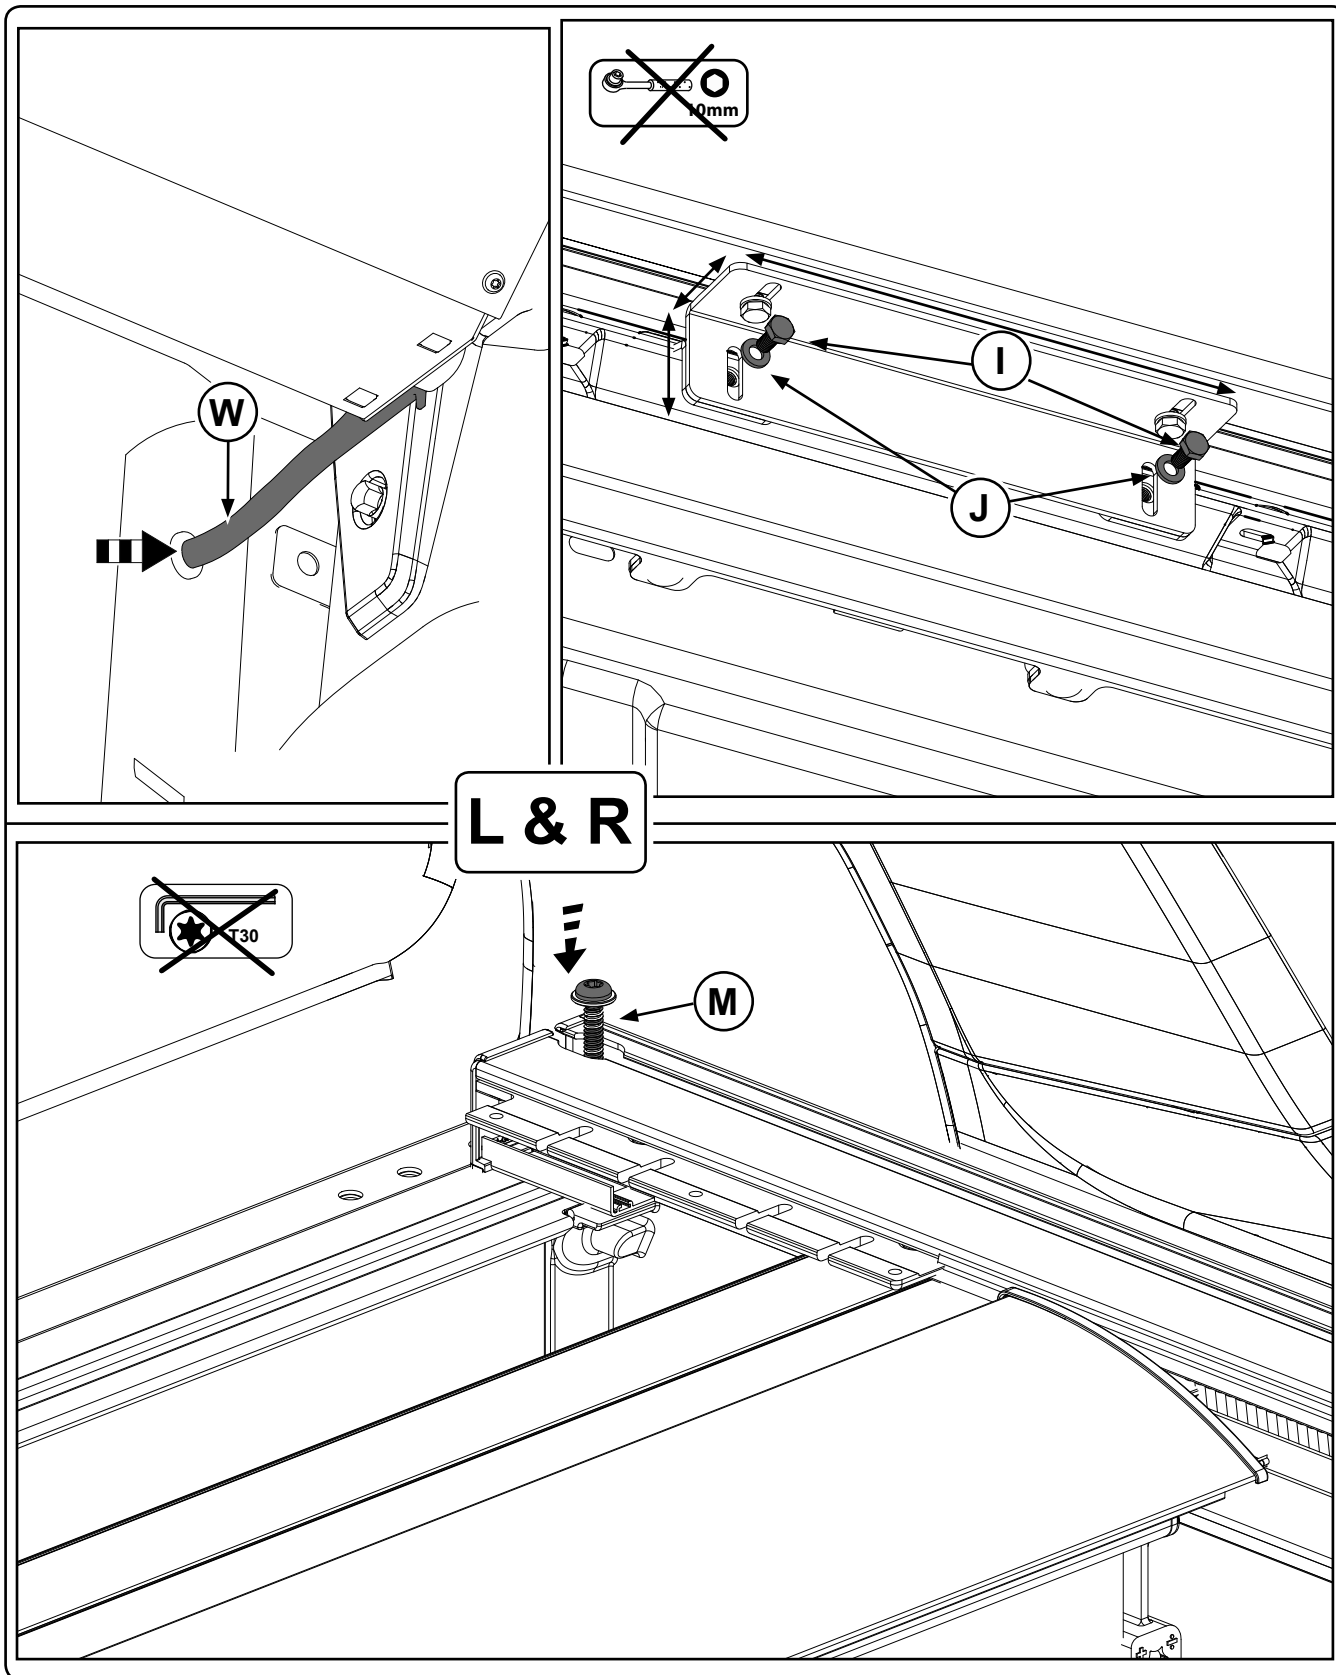


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

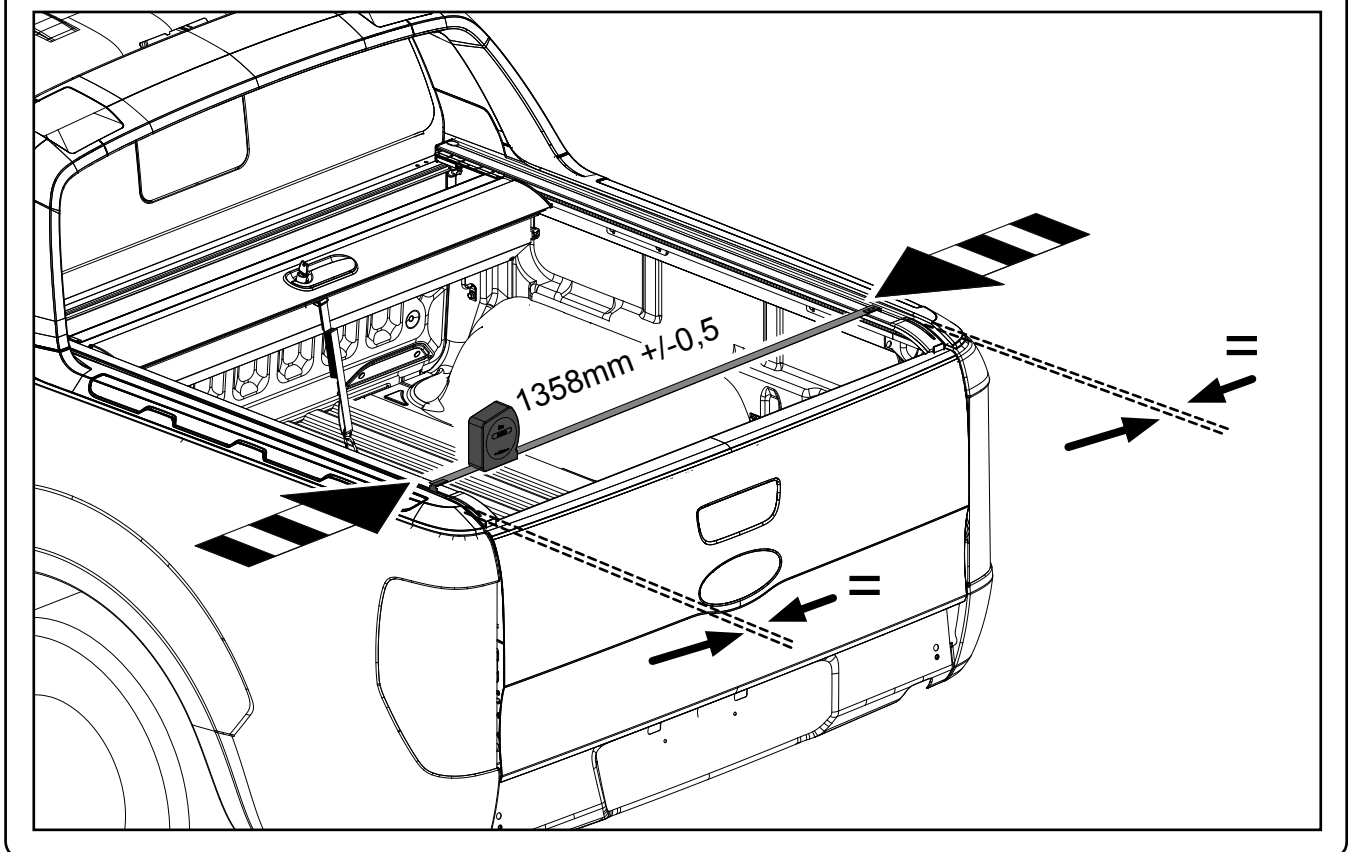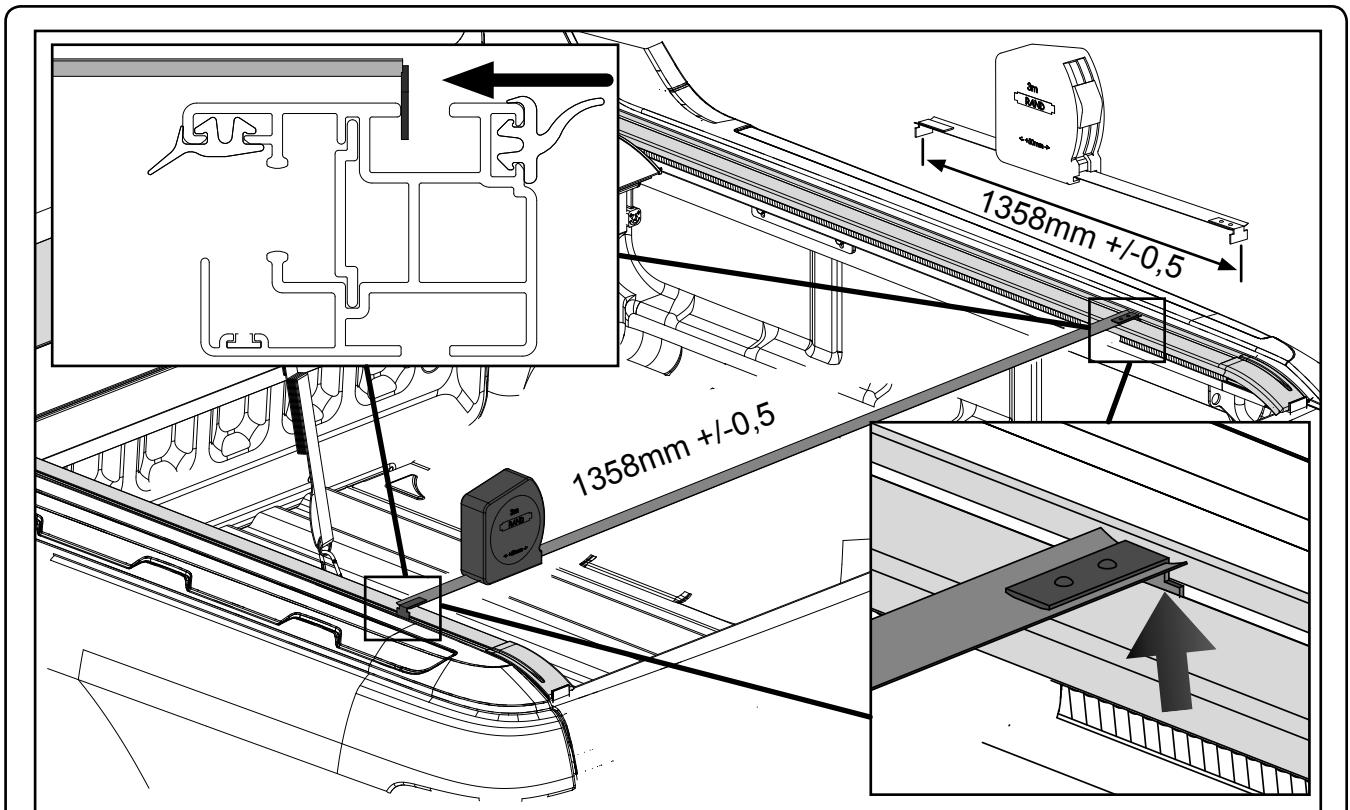



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

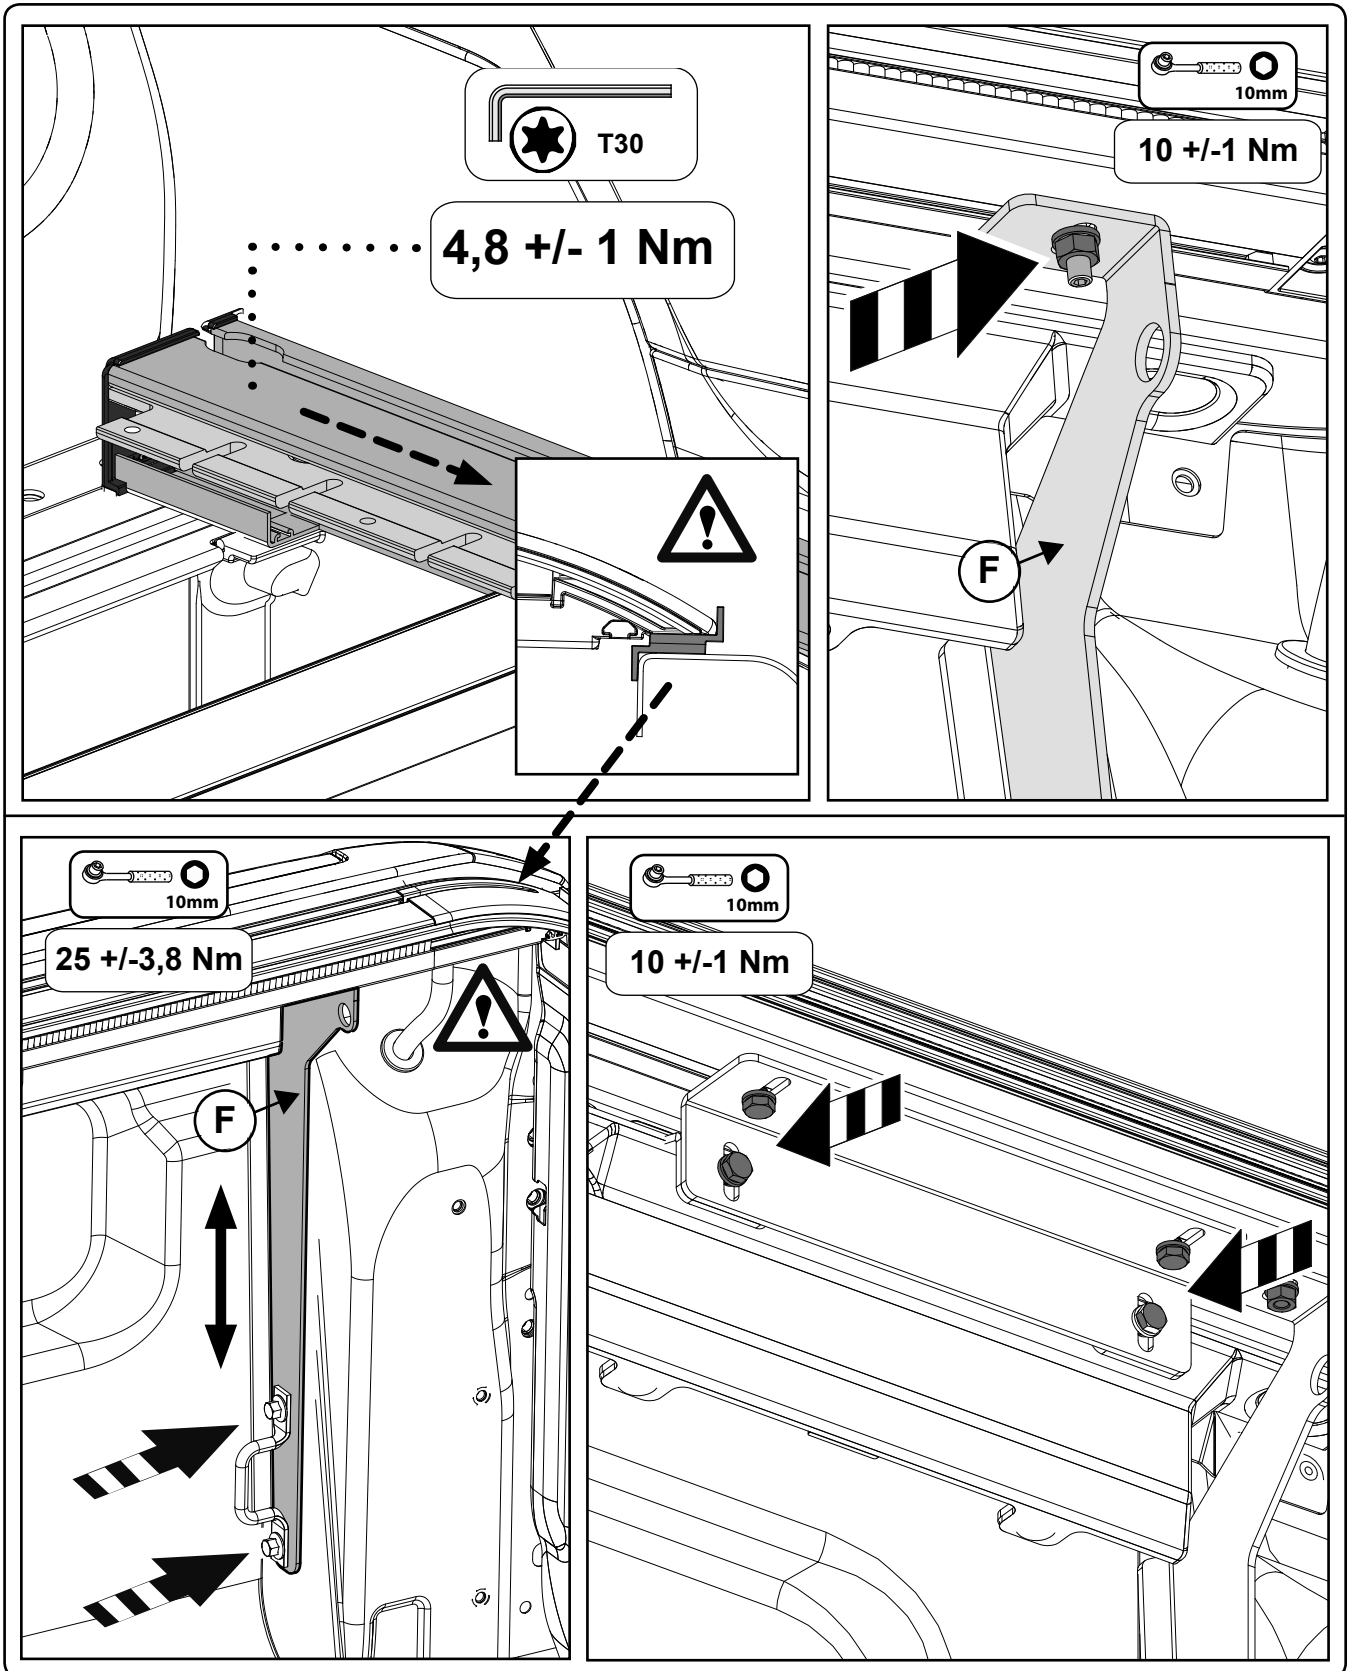



Ford Wildtrak

Red Rock Roll Cover
Installation instructions

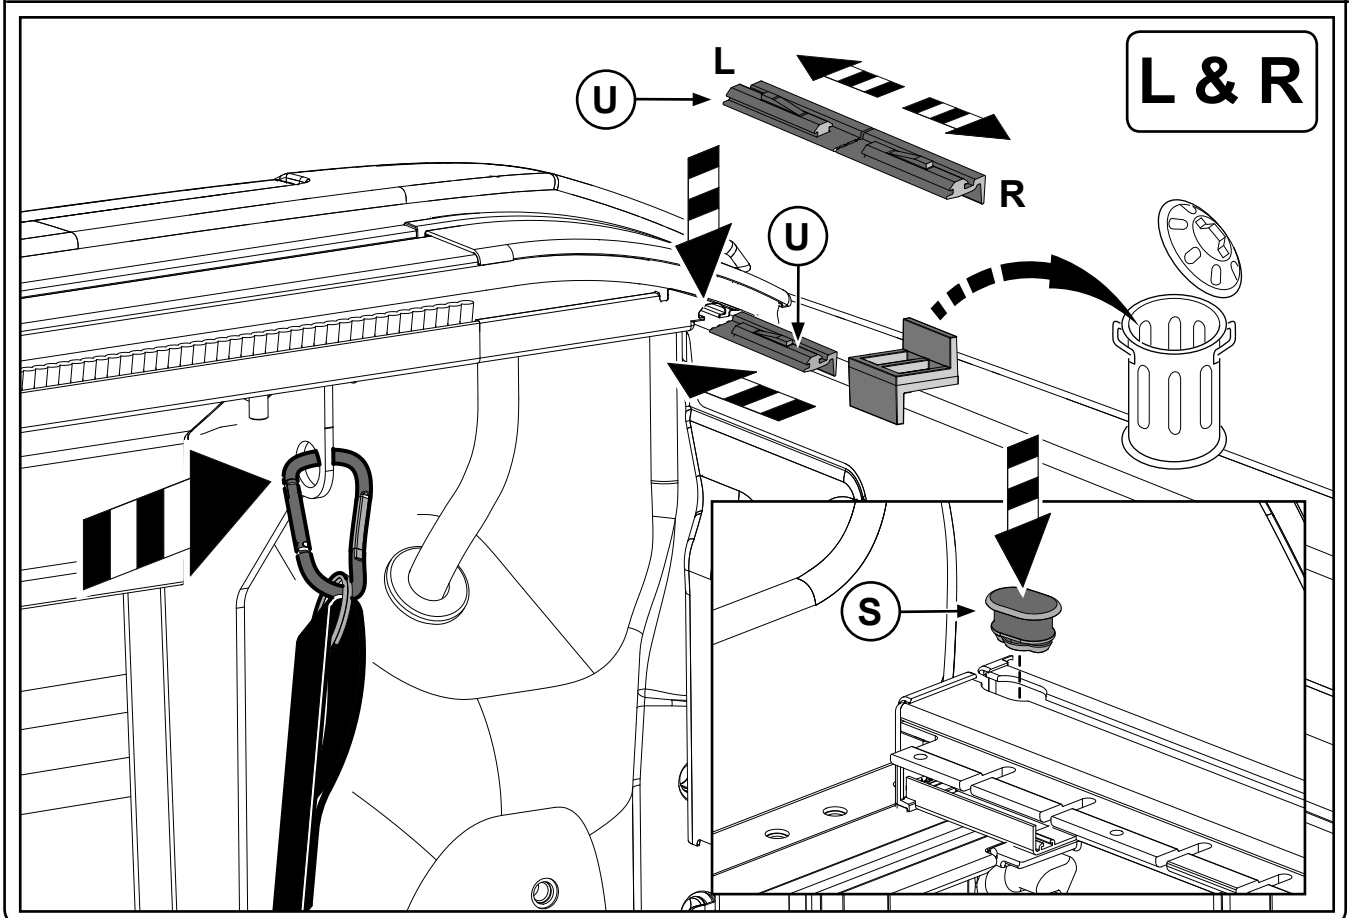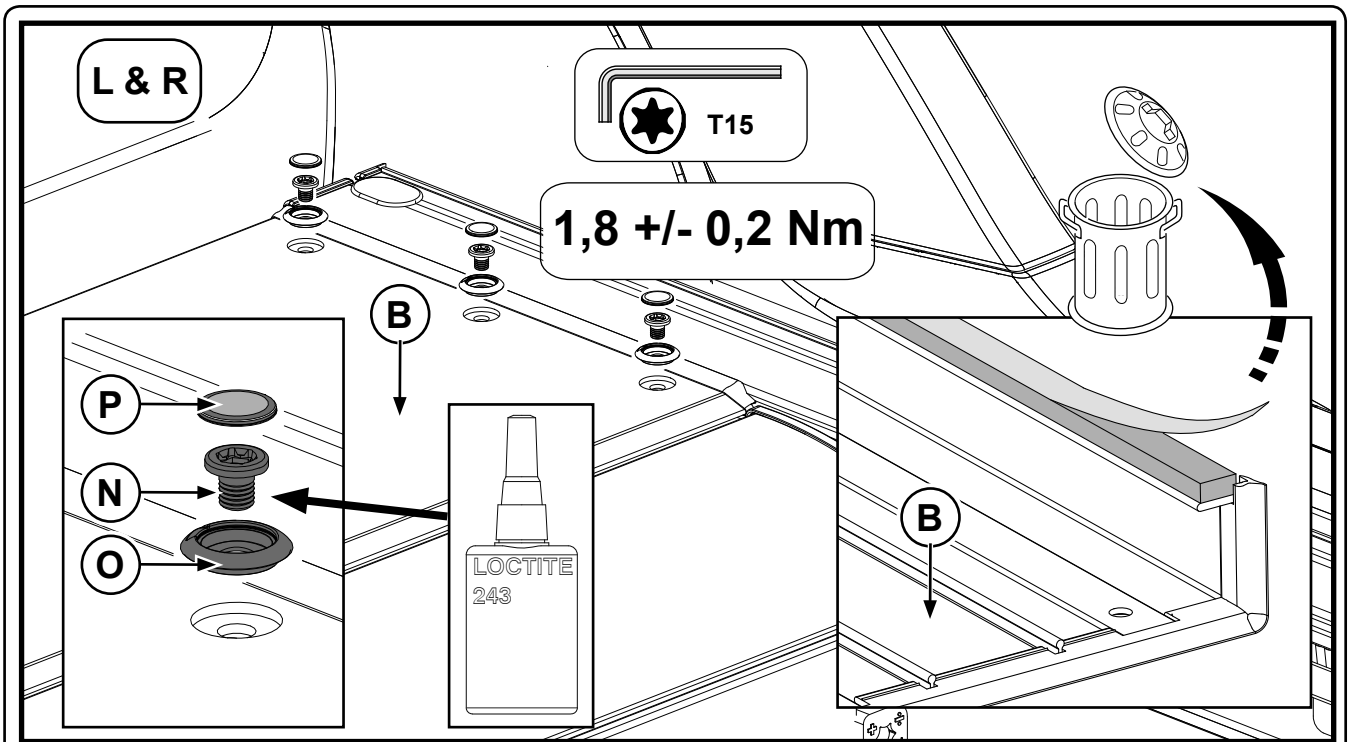


Ford Wildtrak

Red Rock Roll Cover
Installation instructions

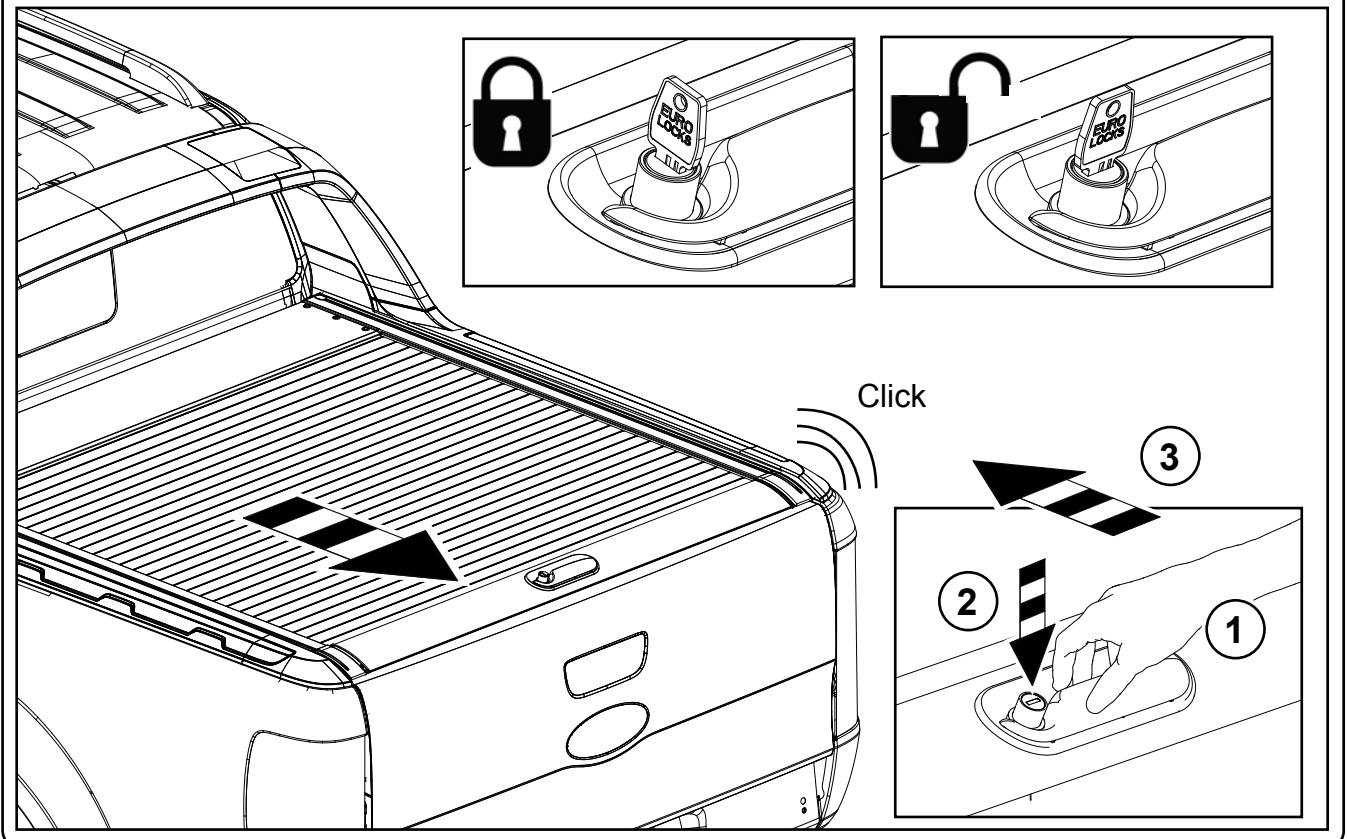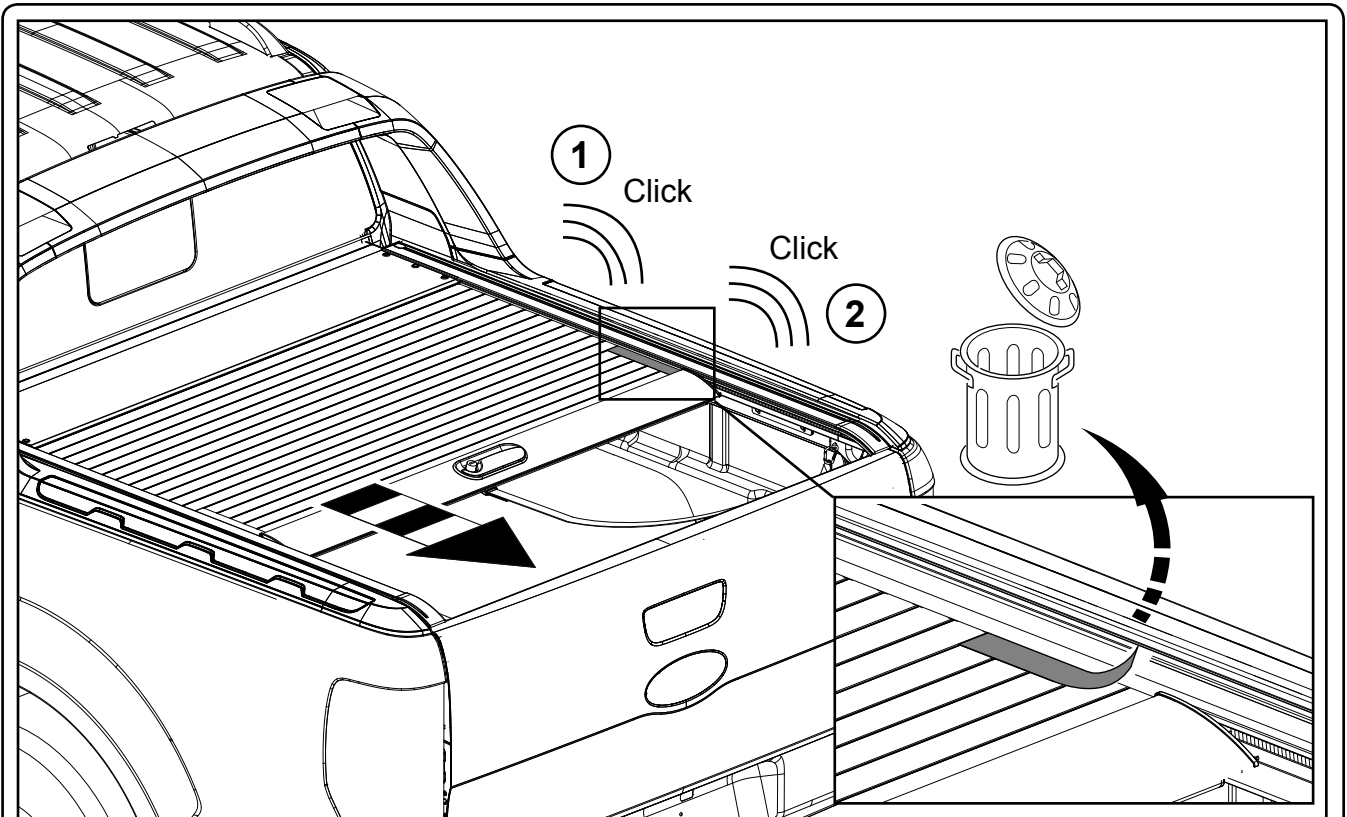




Ford Wildtrak

Red Rock Roll Cover
Installation instructions

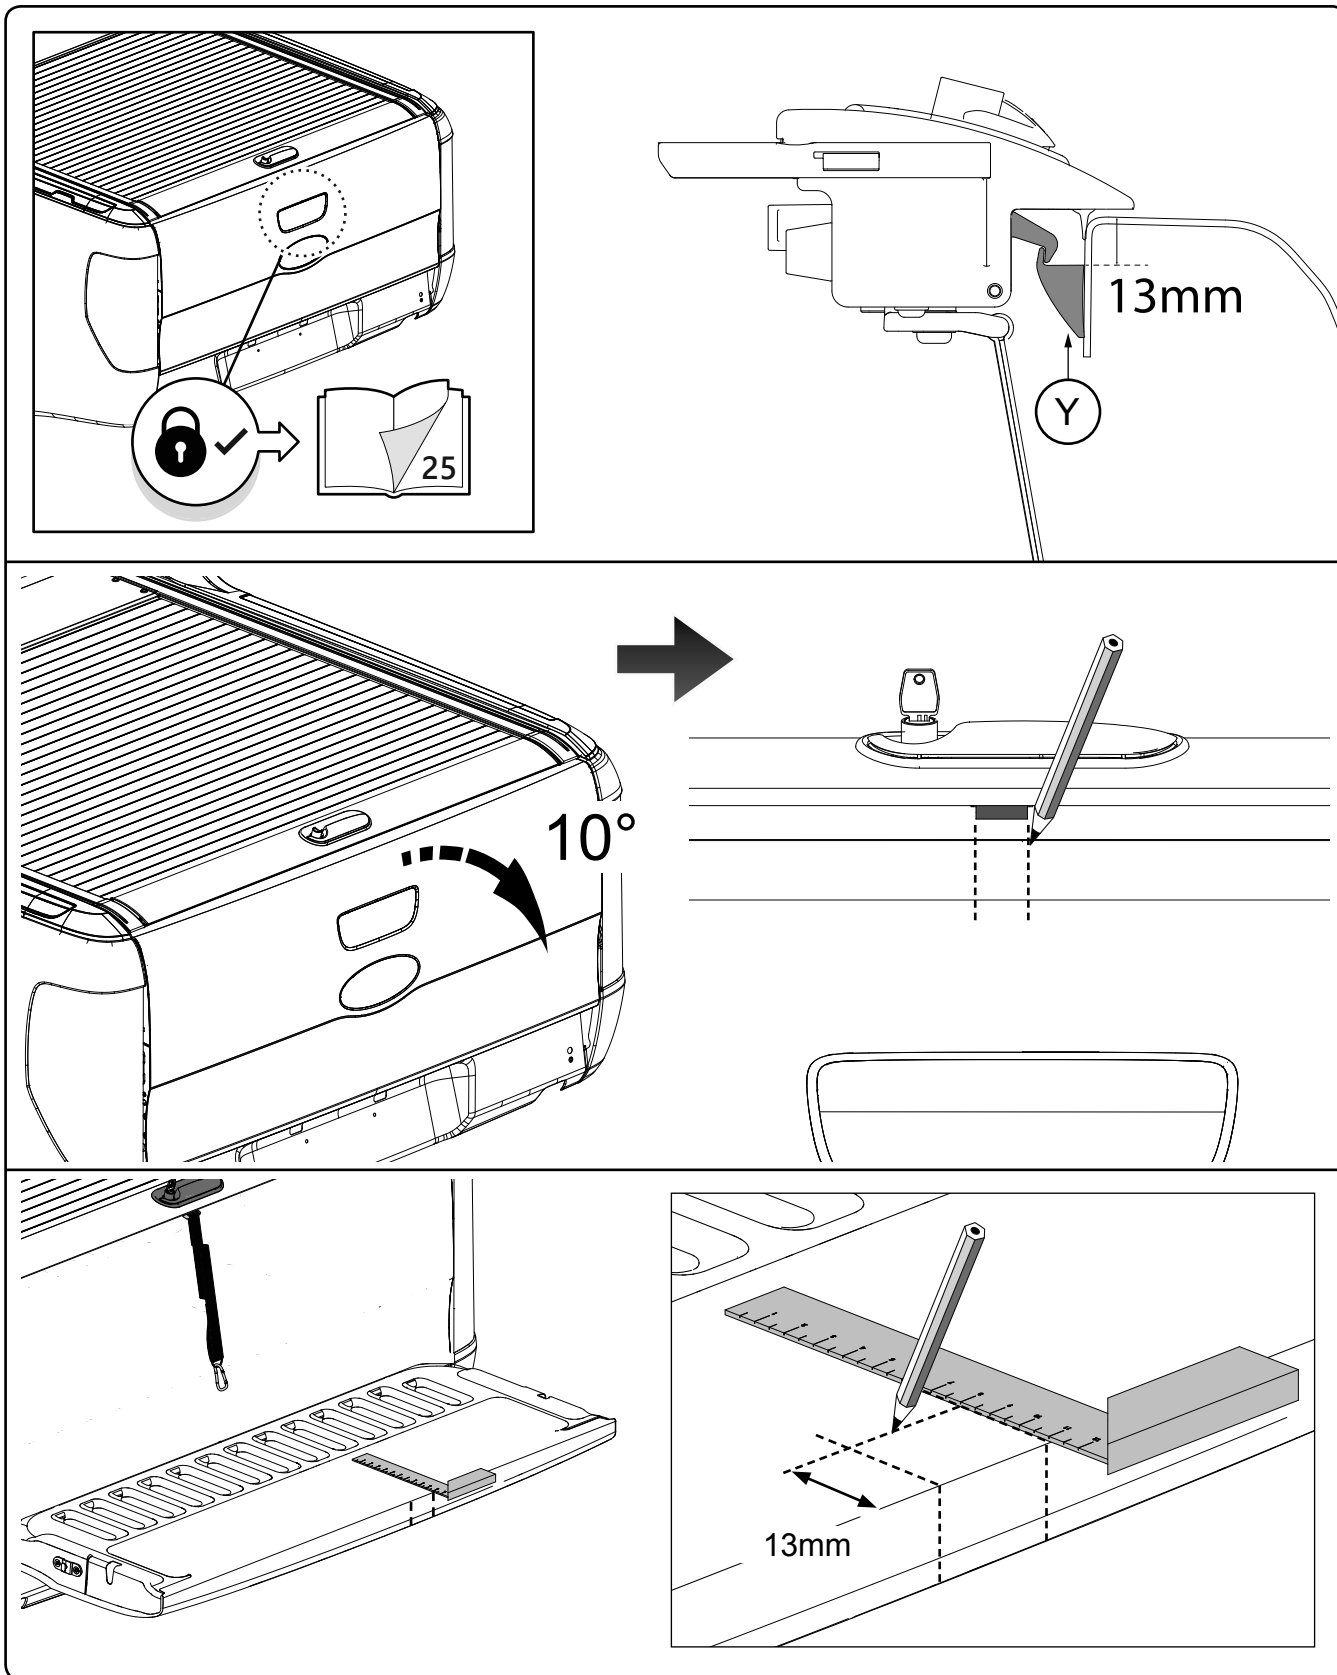





Ford Wildtrak

Red Rock Roll Cover
Installation instructions

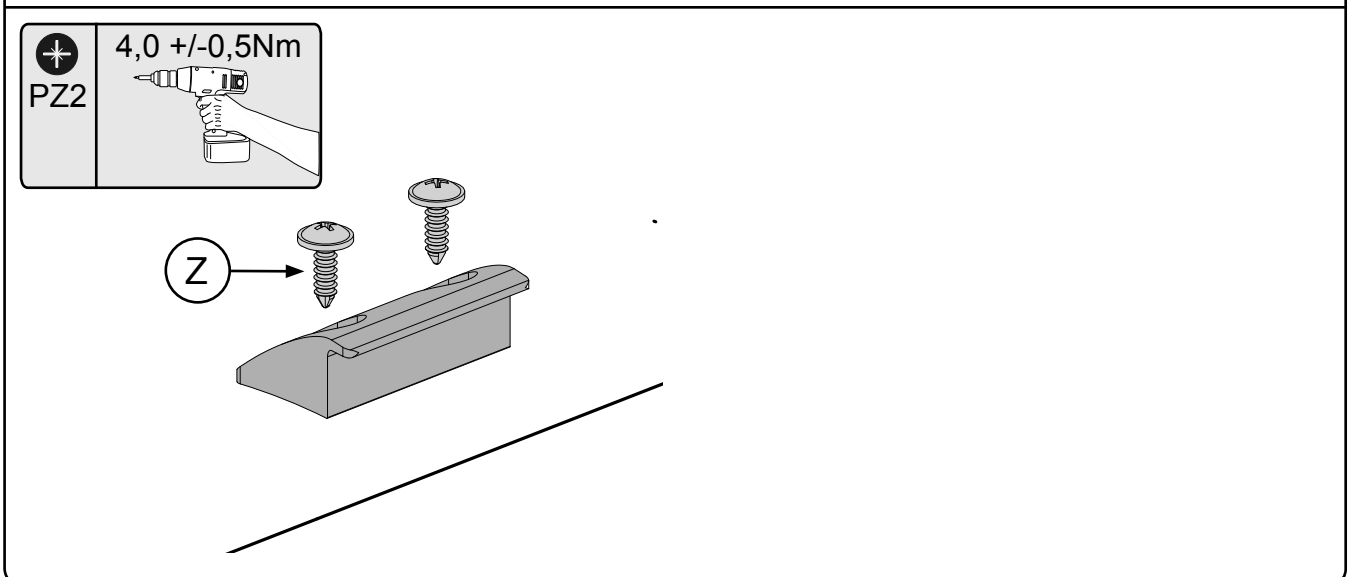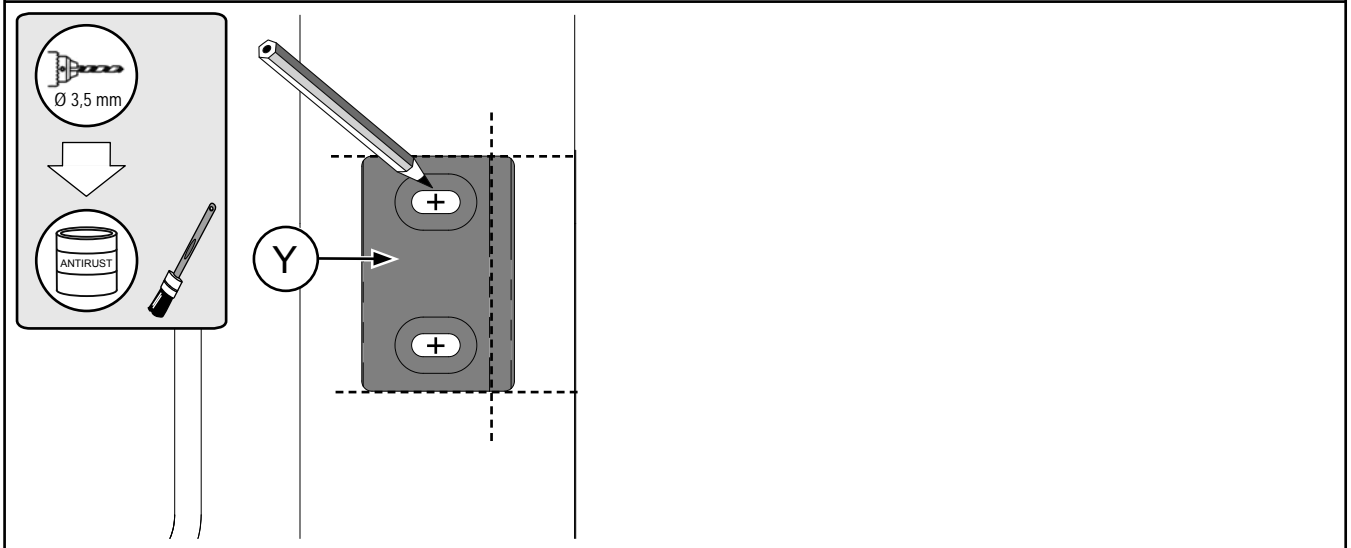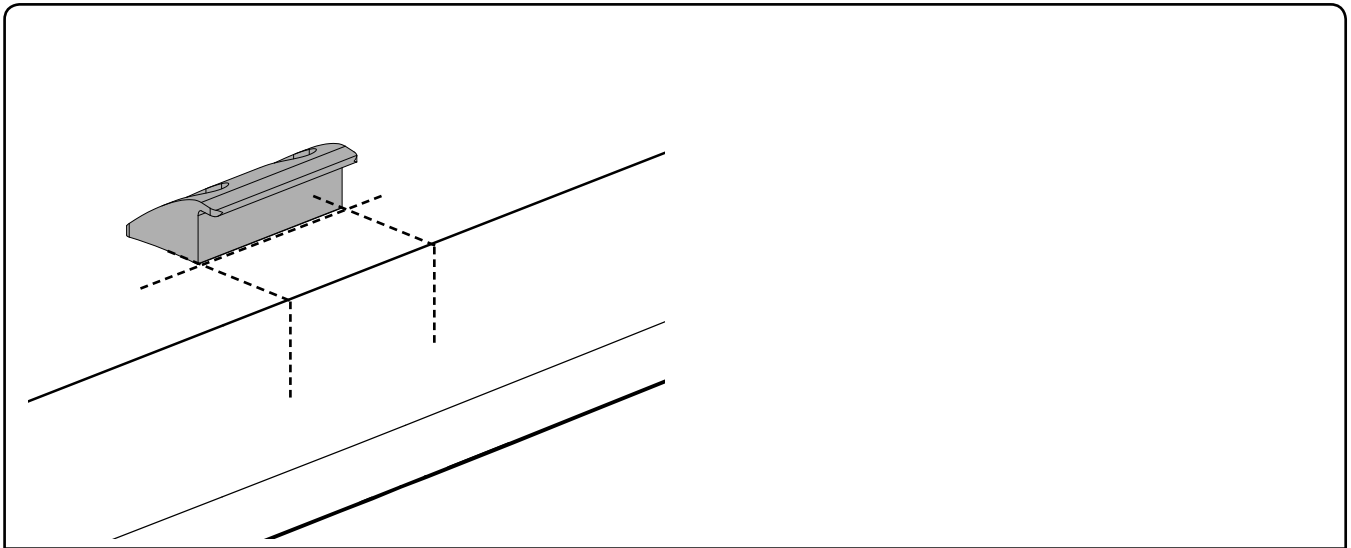

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

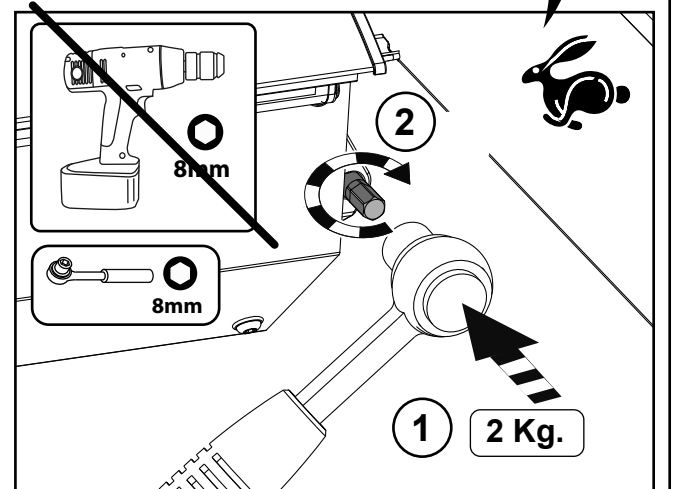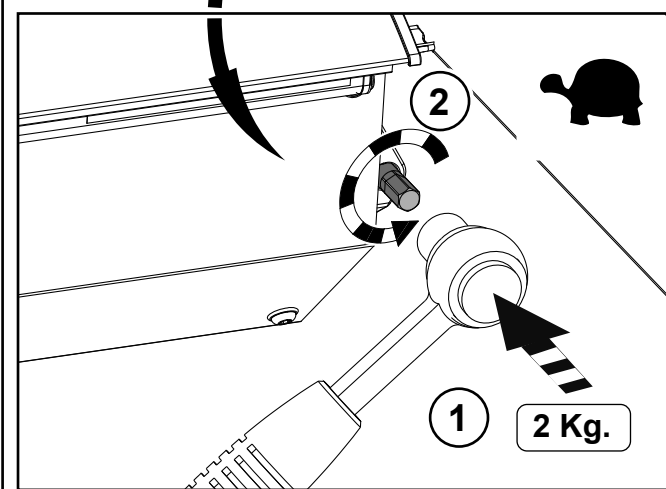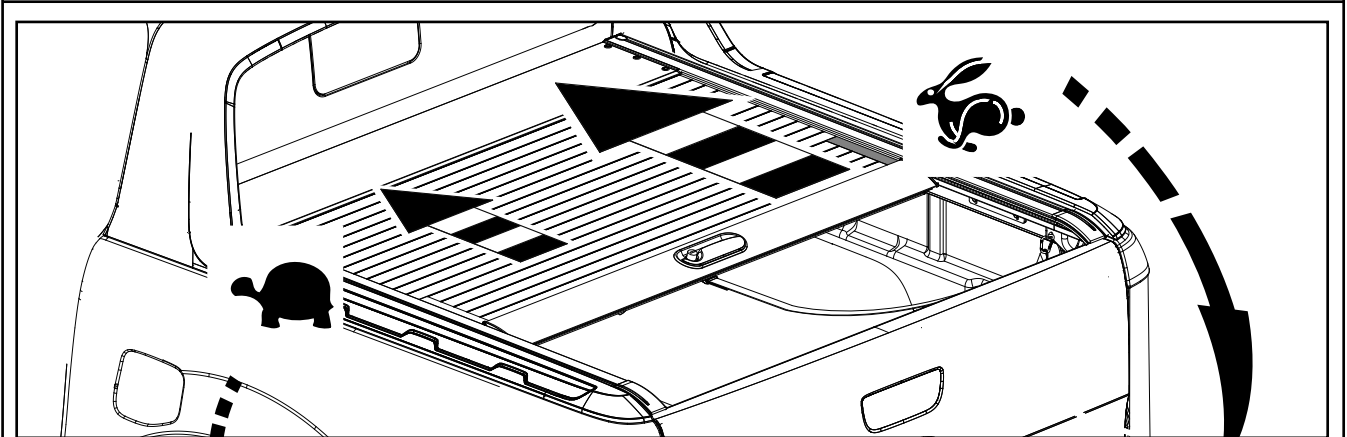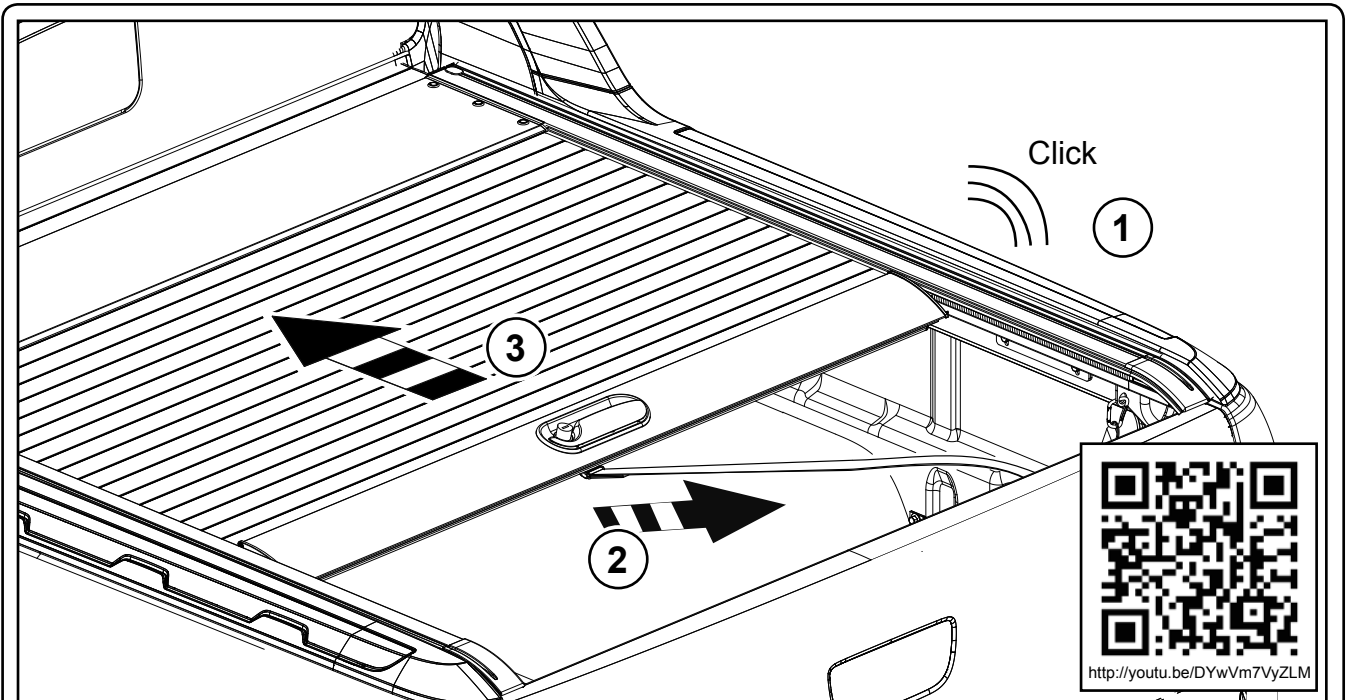

Ford Wildtrak

Red Rock Roll Cover
Installation instructions

