

# Mountain Top® Roll

Installation manual




DOWNLOAD PDF




Parts

**A**

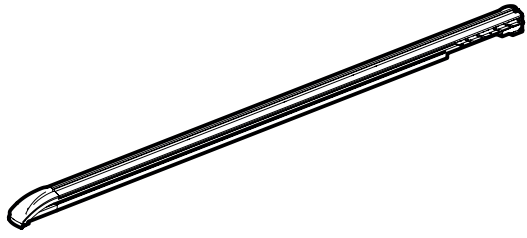


x 1

**B**

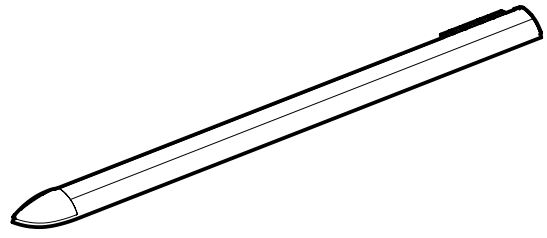


x 1

**C**

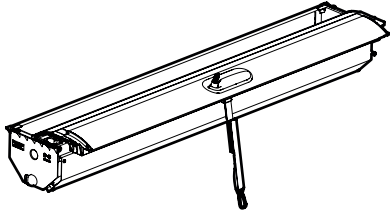

x 1

**D**

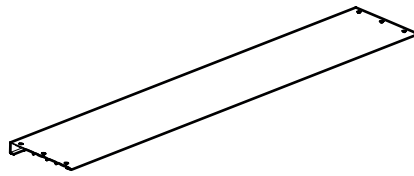

x 1

**E**




x 1




Kit

**F**

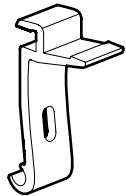



x 6

**G**

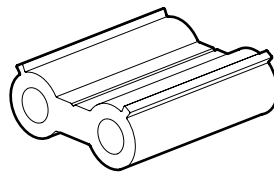


x 6

**H**

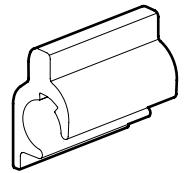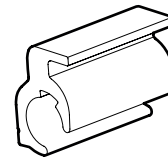


x 6

**I**

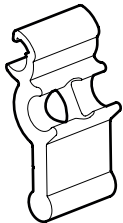


x 6

**J**

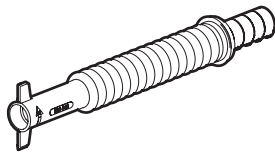

x 2

**K**

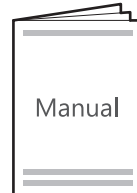

x 1

**L**




x 1



Kit

**M**



x 24

**N**




x 6

**O**




x 6

**P**

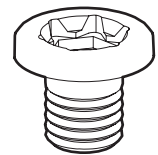


x 6

**Q**

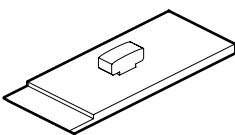


x 2

**R**

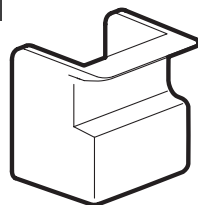


x 2

**S**



x 1

**T**

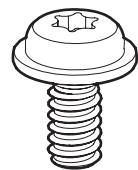


x 4




Kit # 824 087

**U**

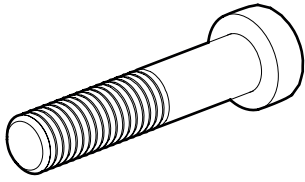

x 6

**V**

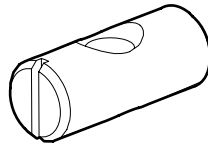

x 6


**W**




x 6




Tools and materials needed

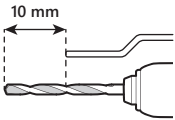

Ø 24 mm

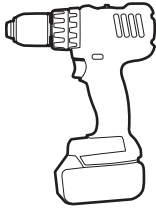







1 - 25 Nm

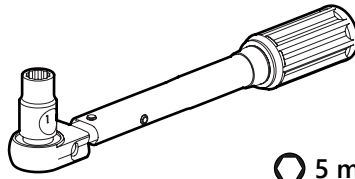

○ 5 mm  
★ T15








Rust protection  
Rostschutzmittel  
Anti-rouille  
Anti roest

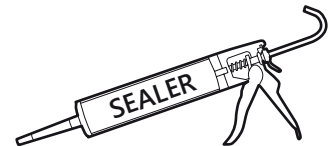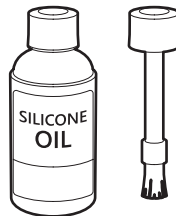
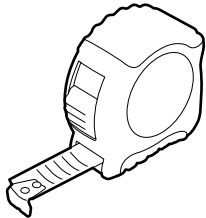




1




# Applying rust protection

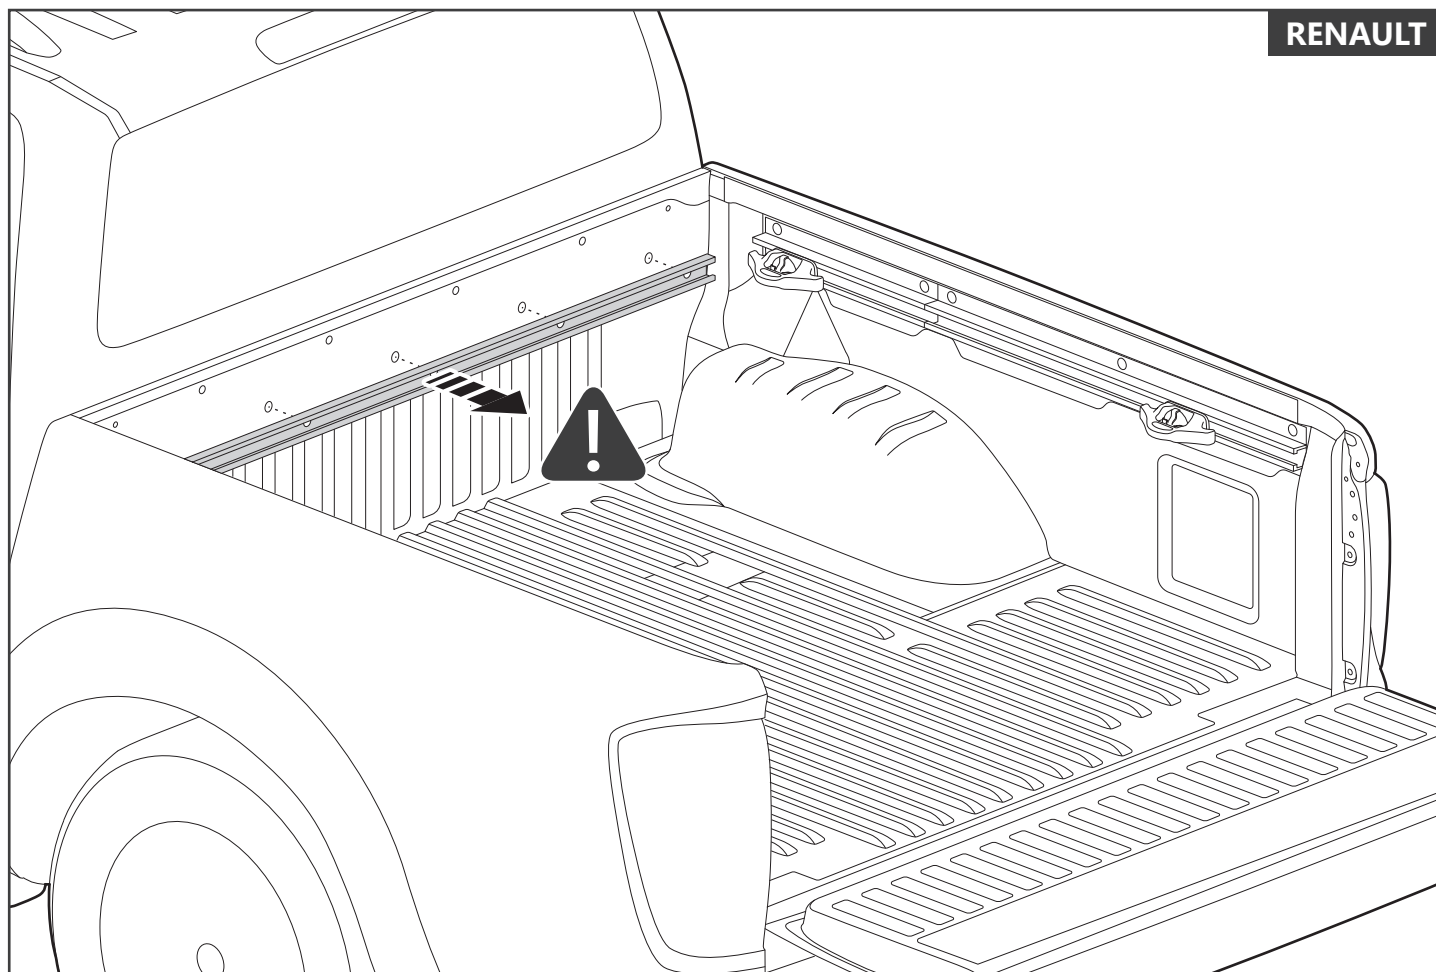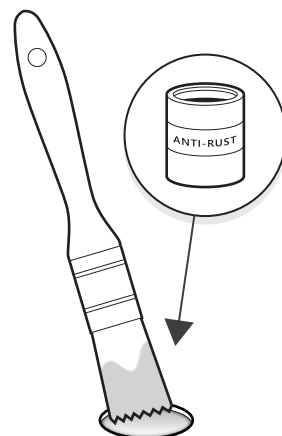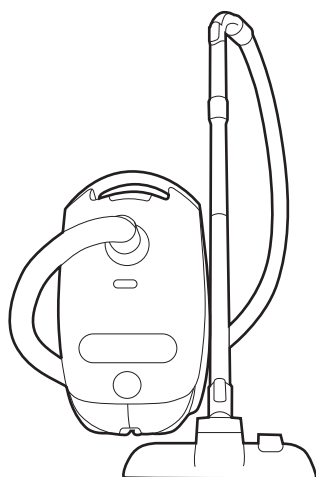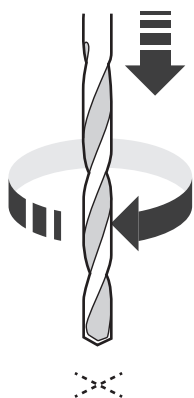


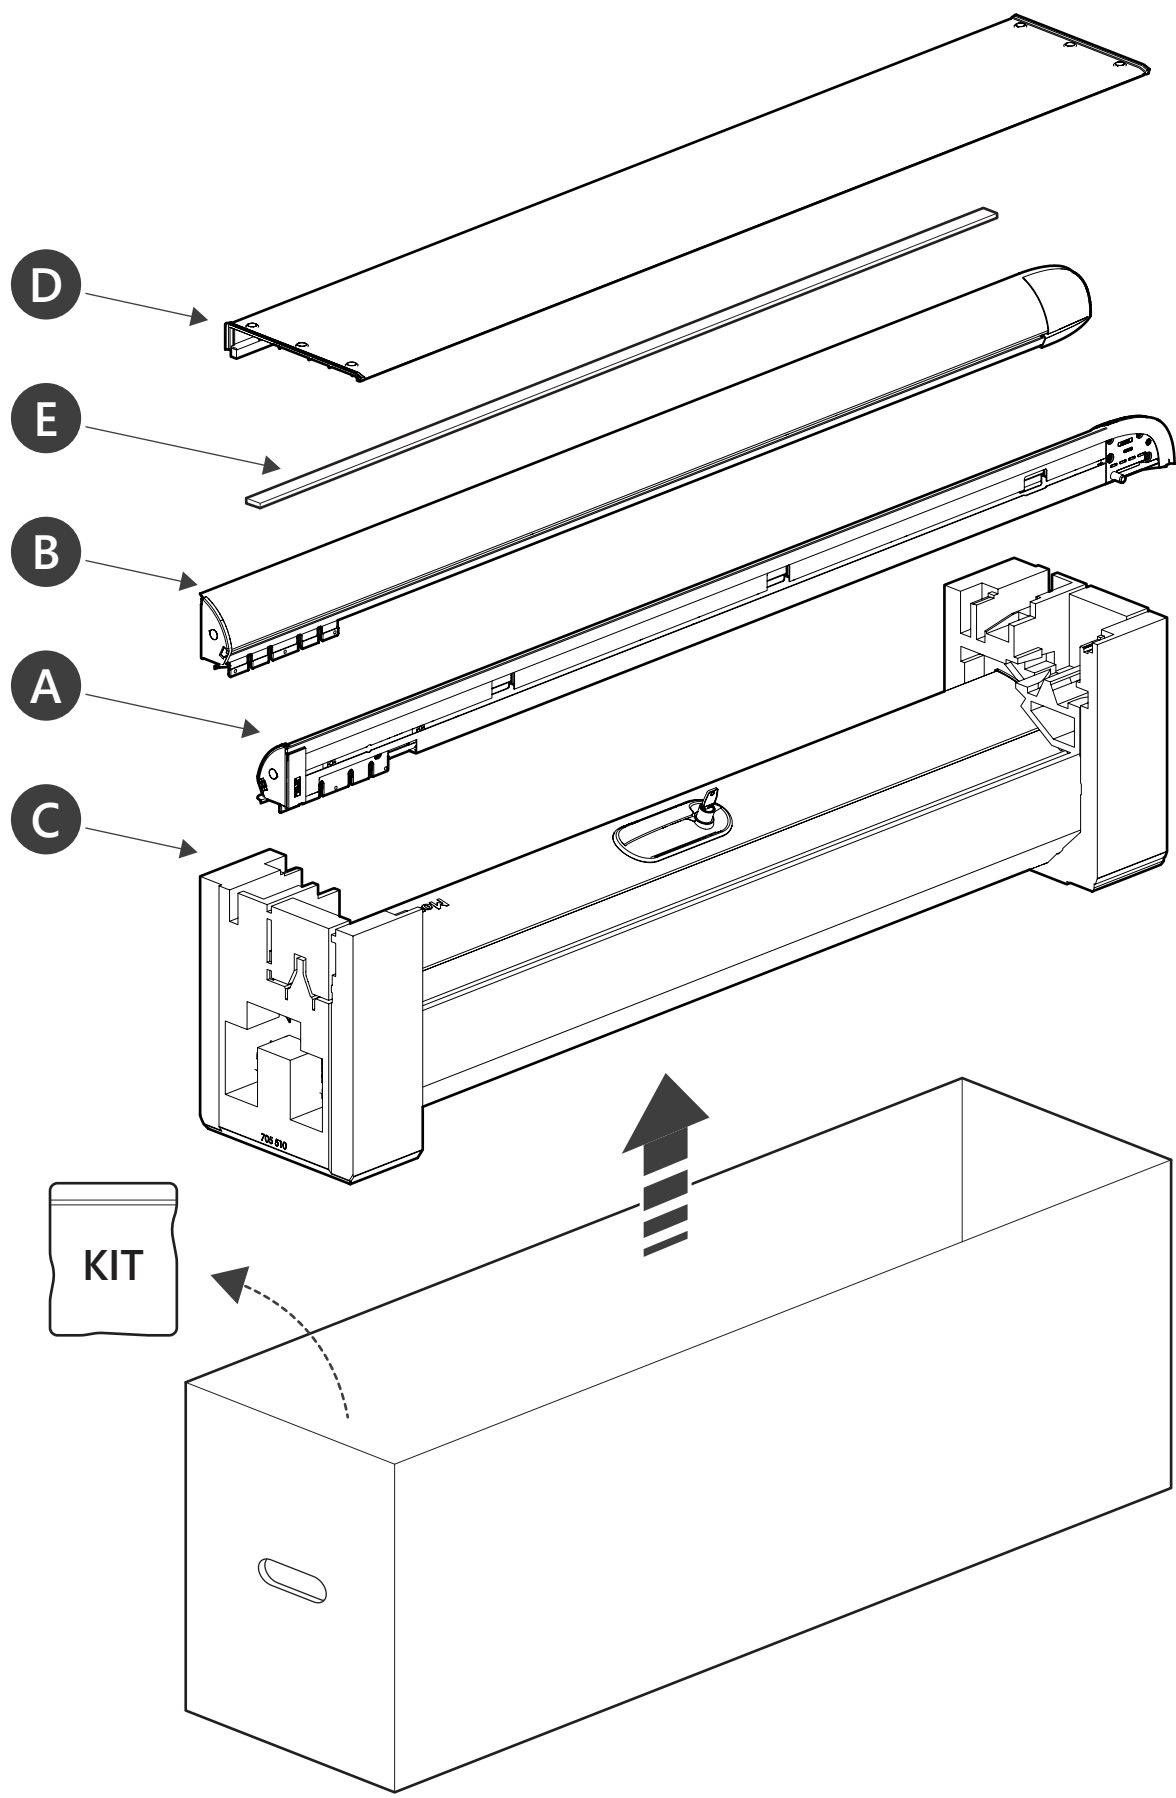


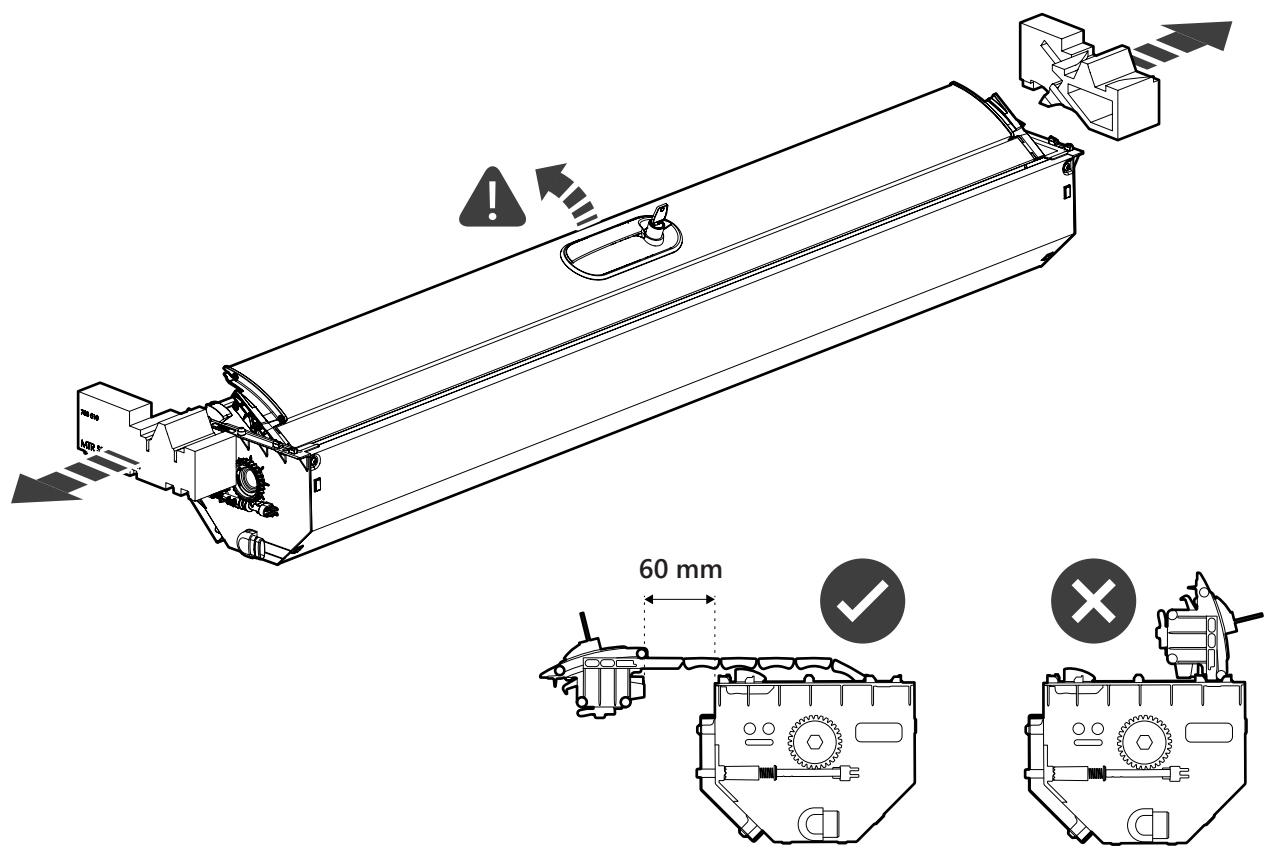
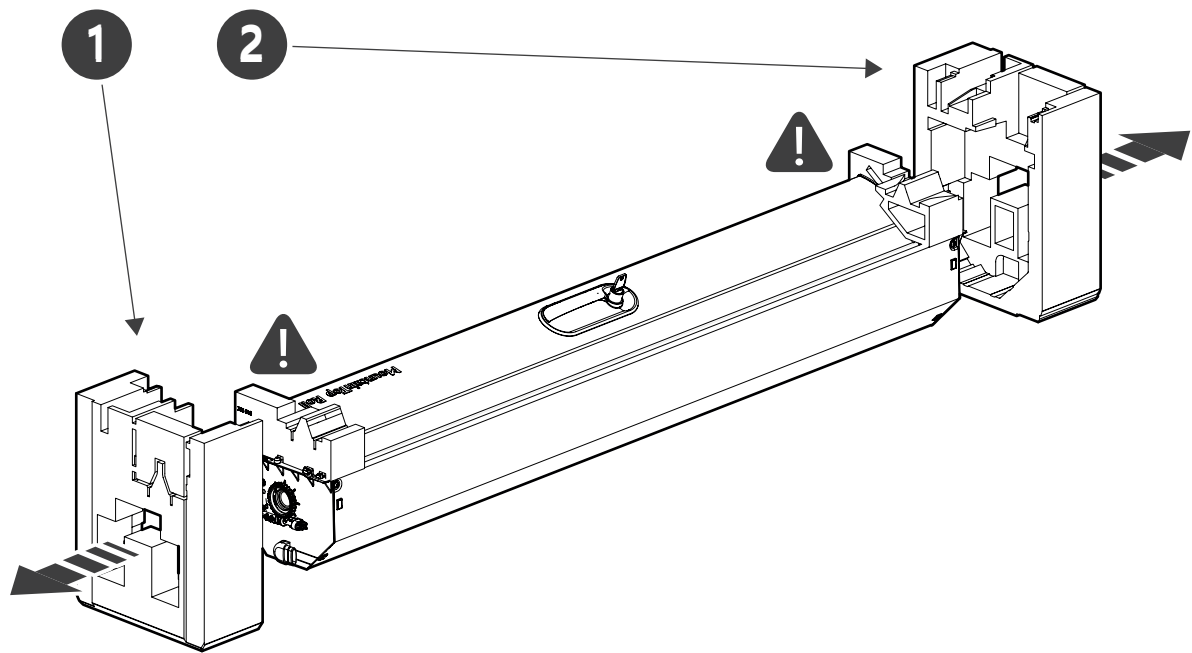


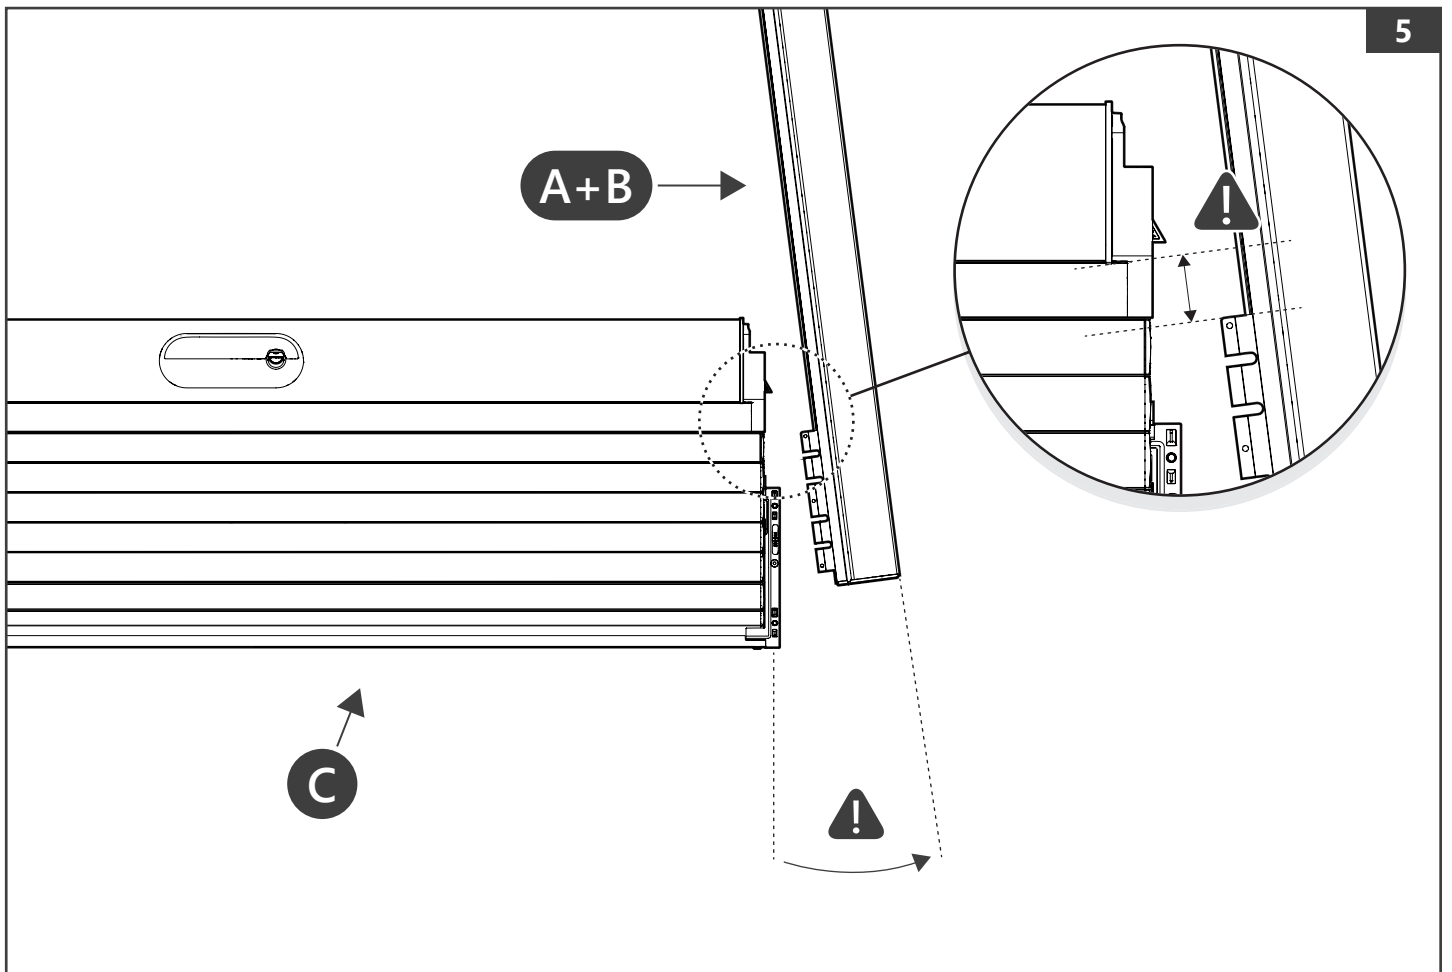
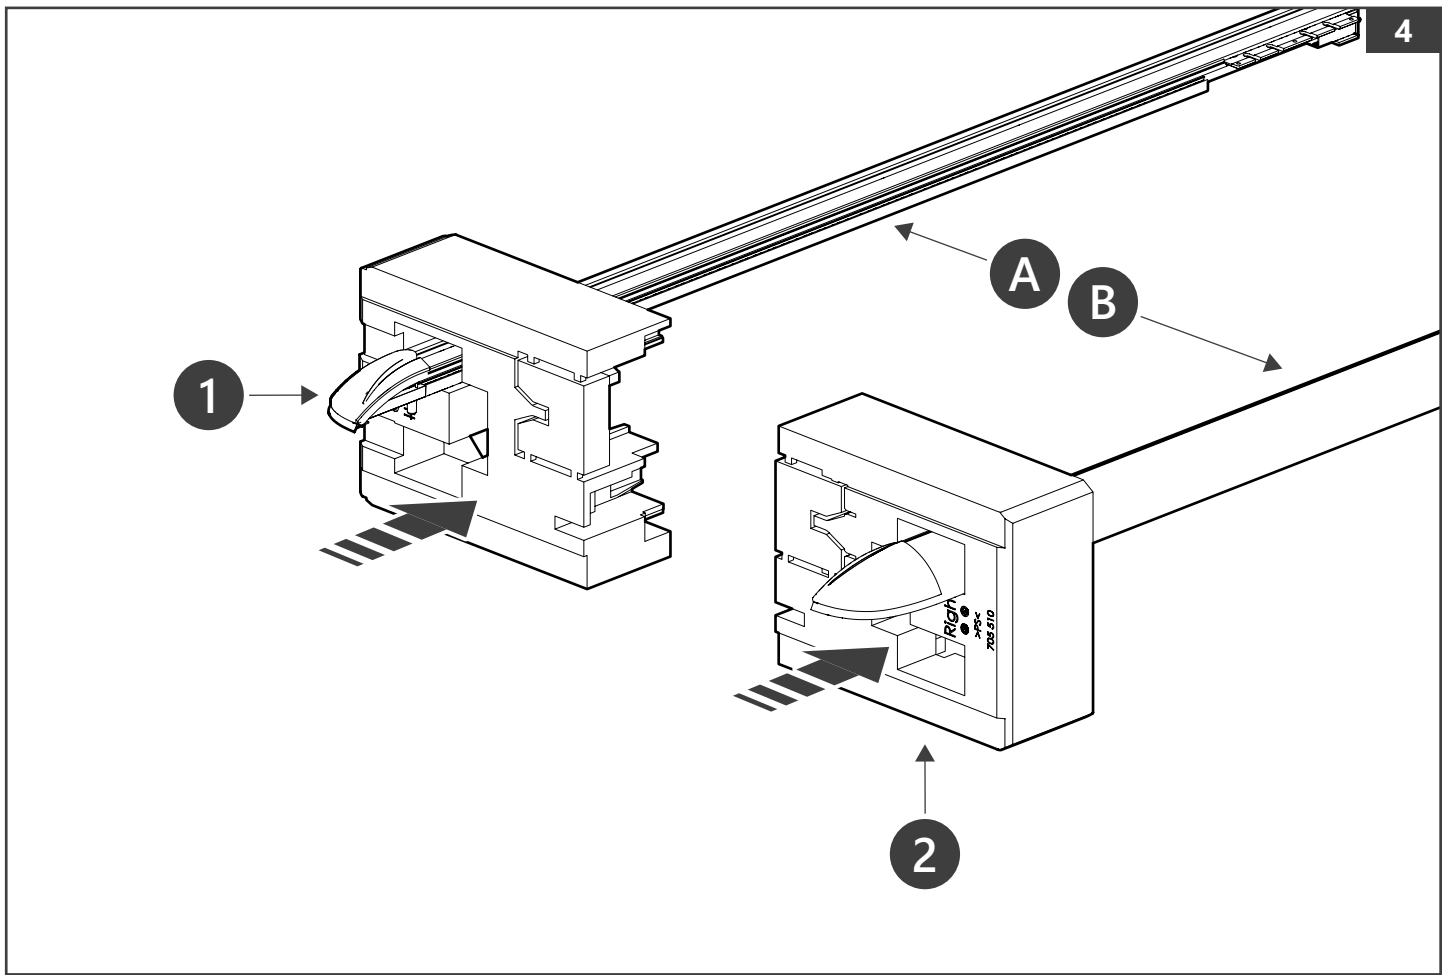


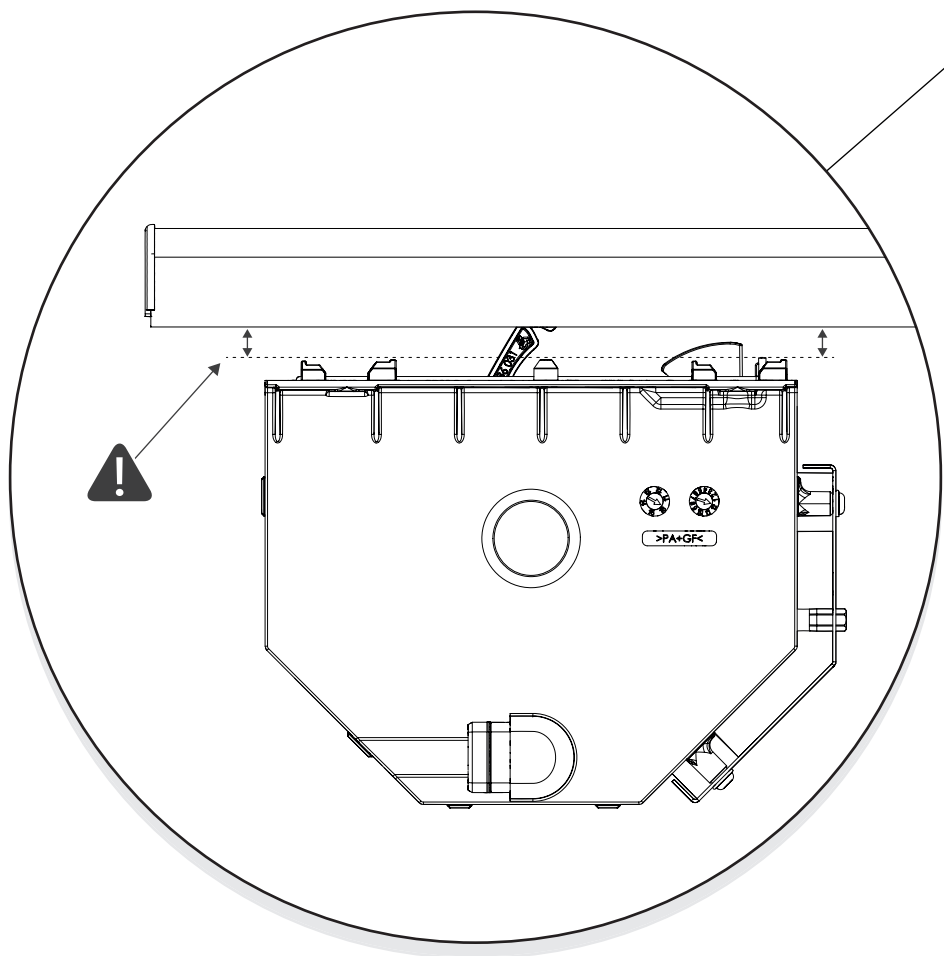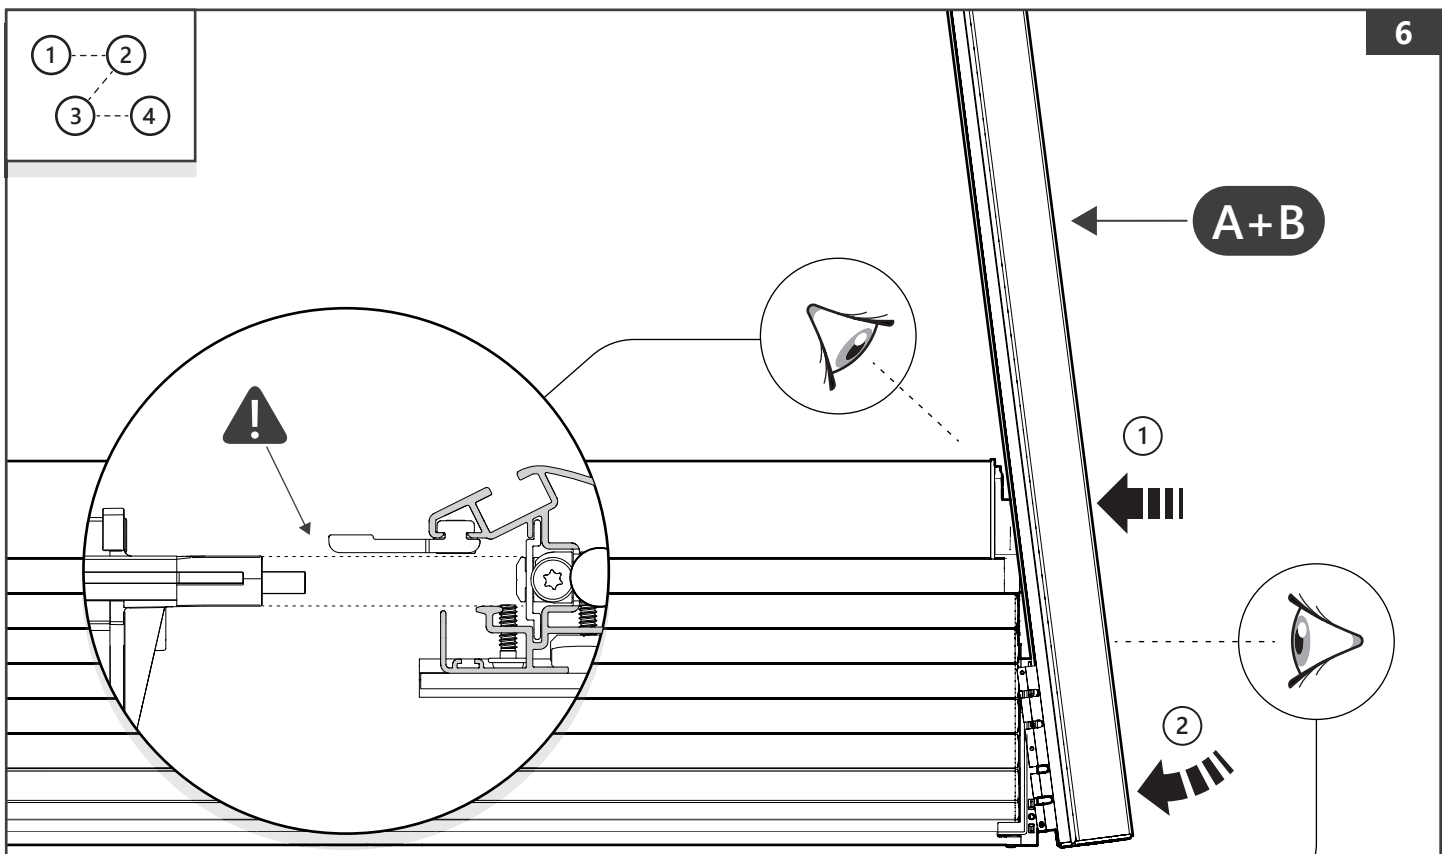







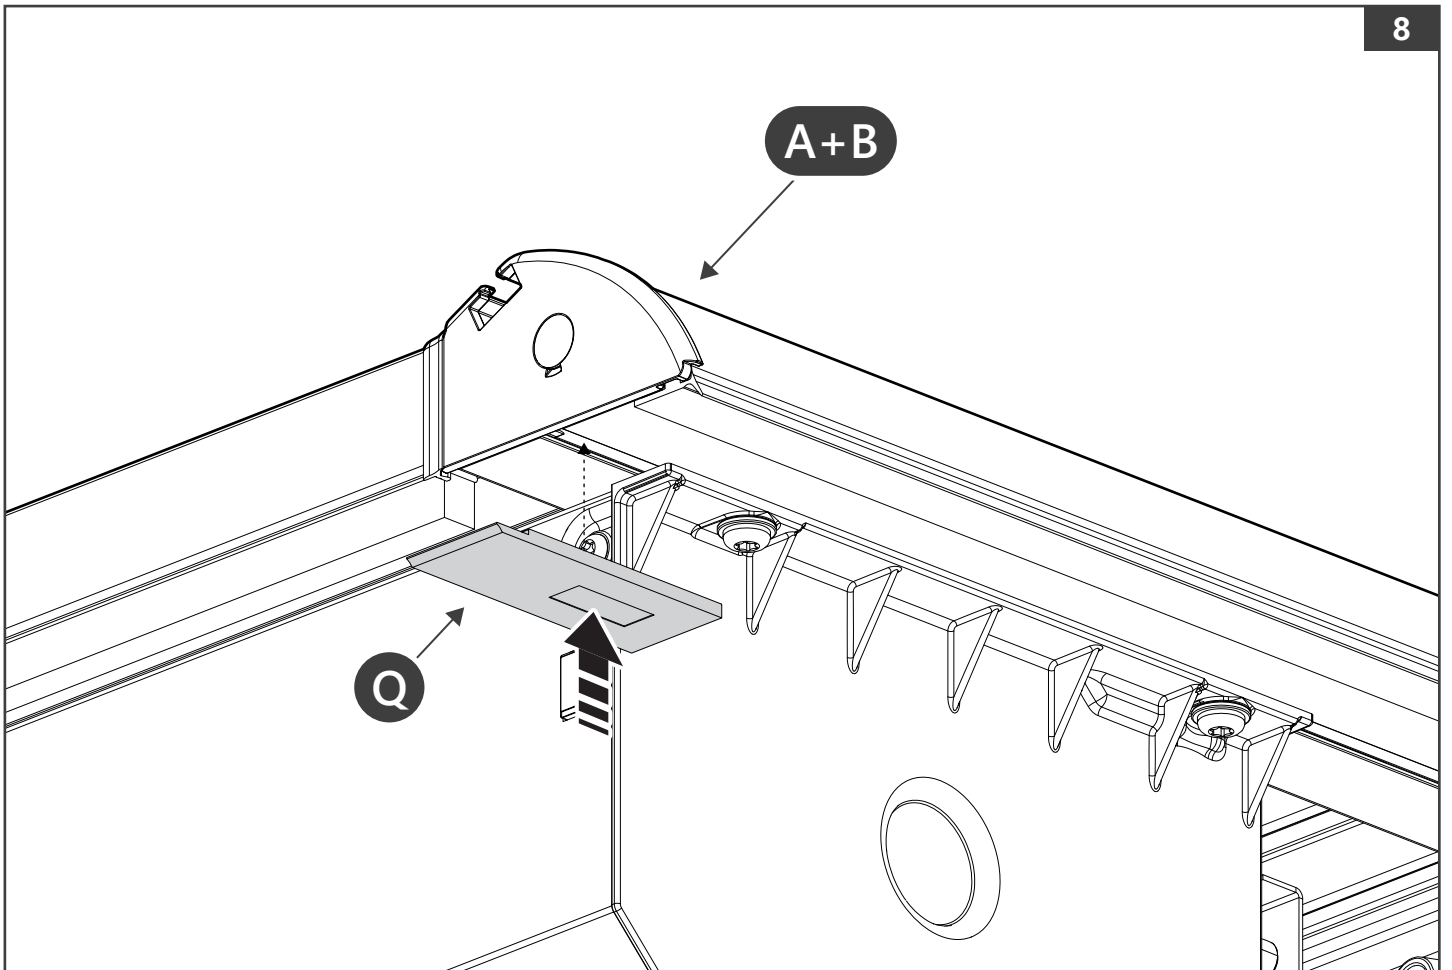
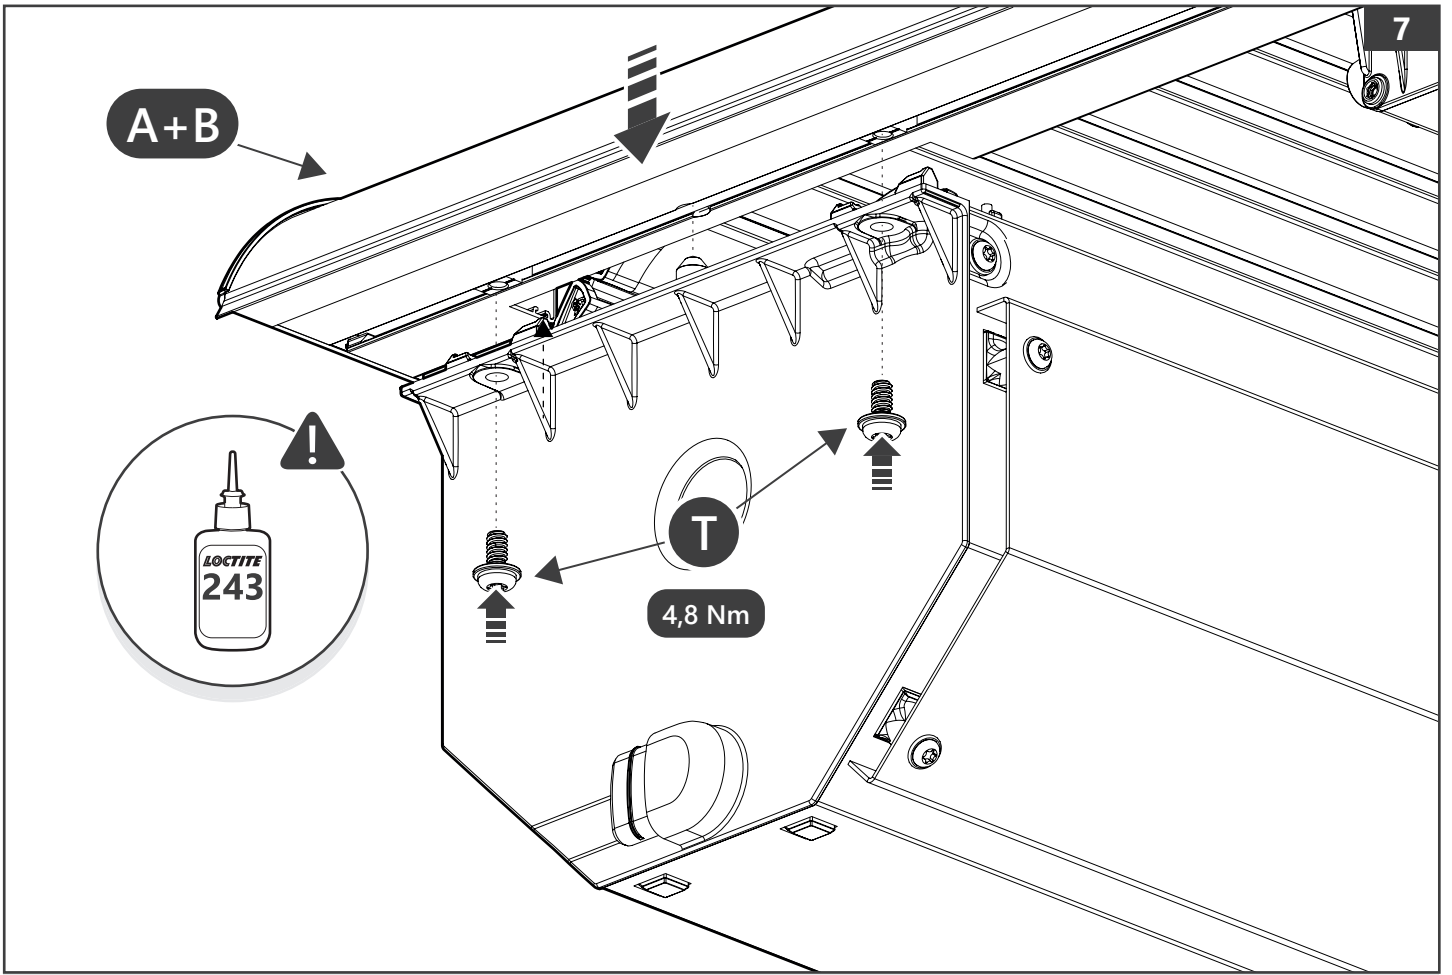


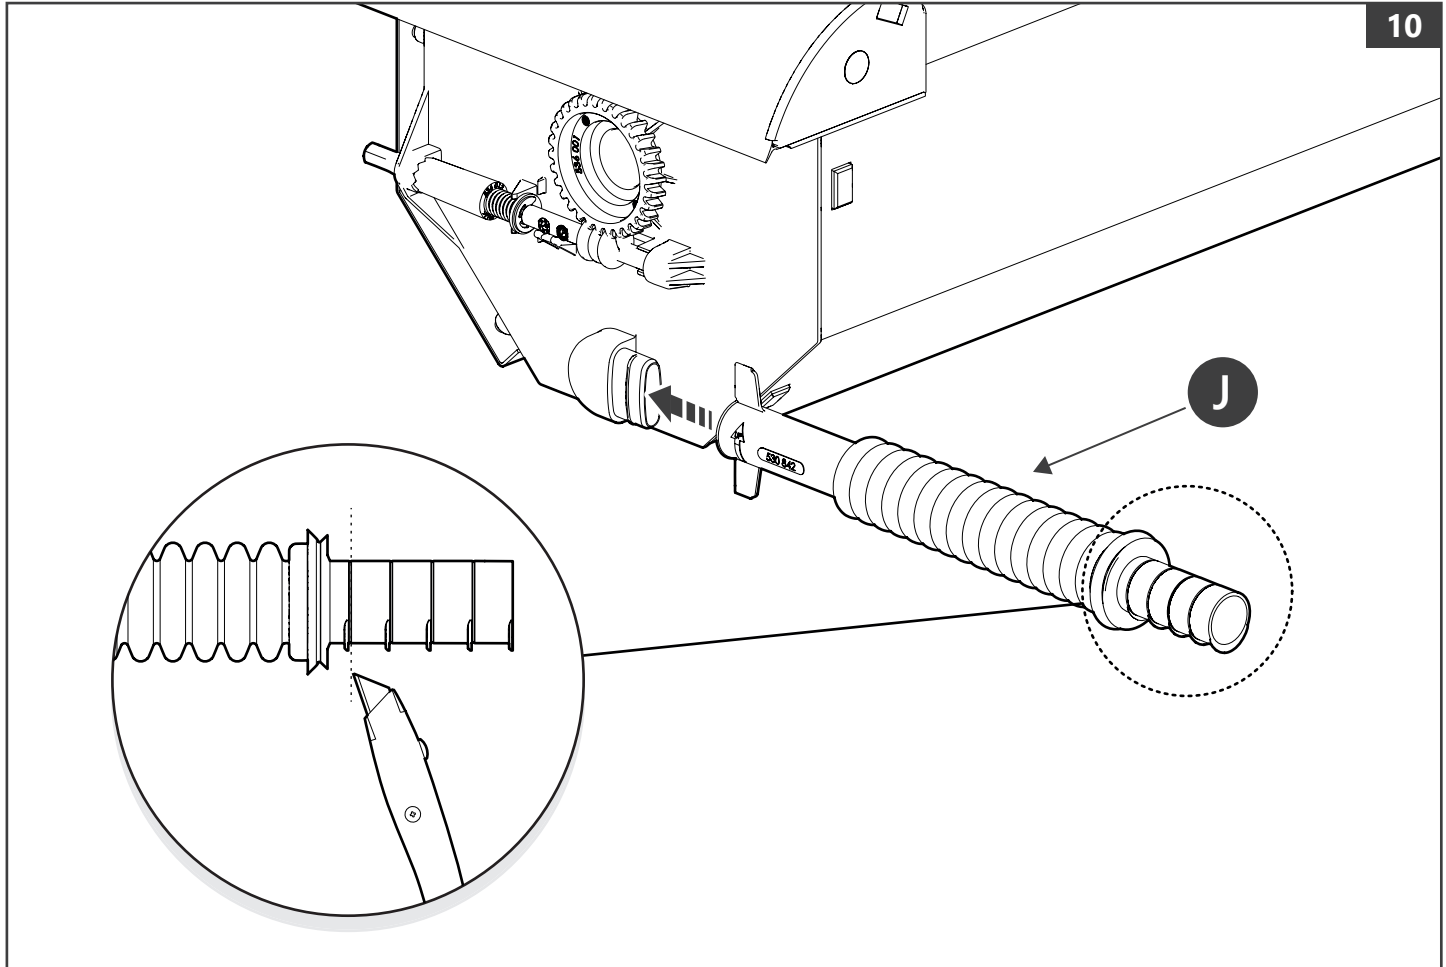
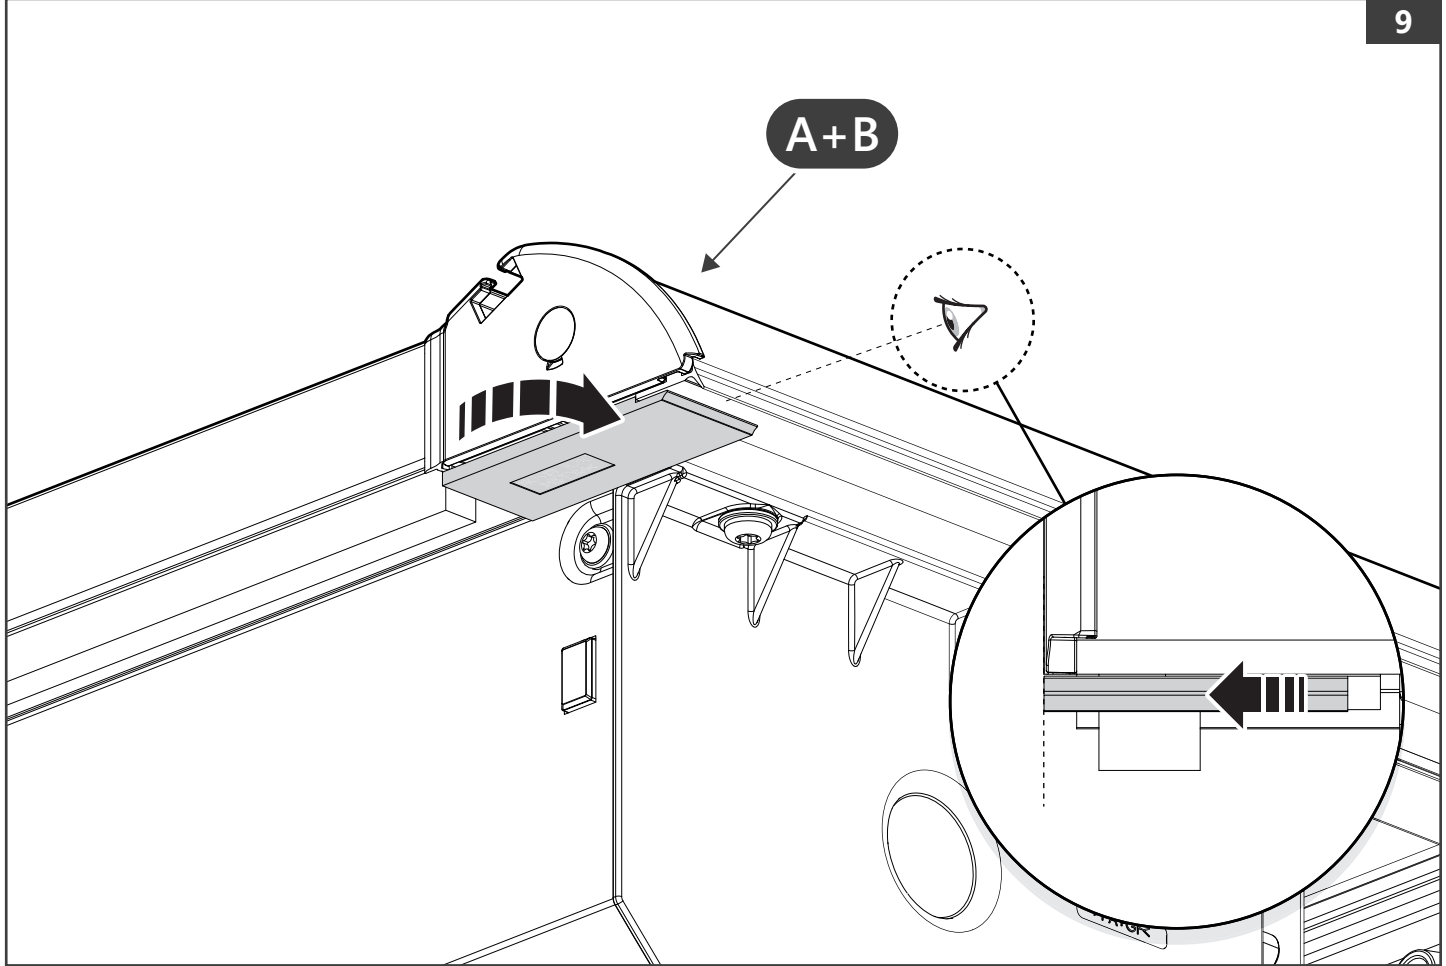


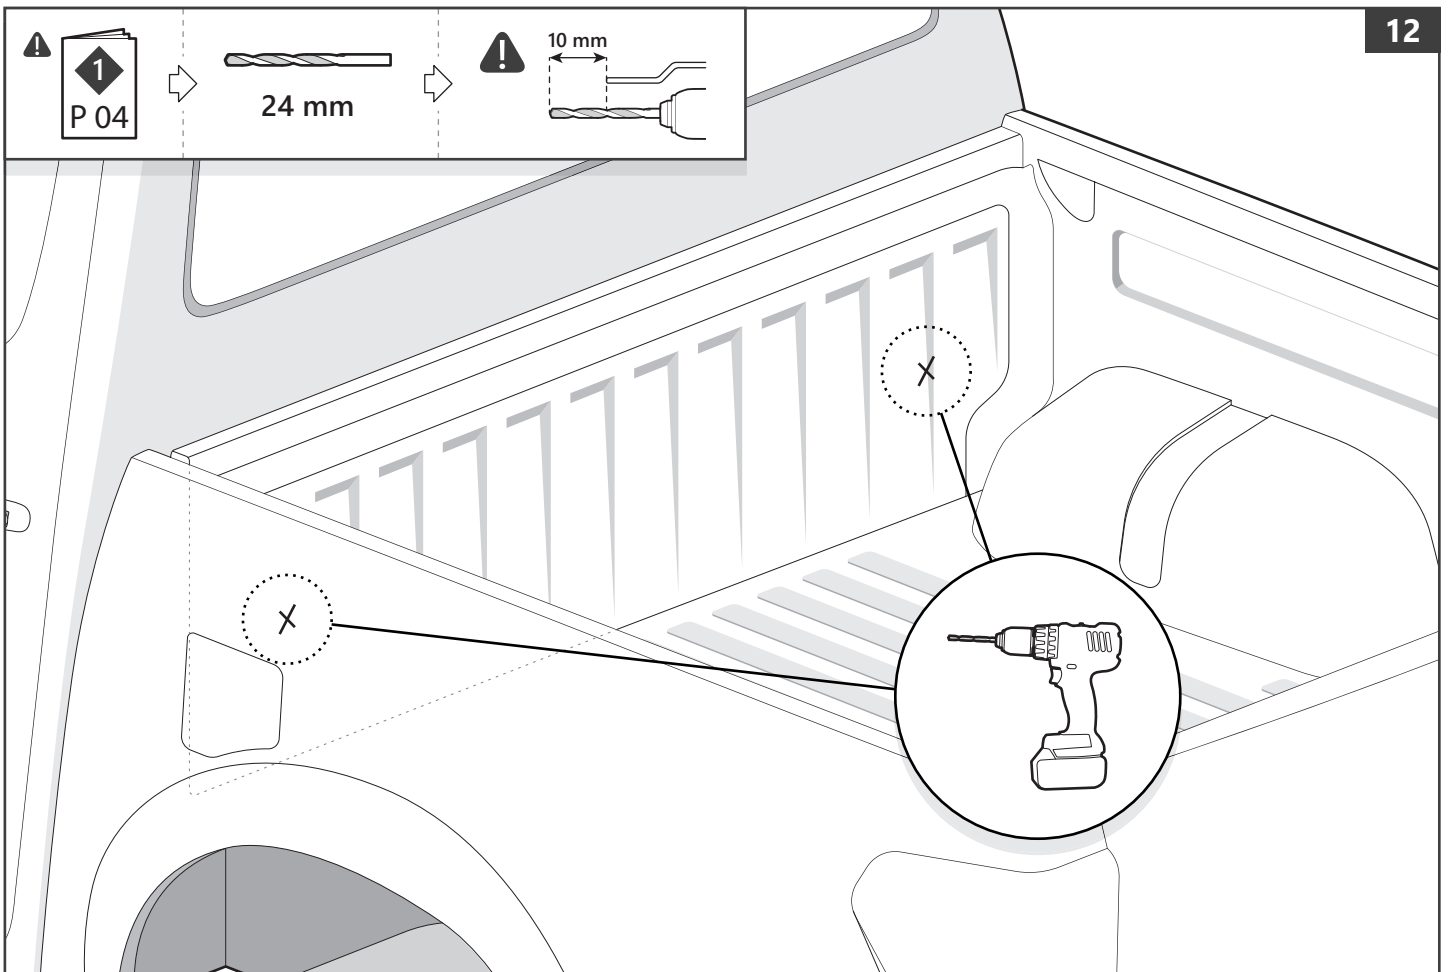
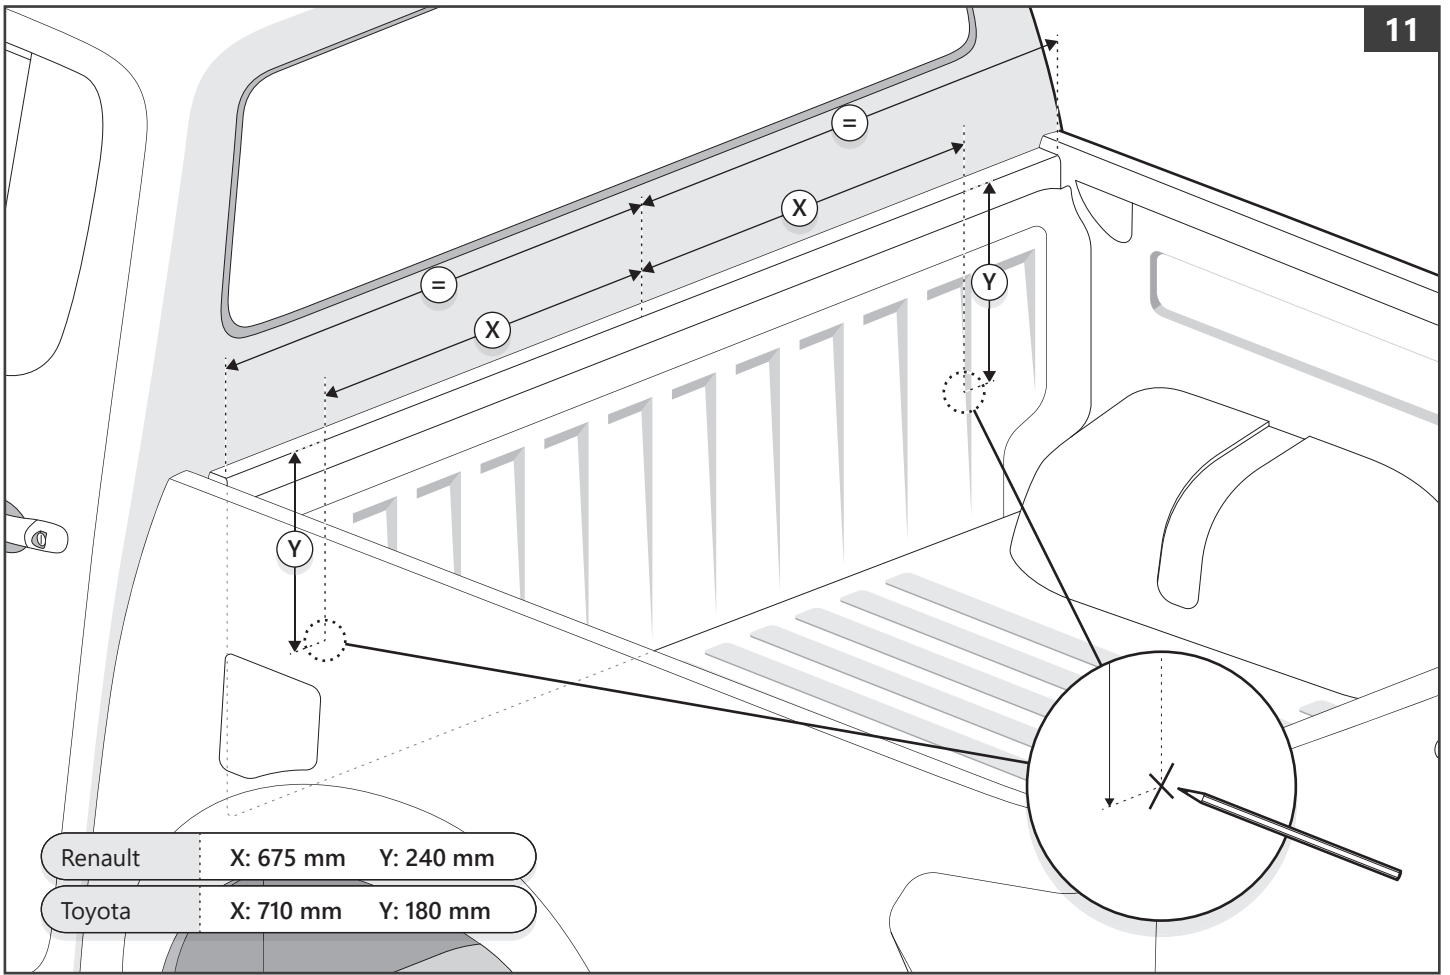


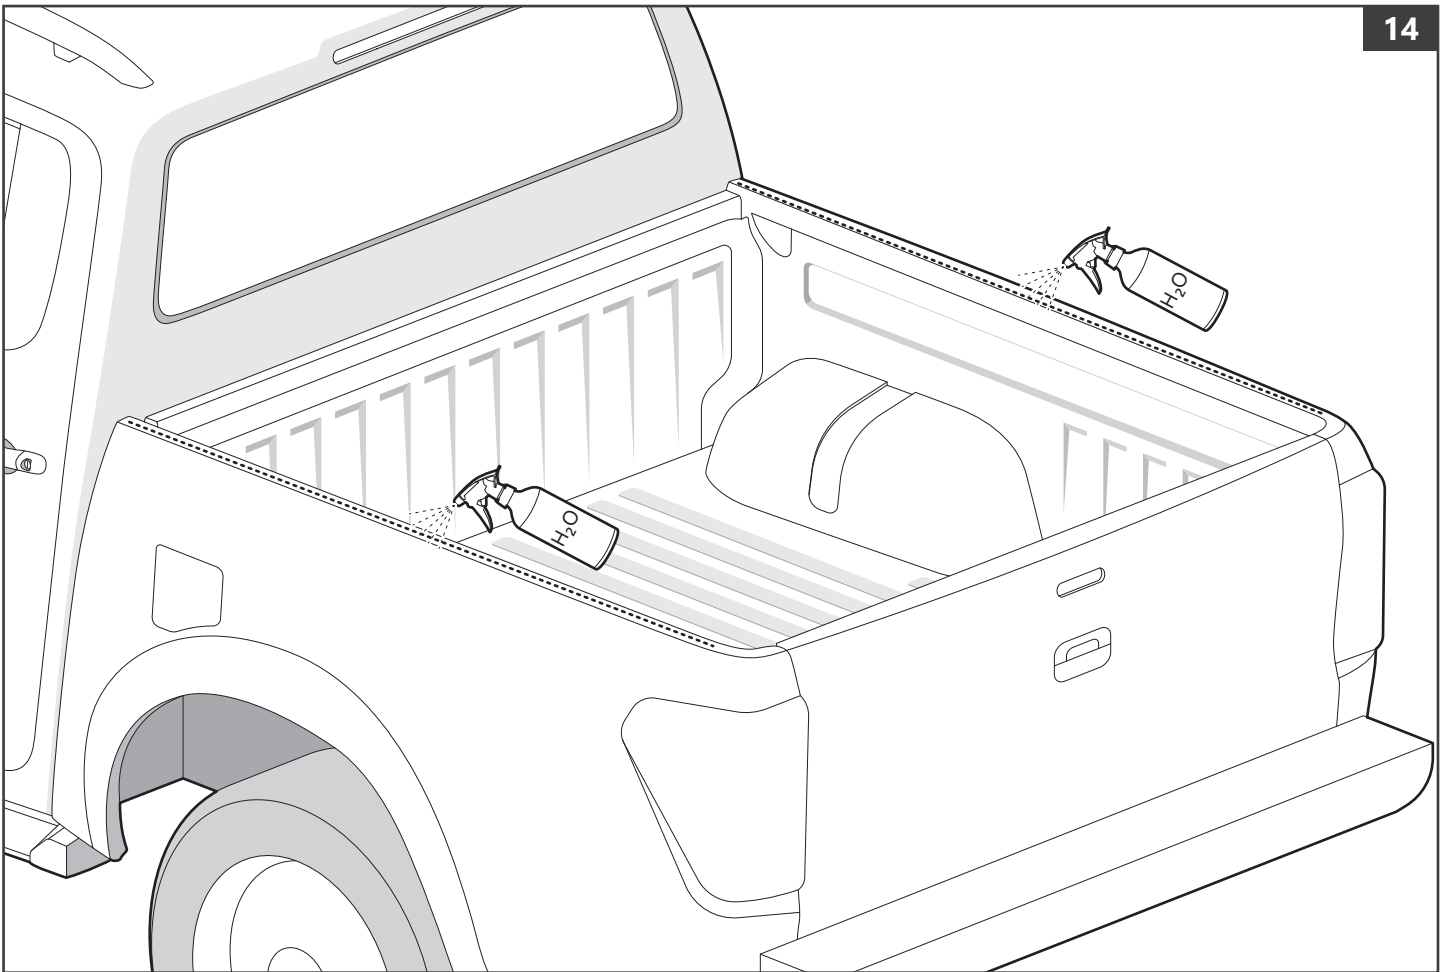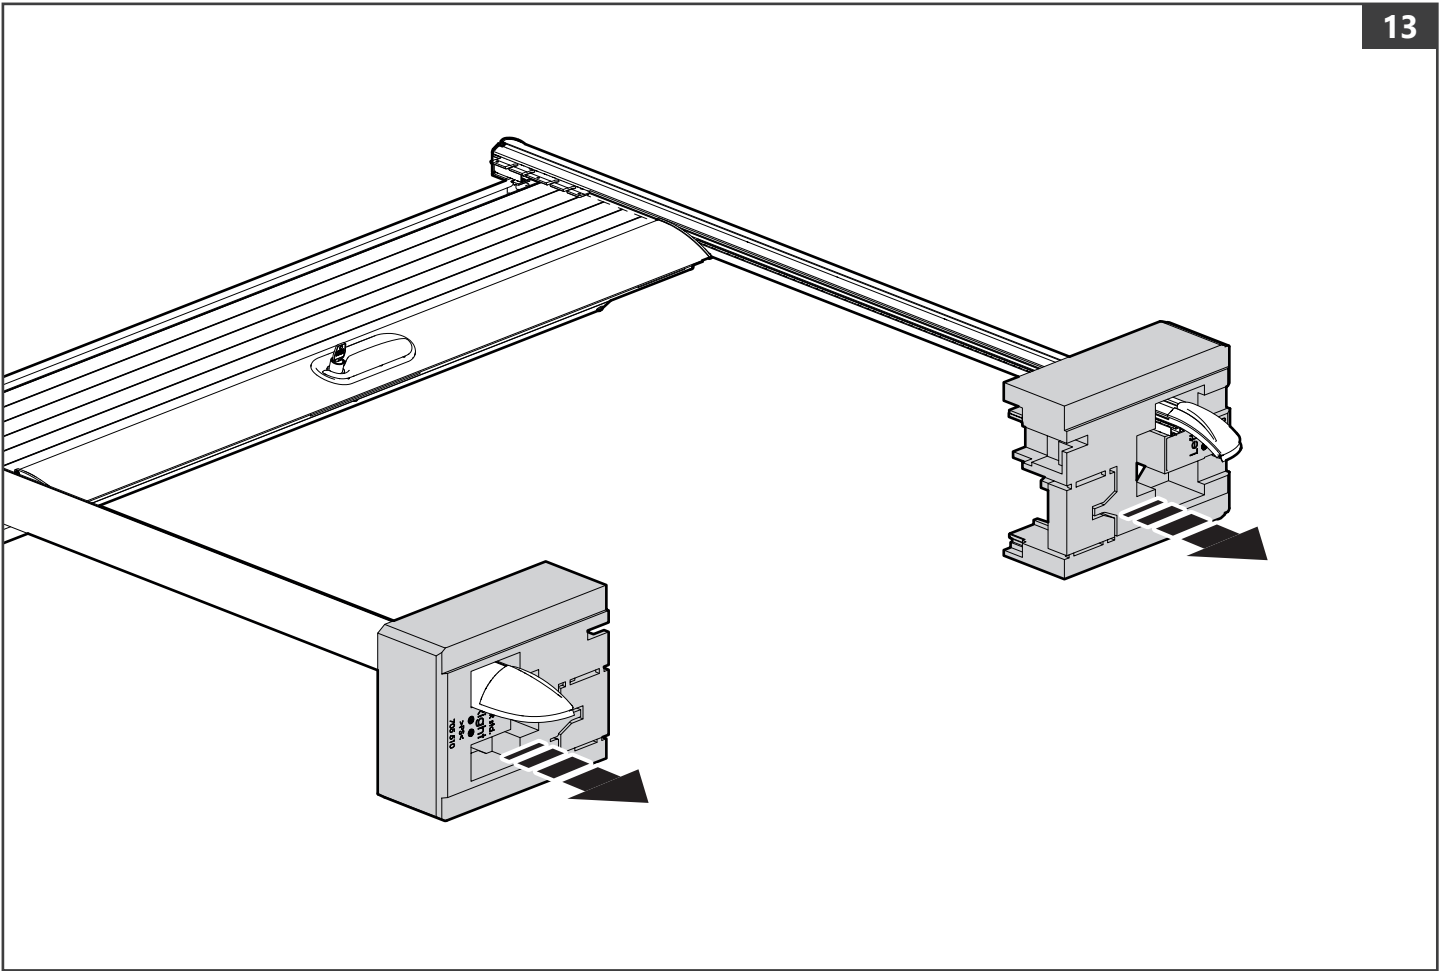

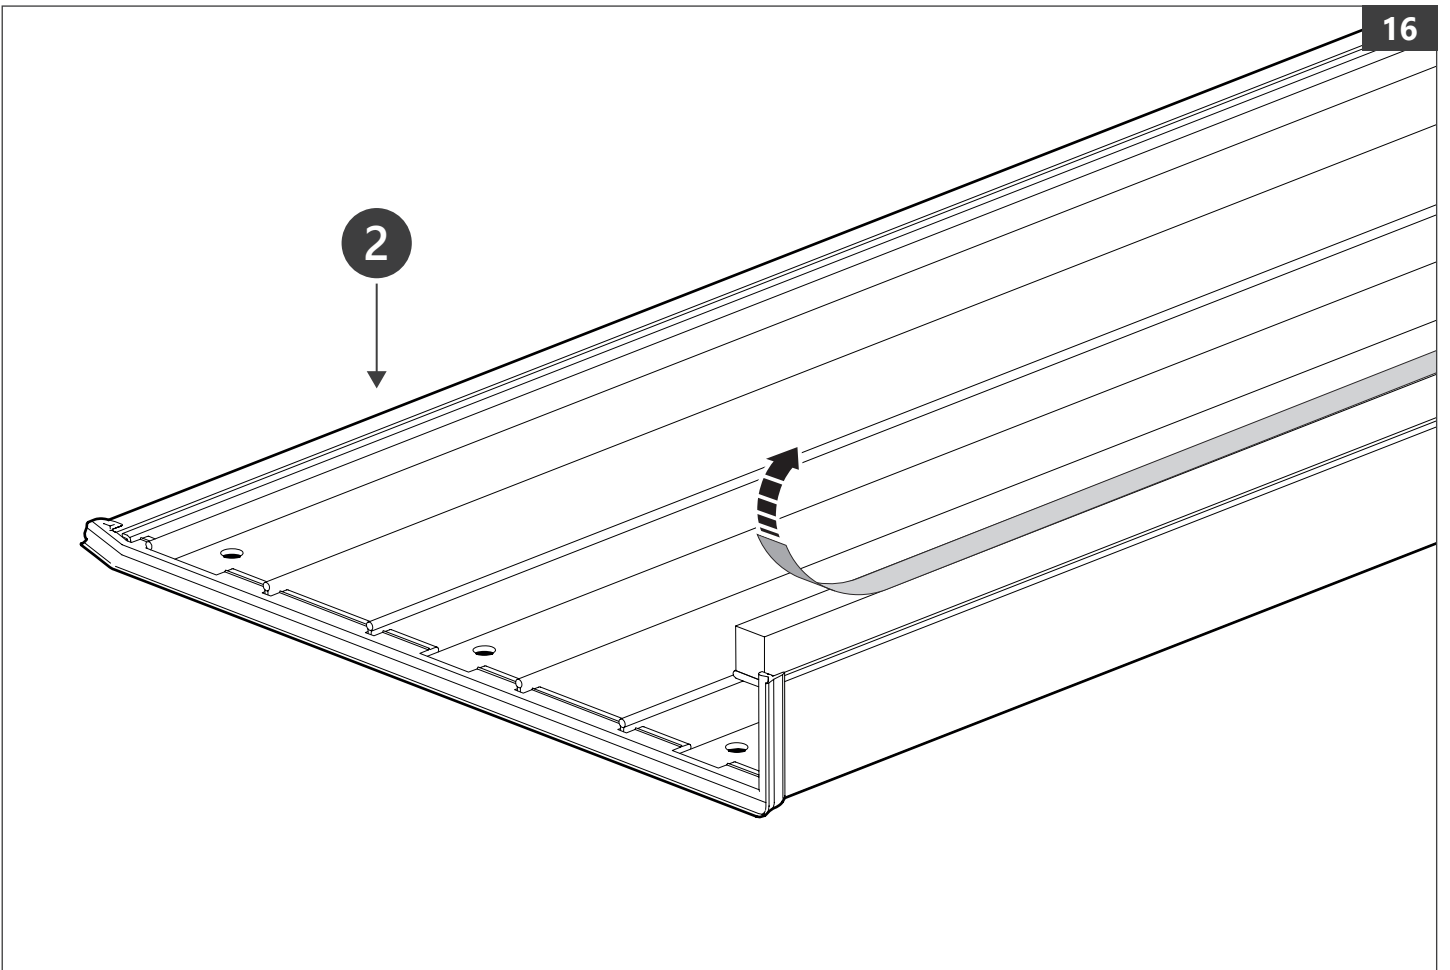
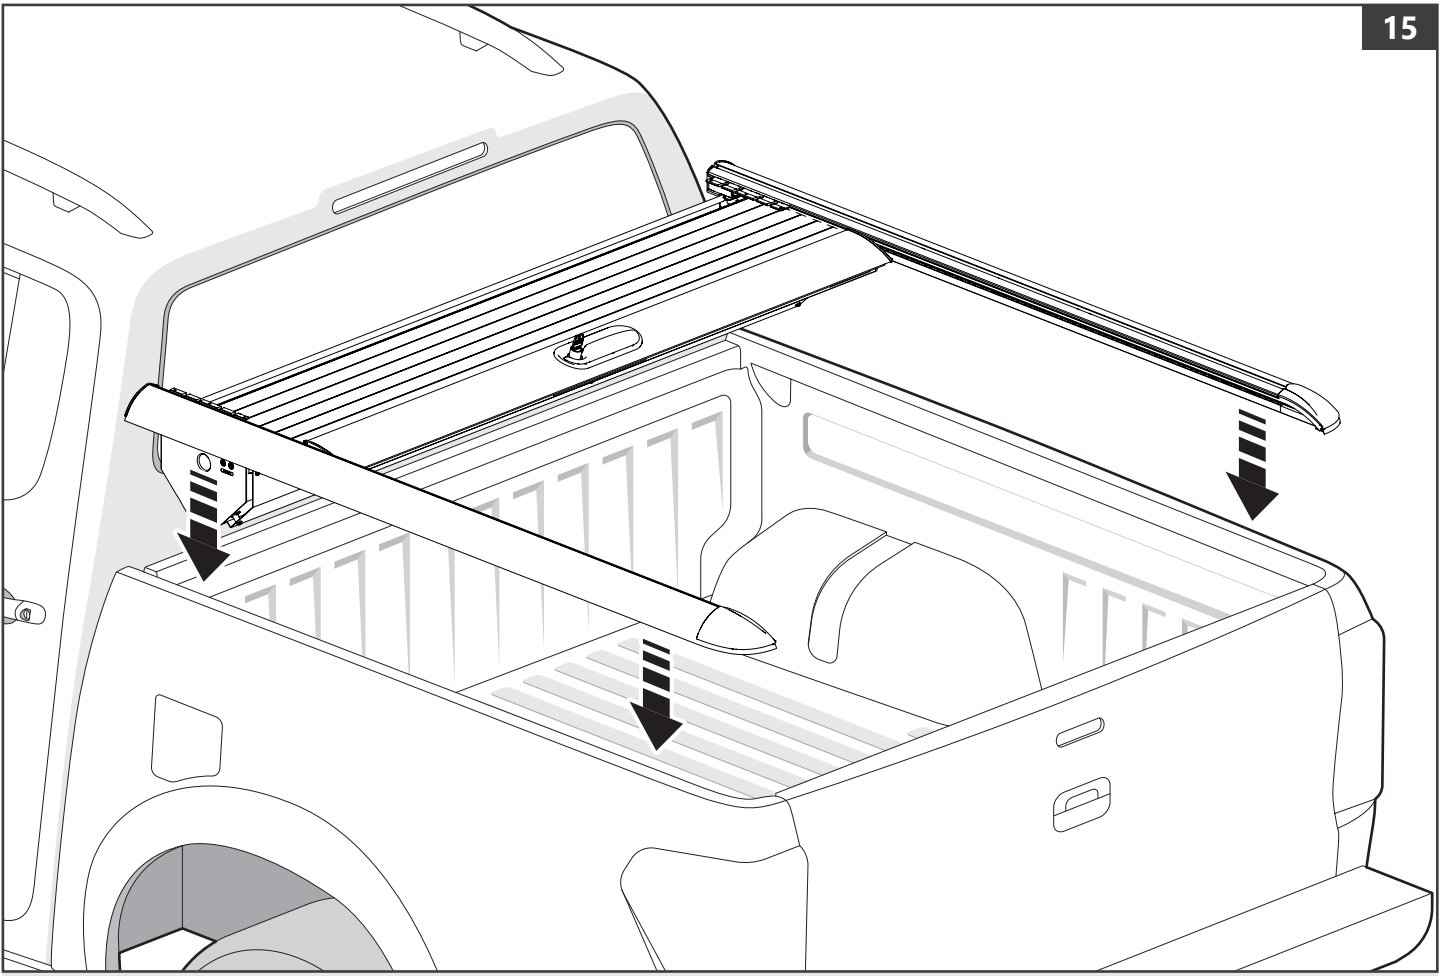


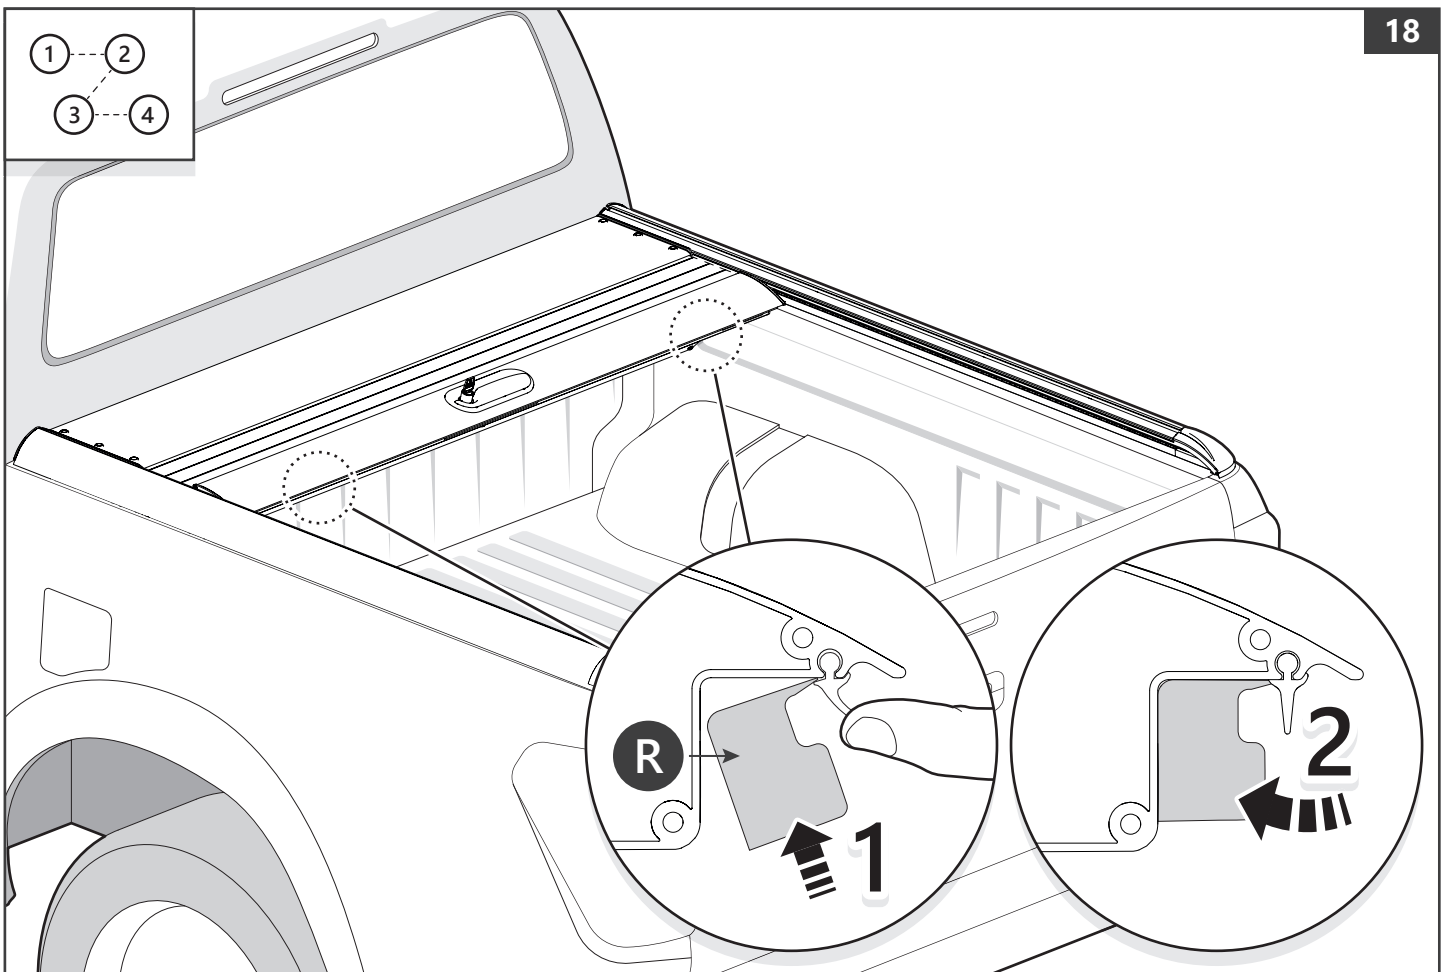
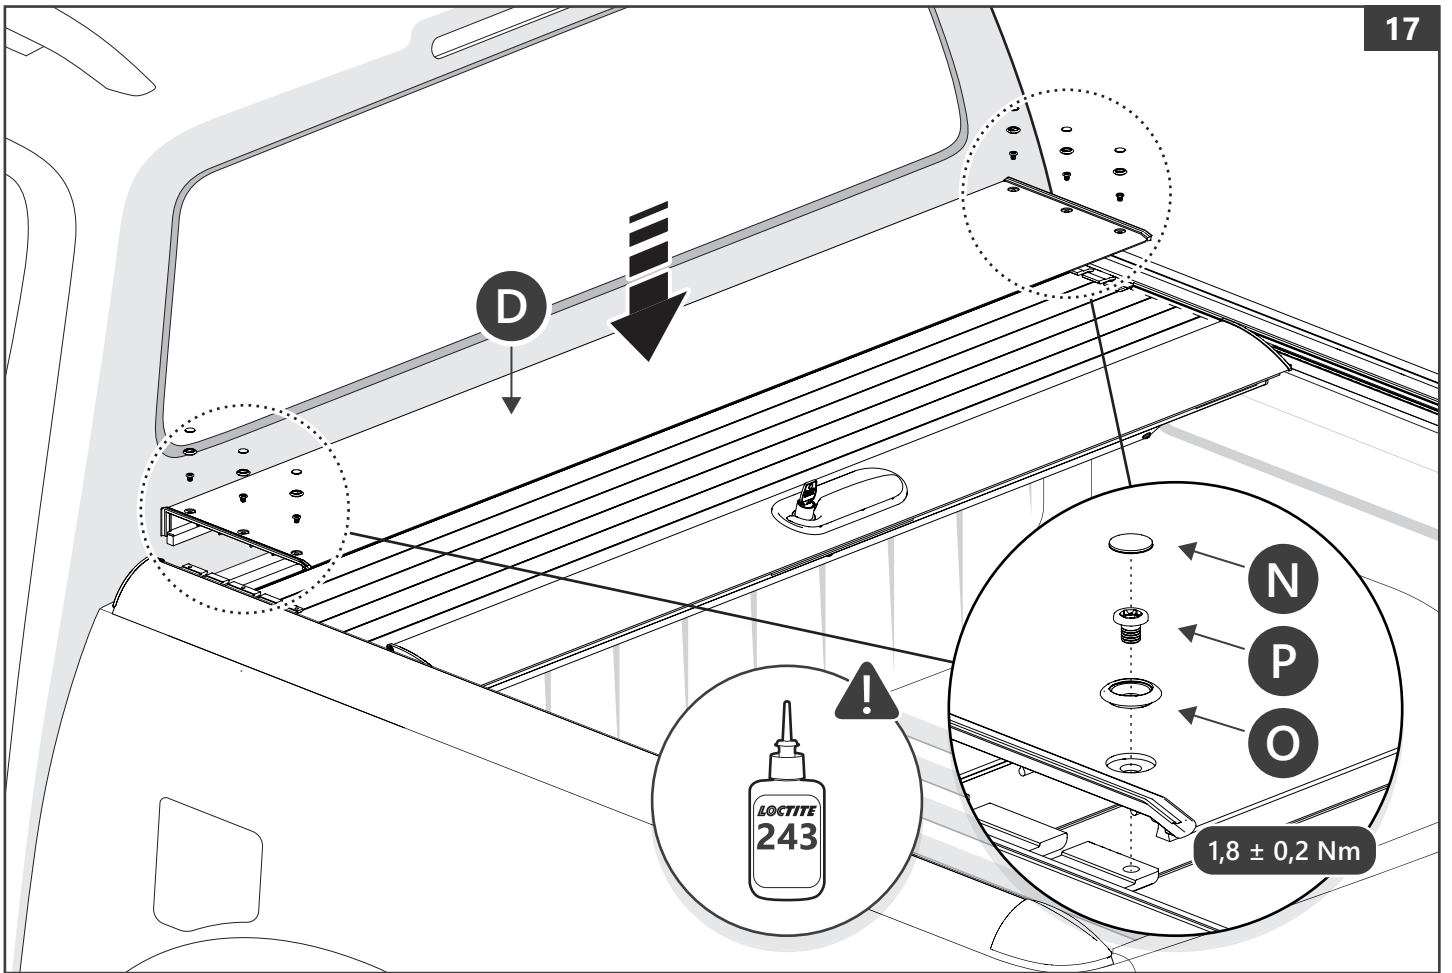


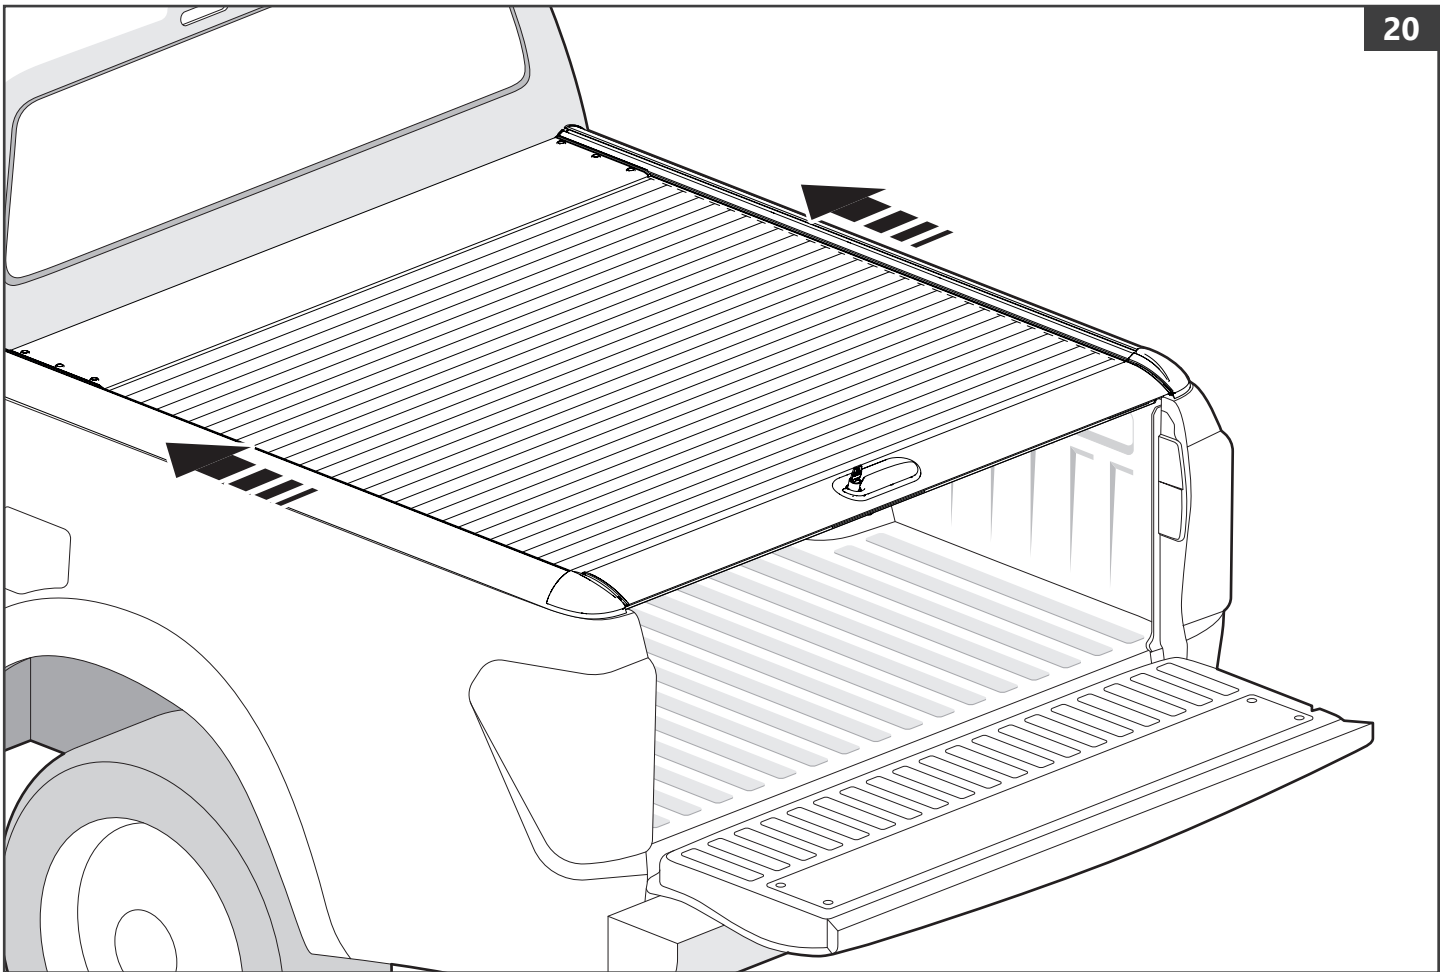
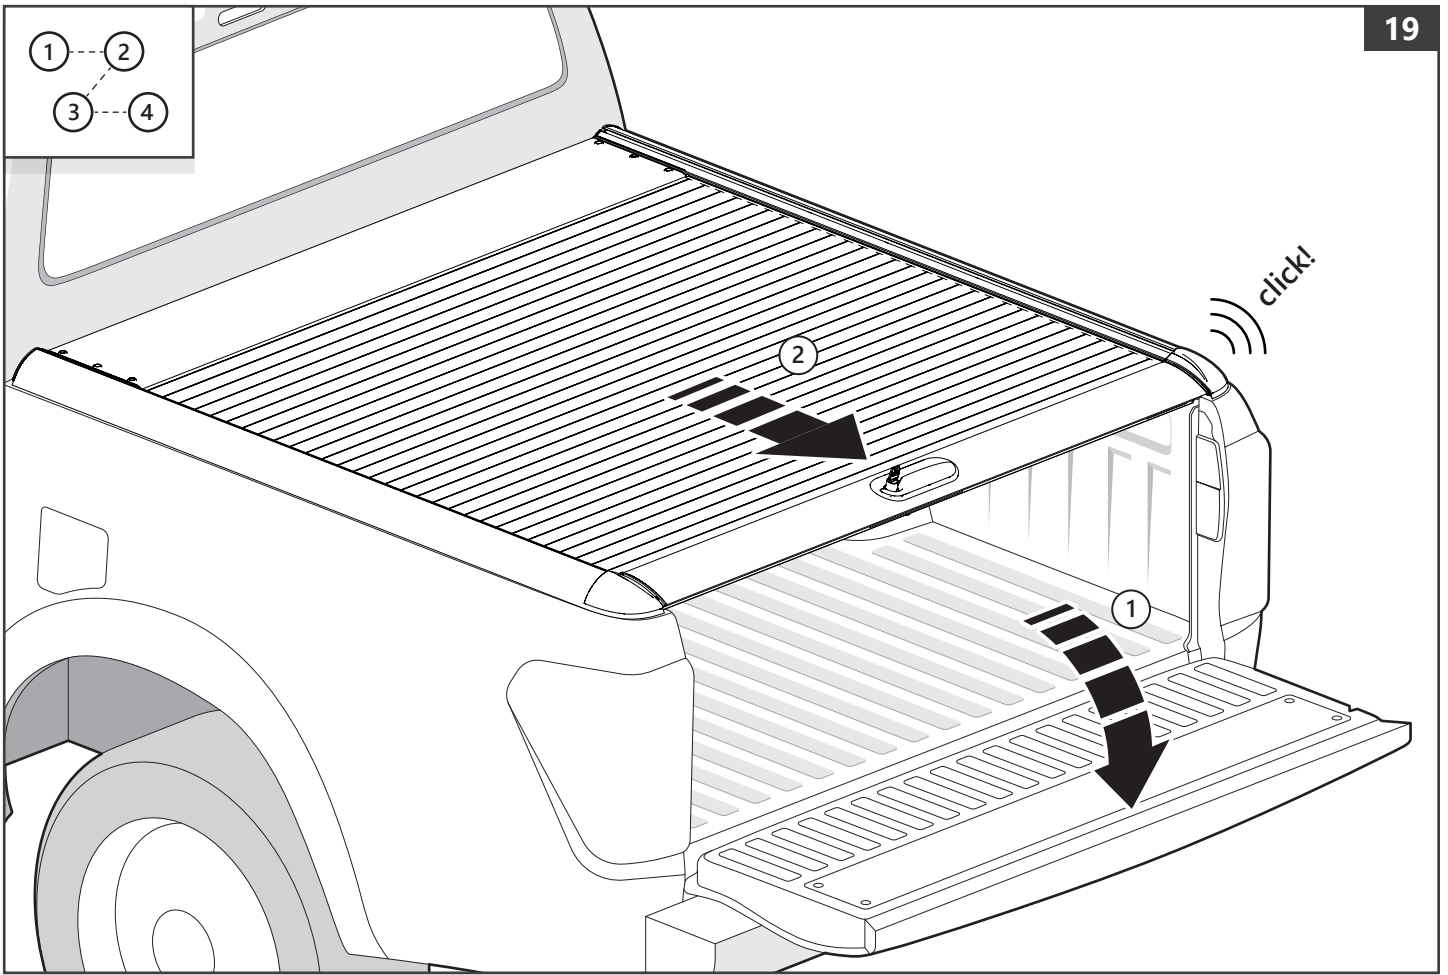


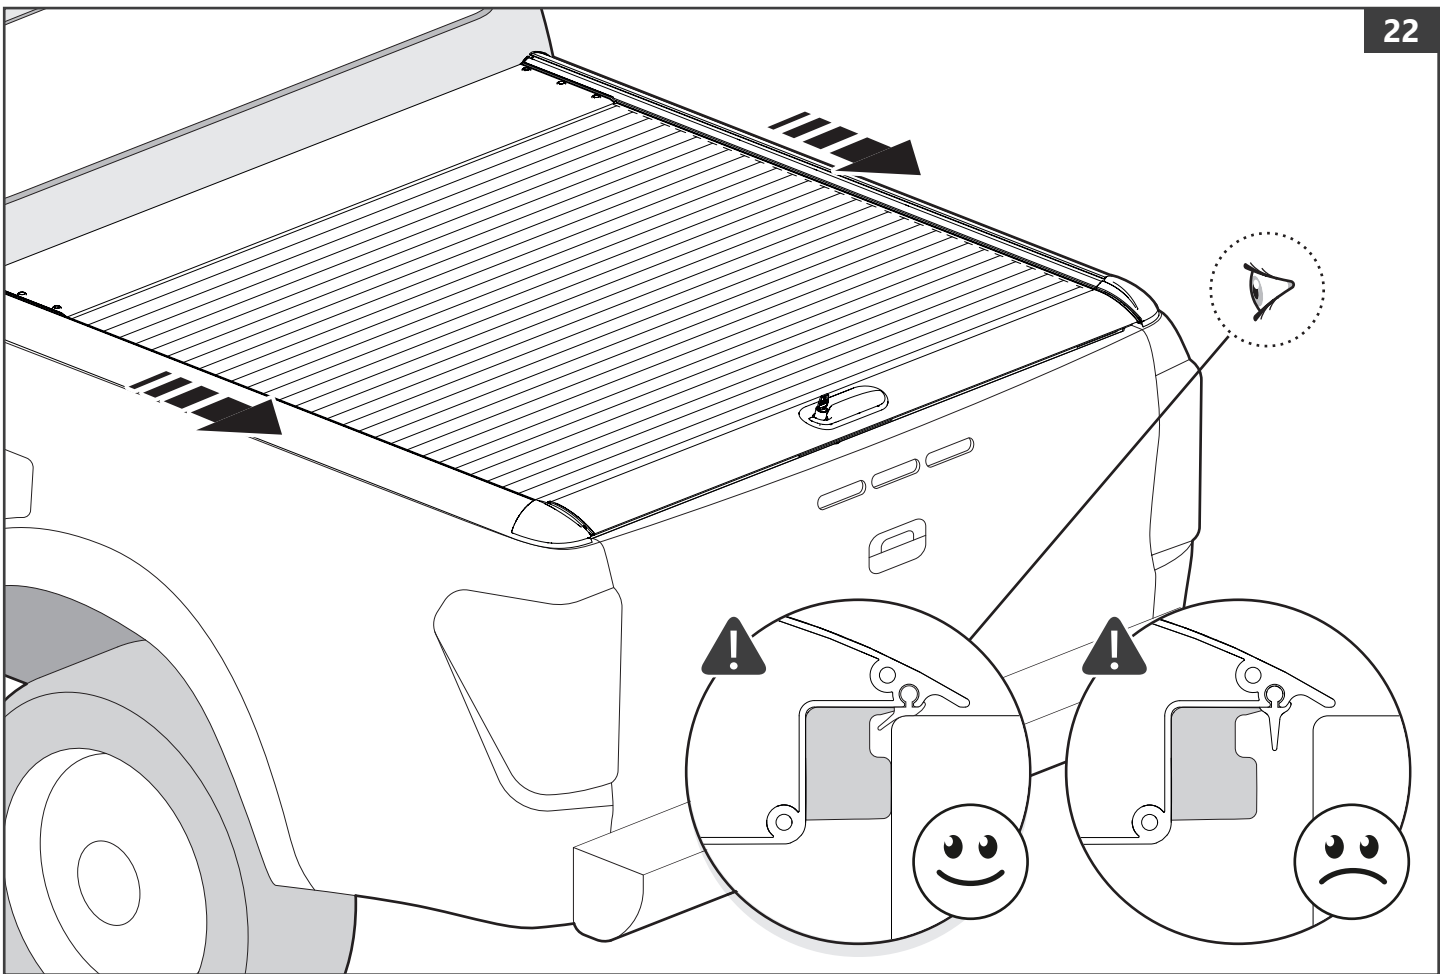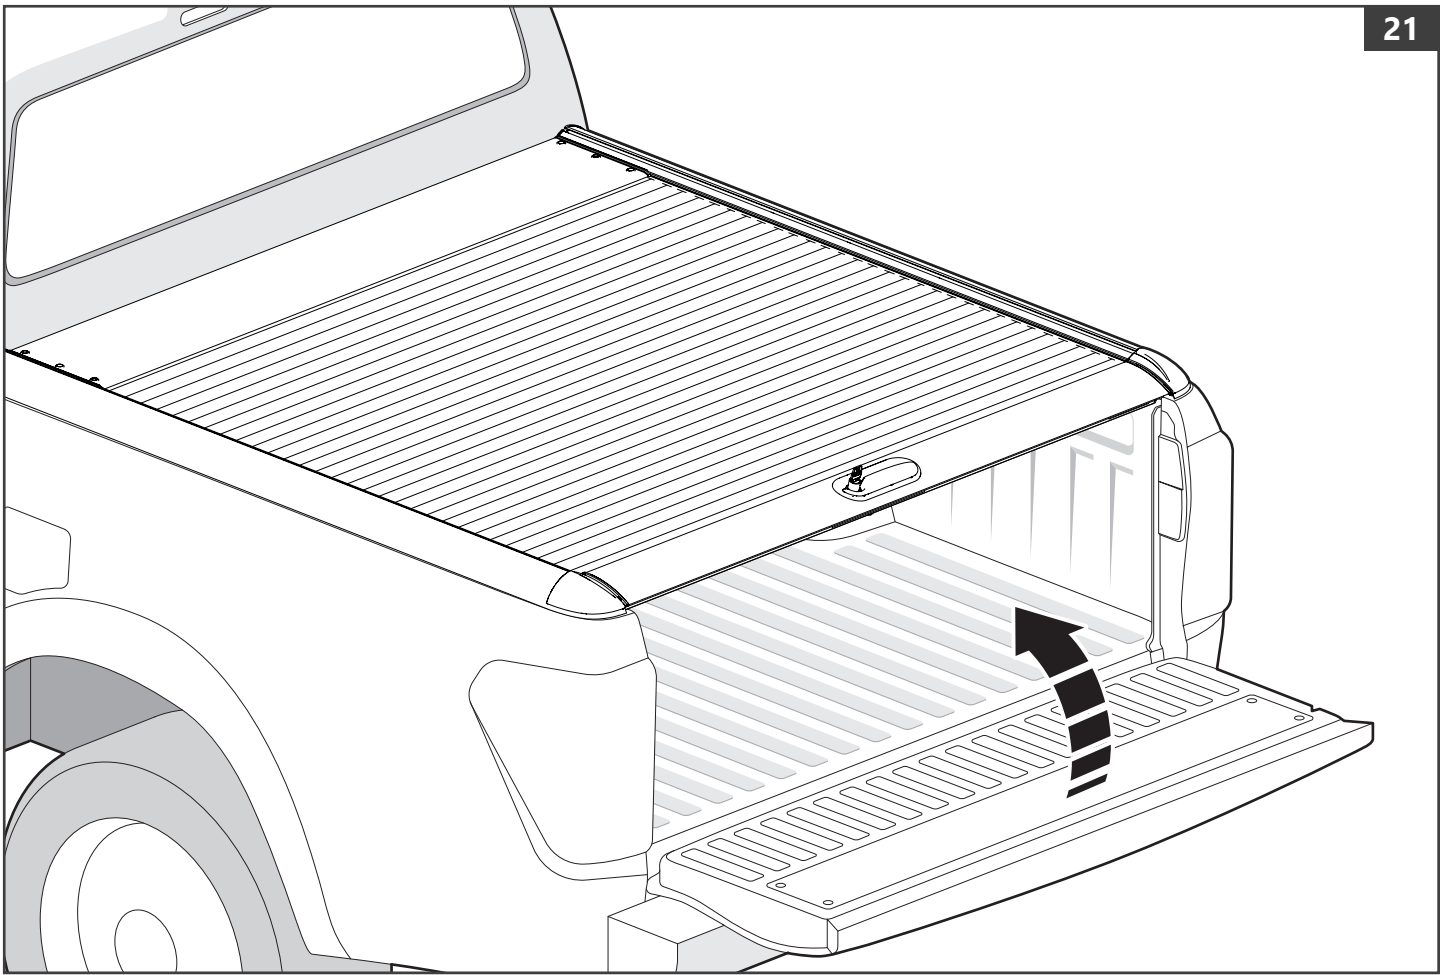




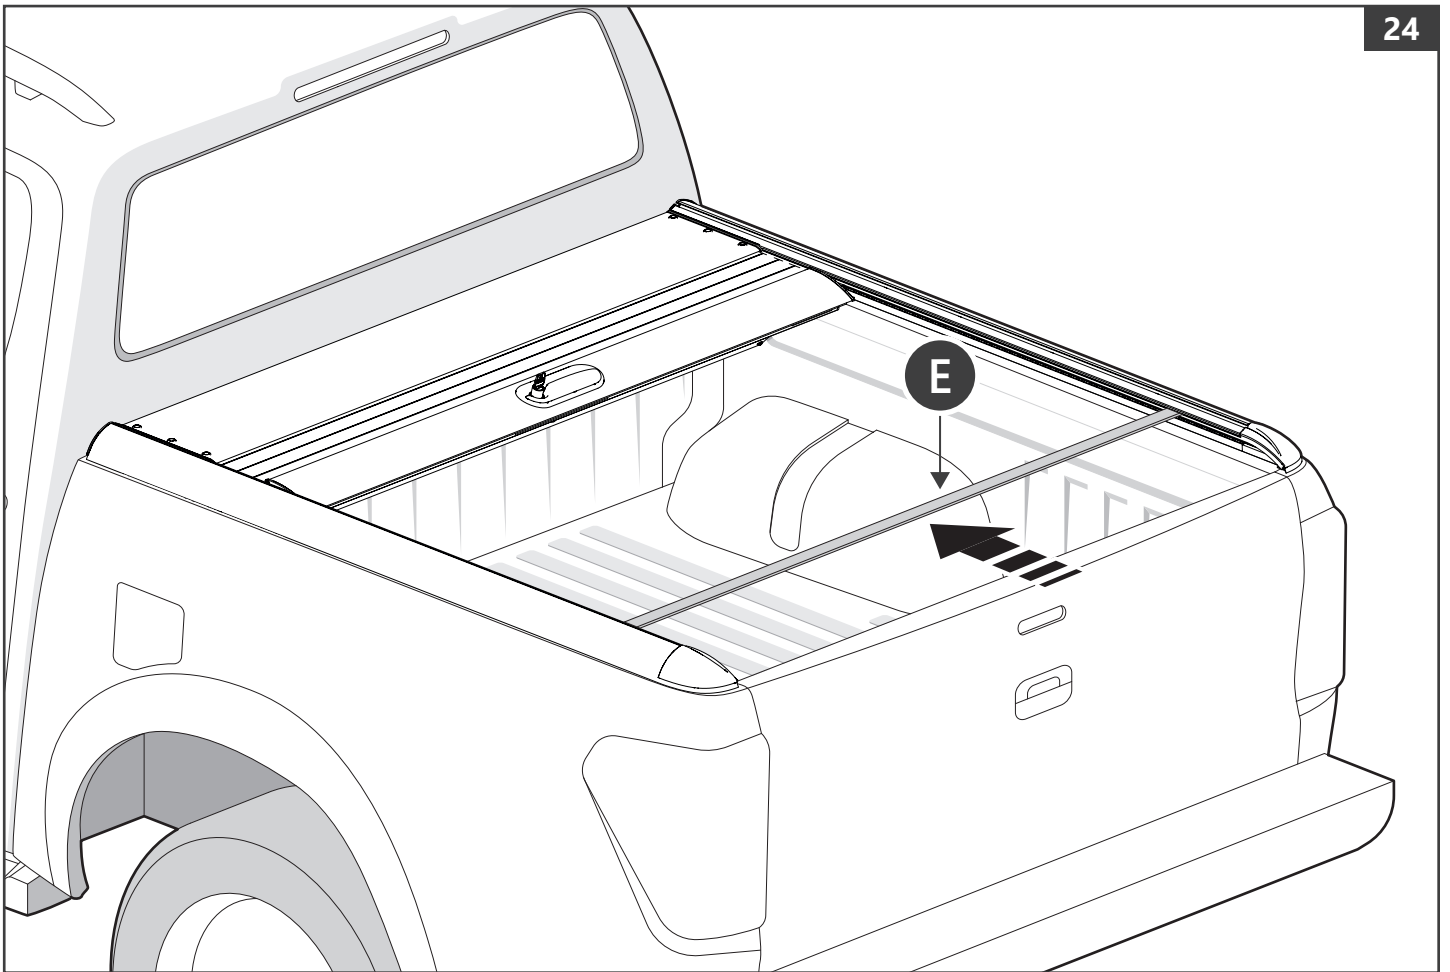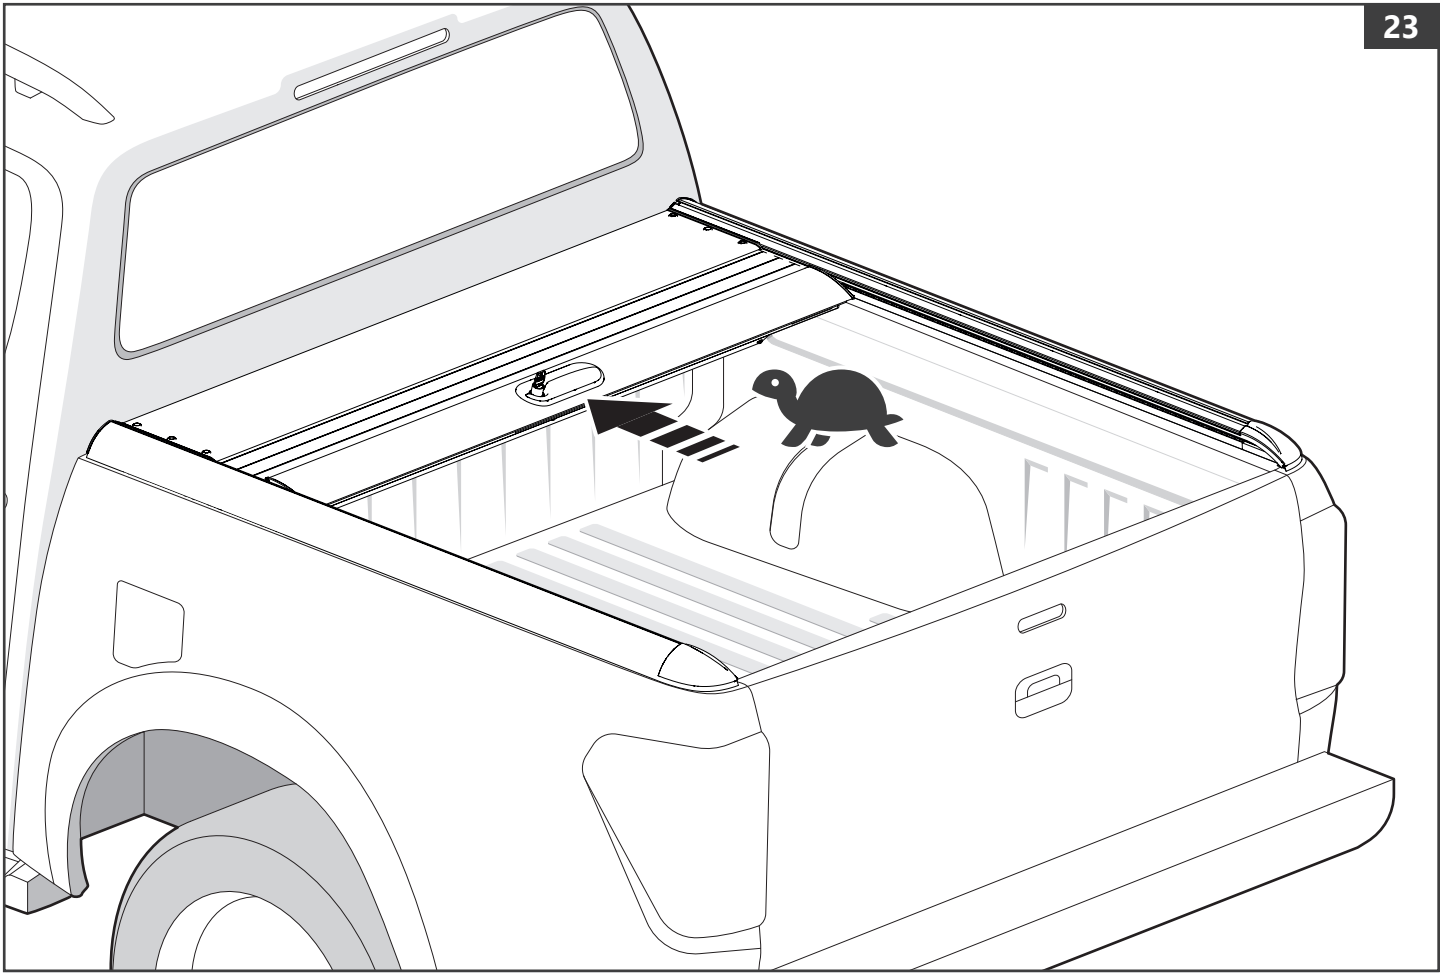


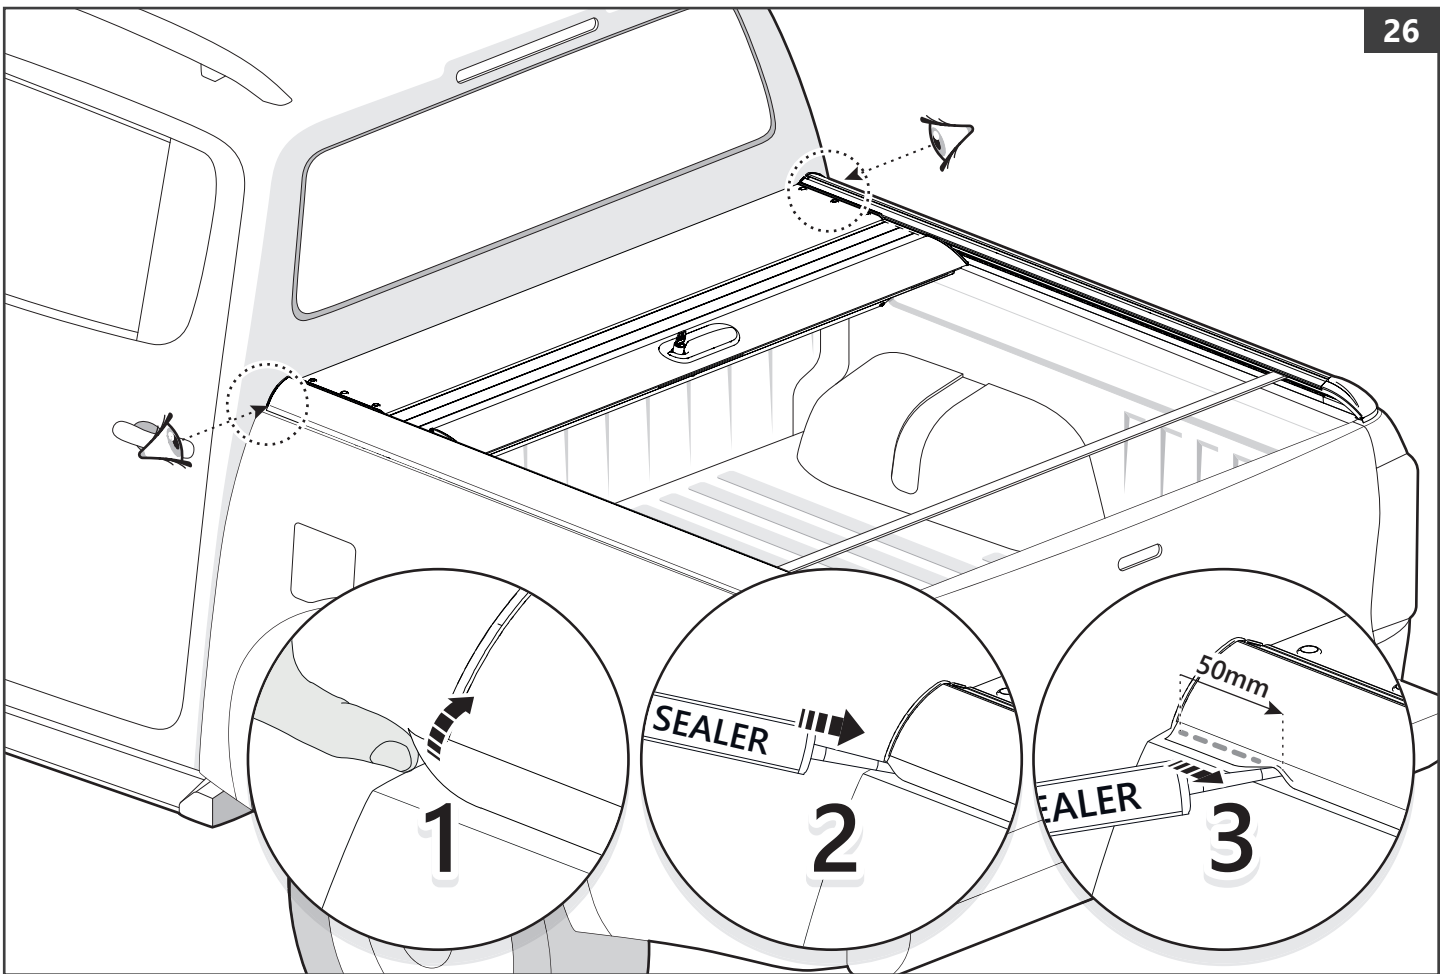
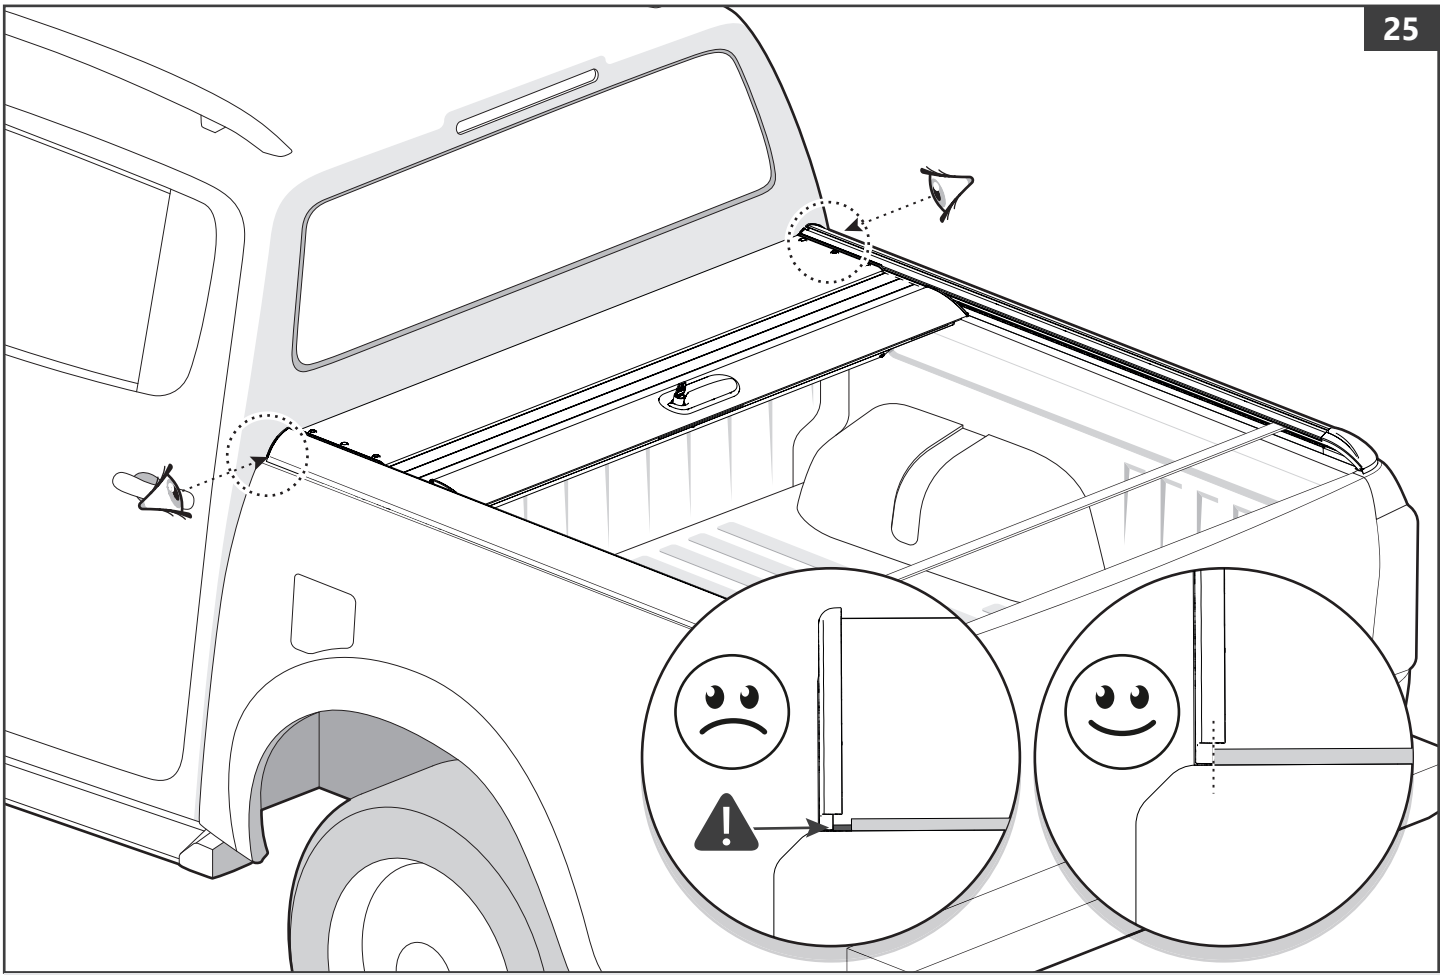


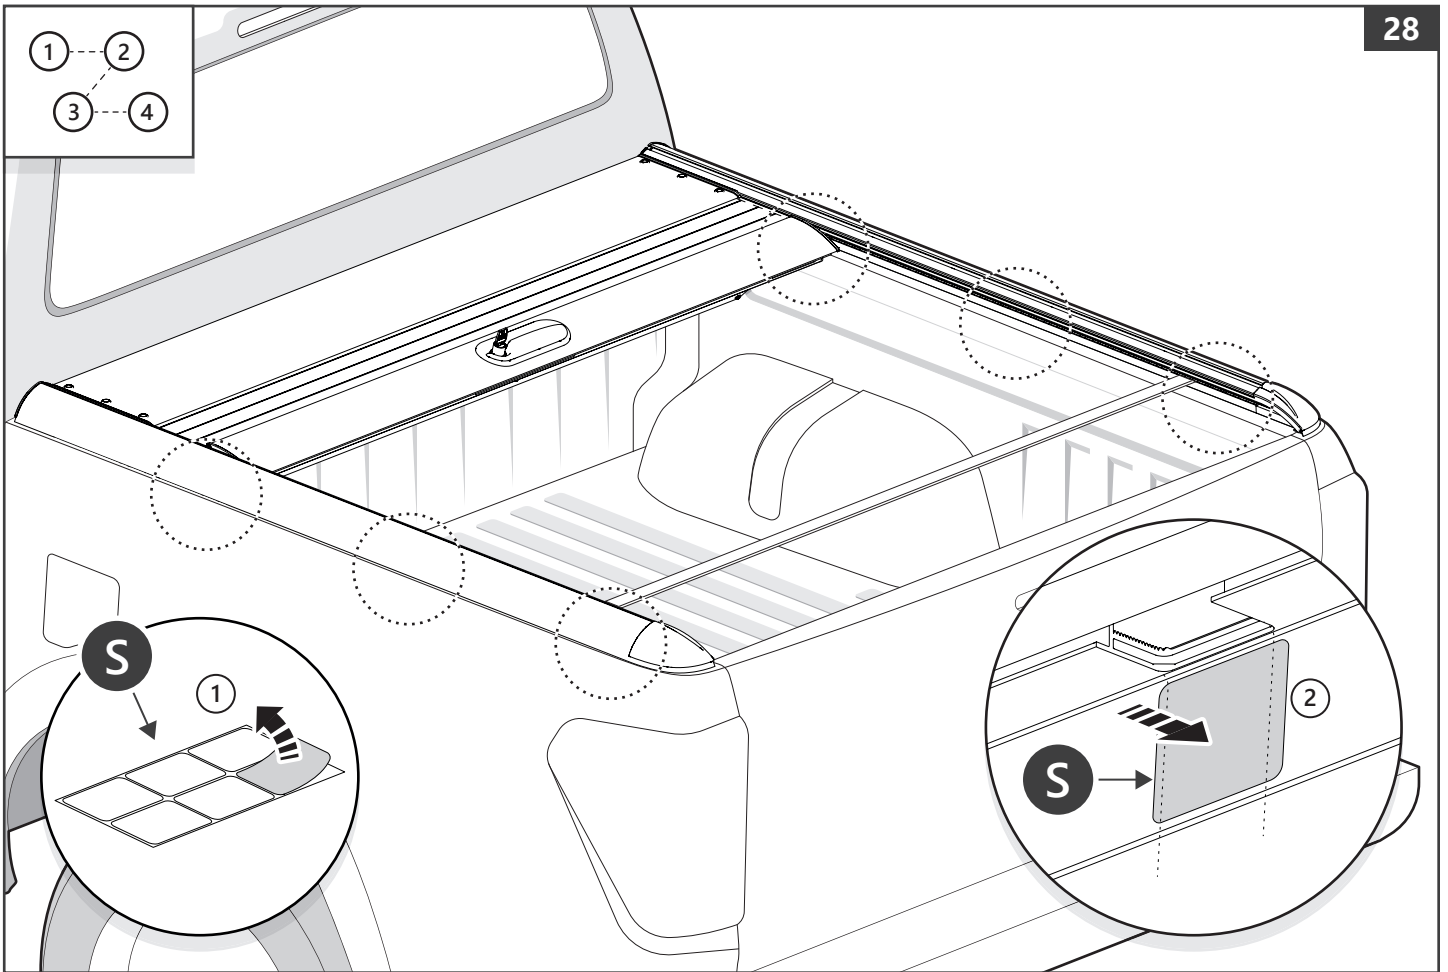
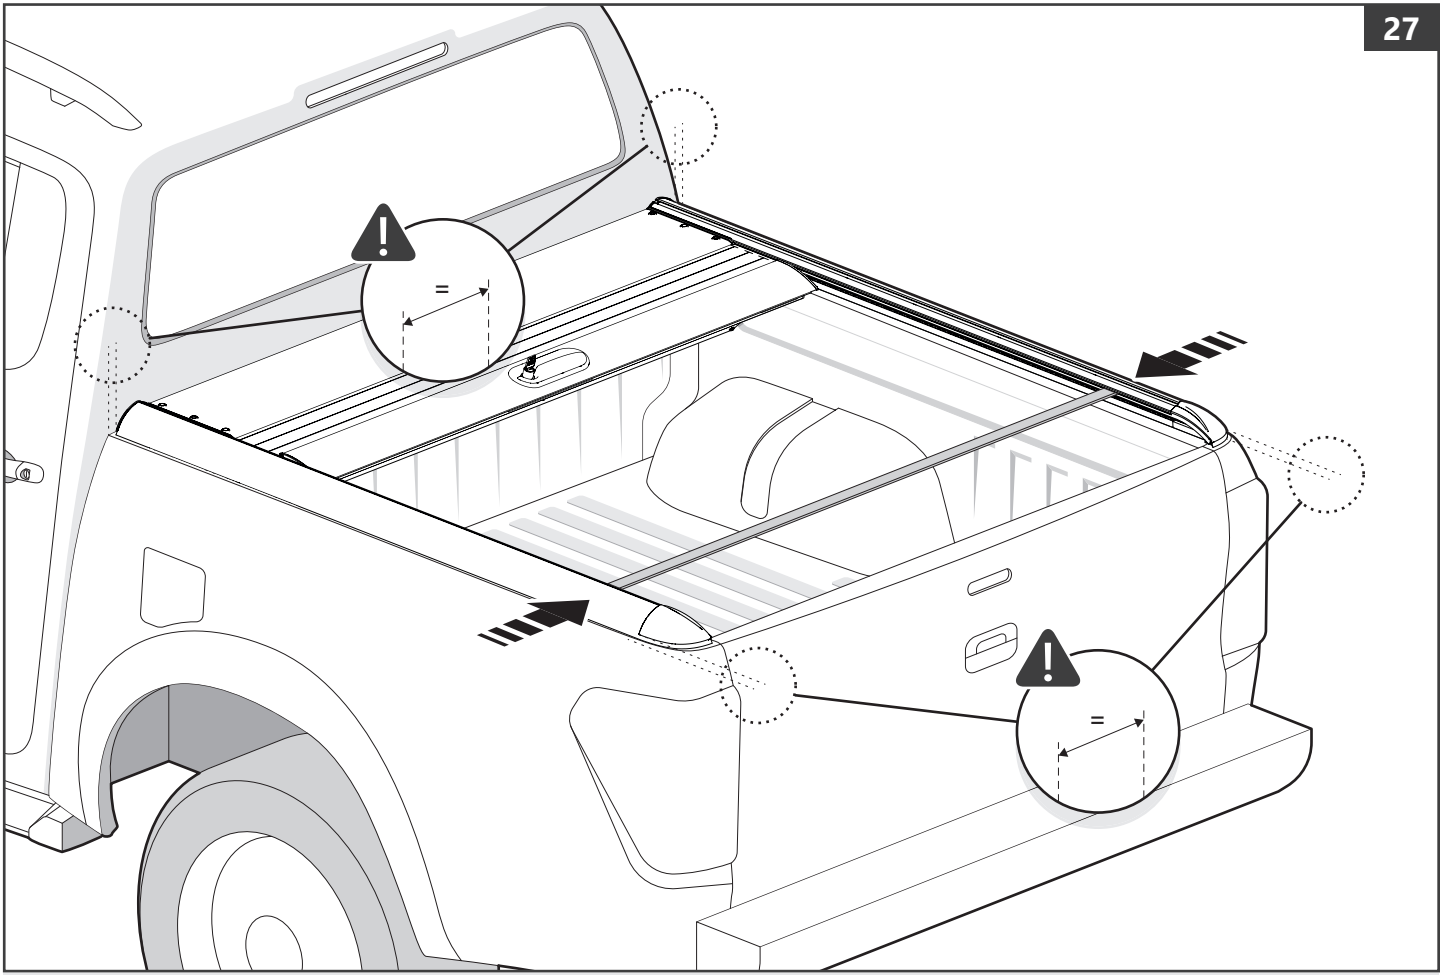



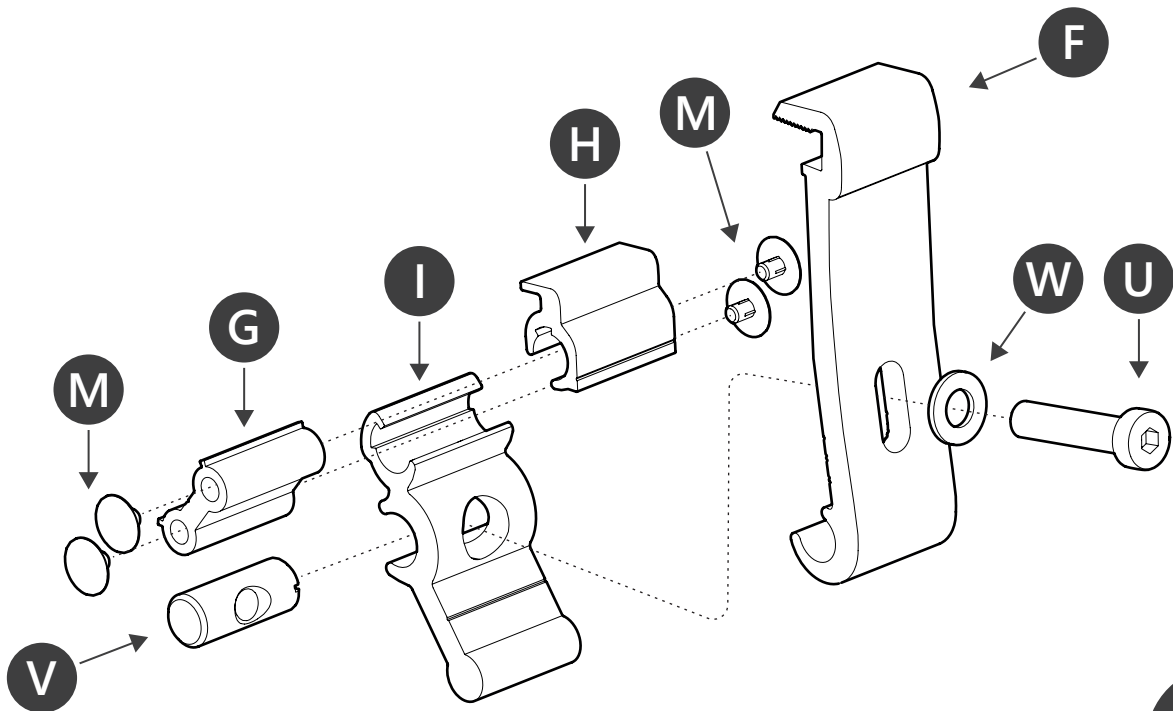




x 6

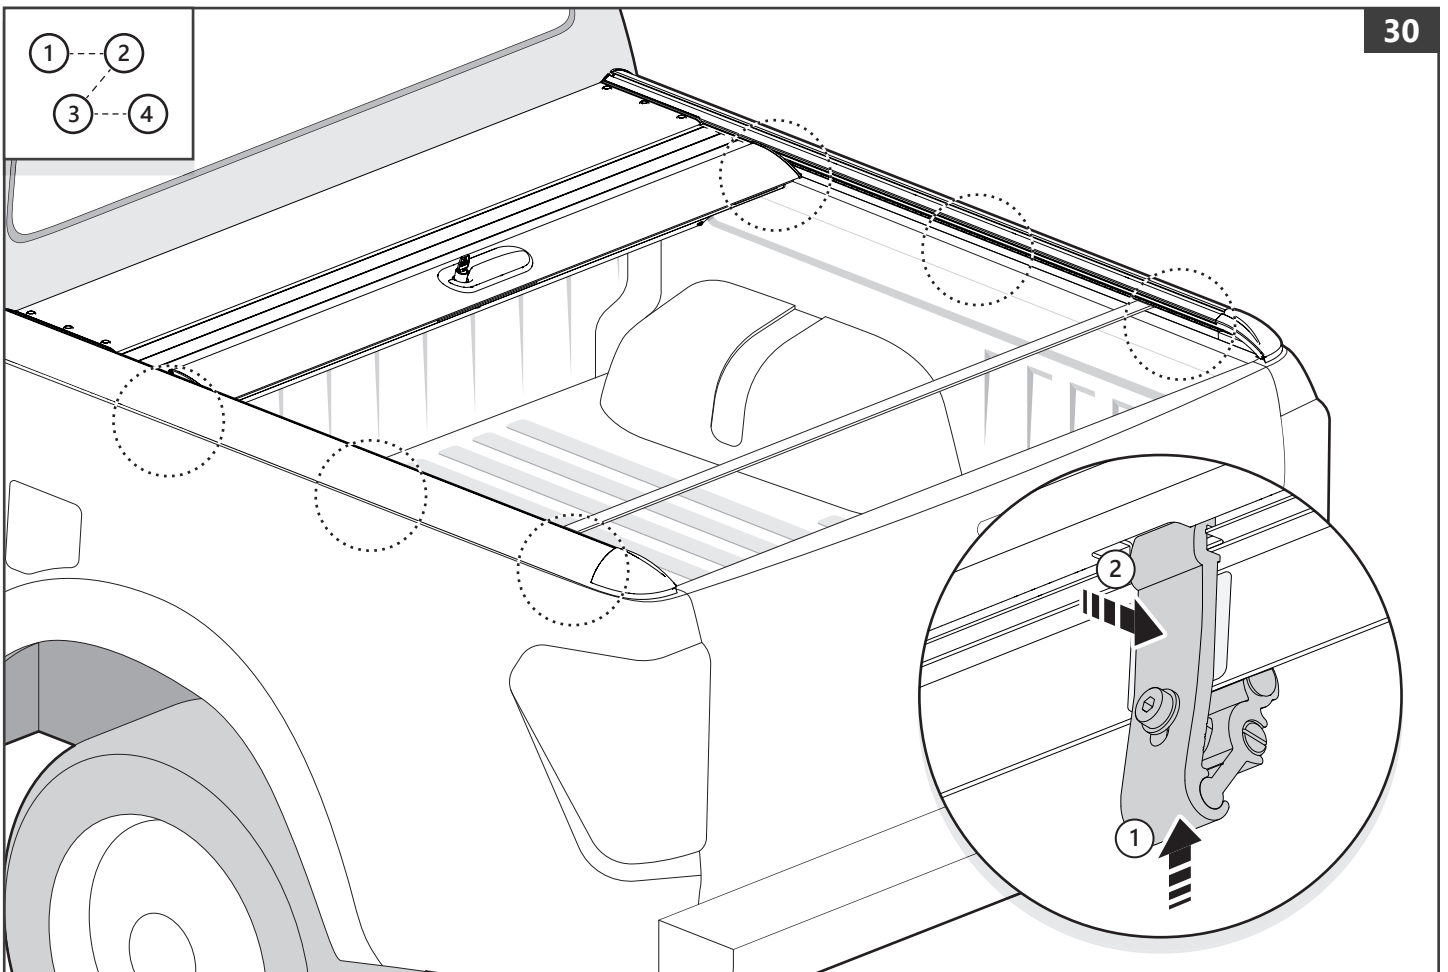

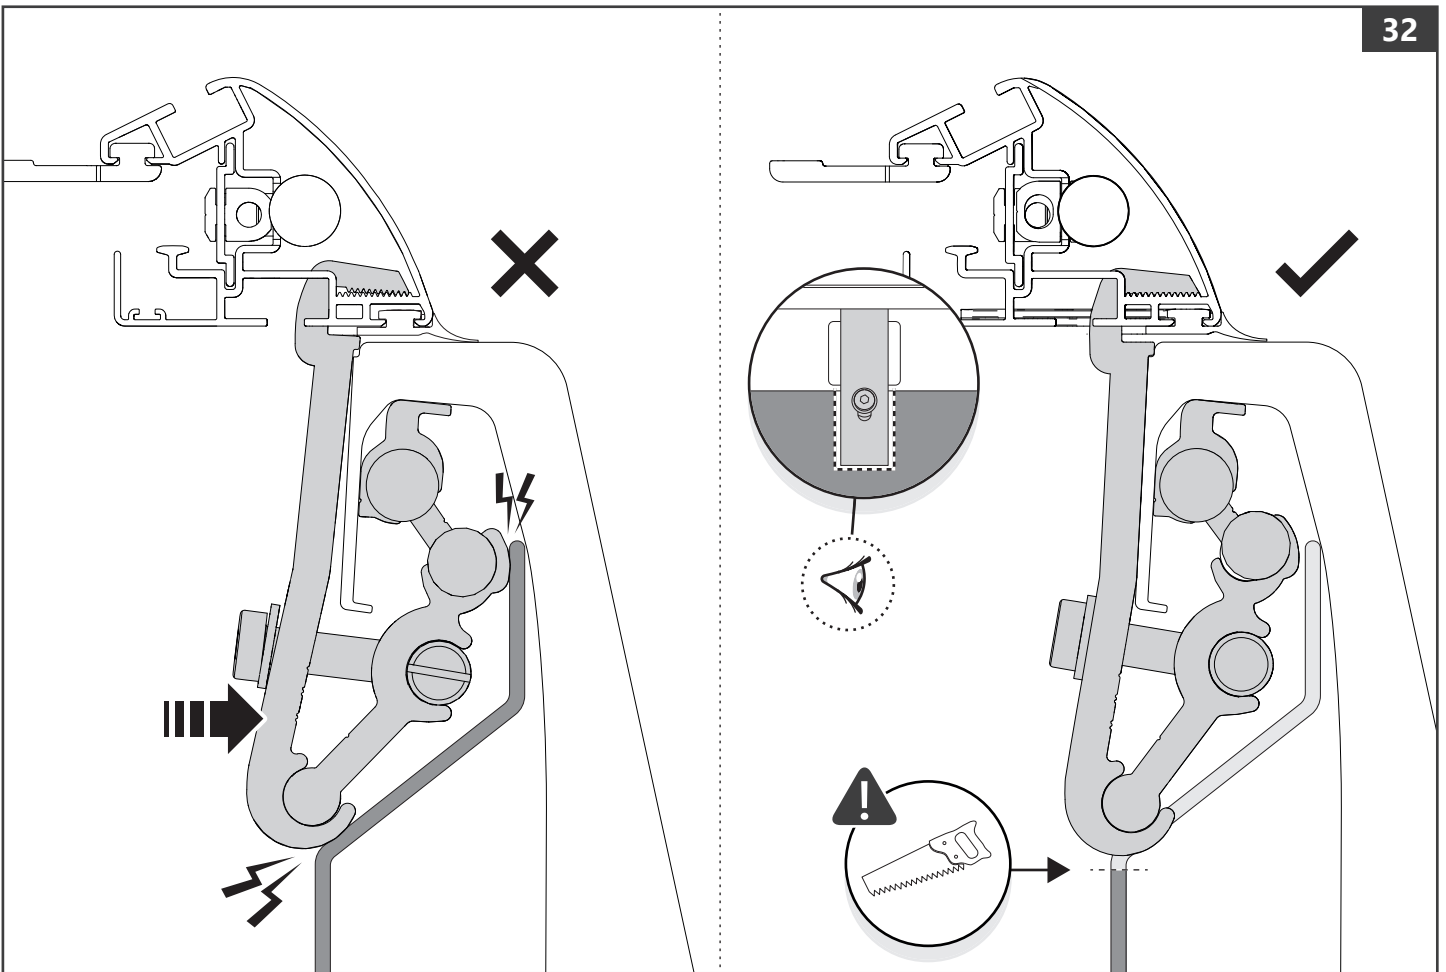
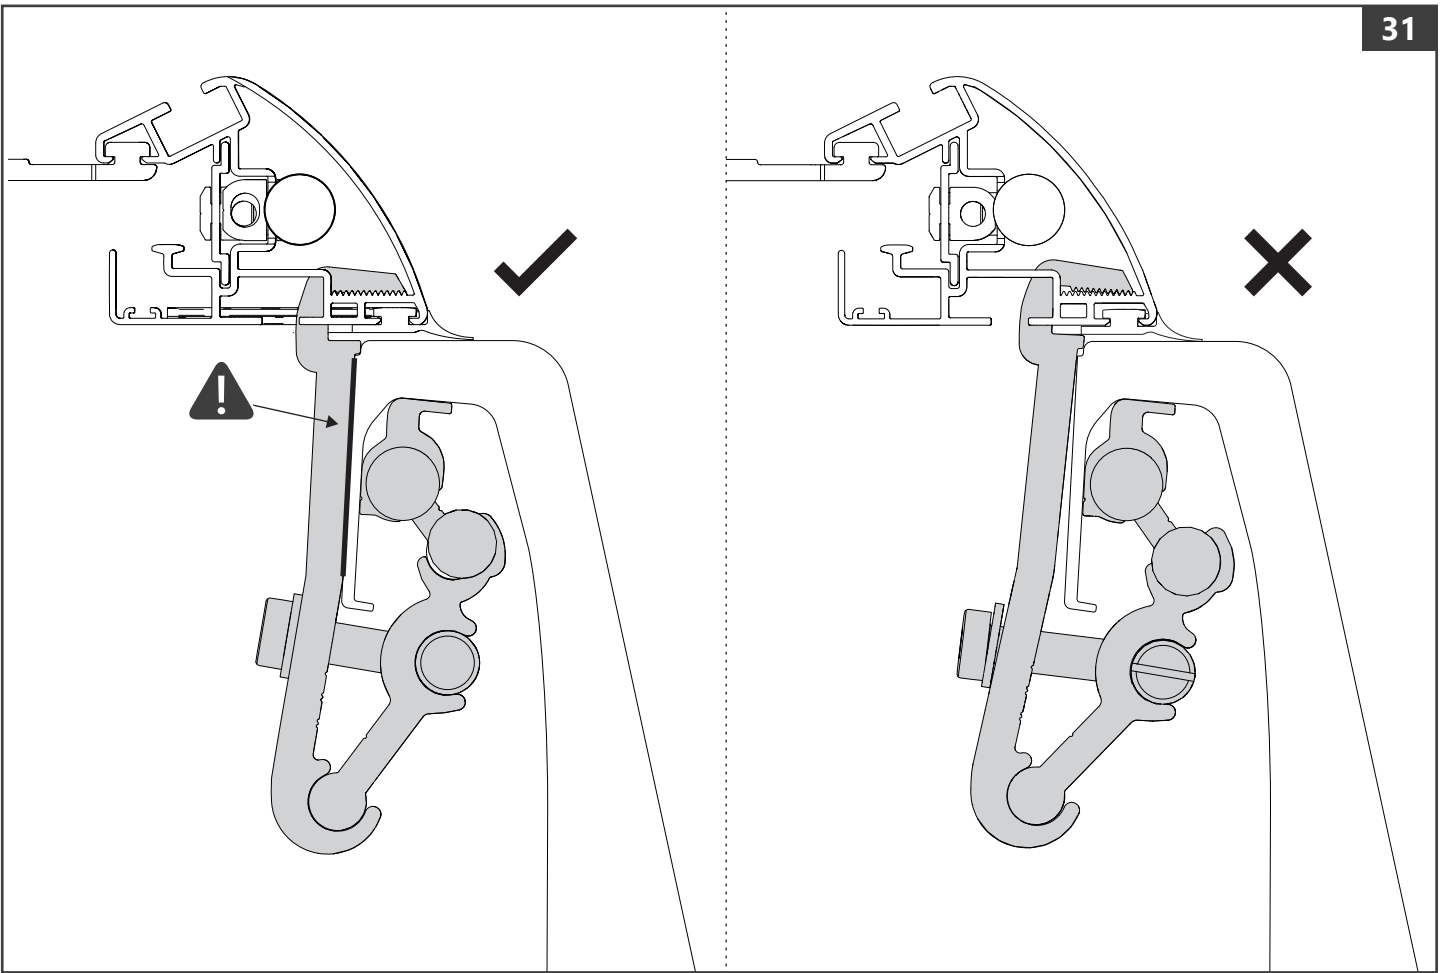


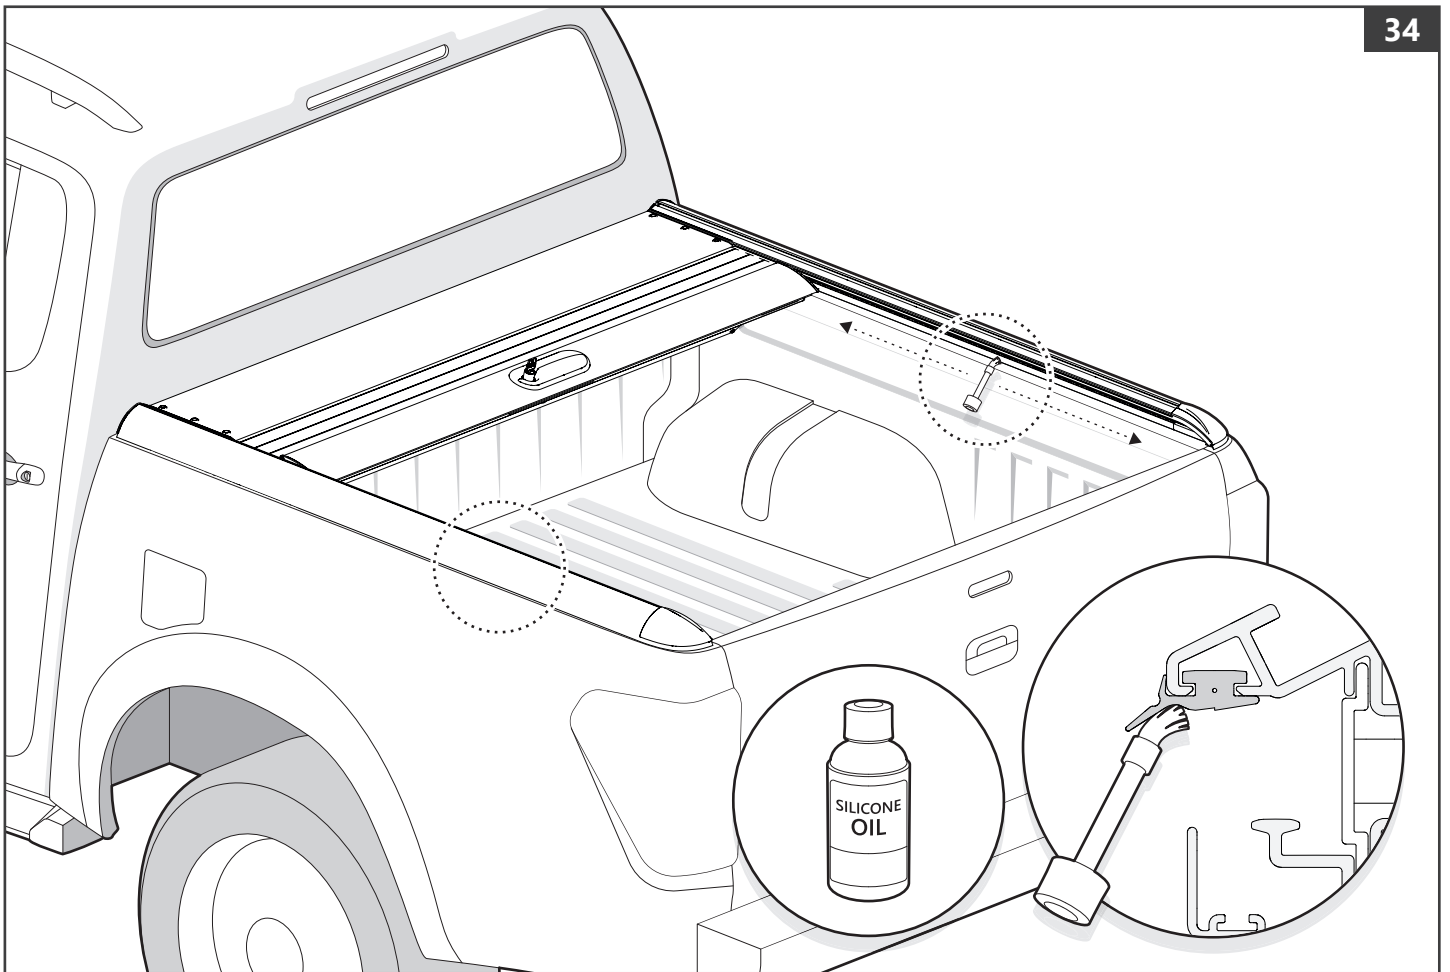
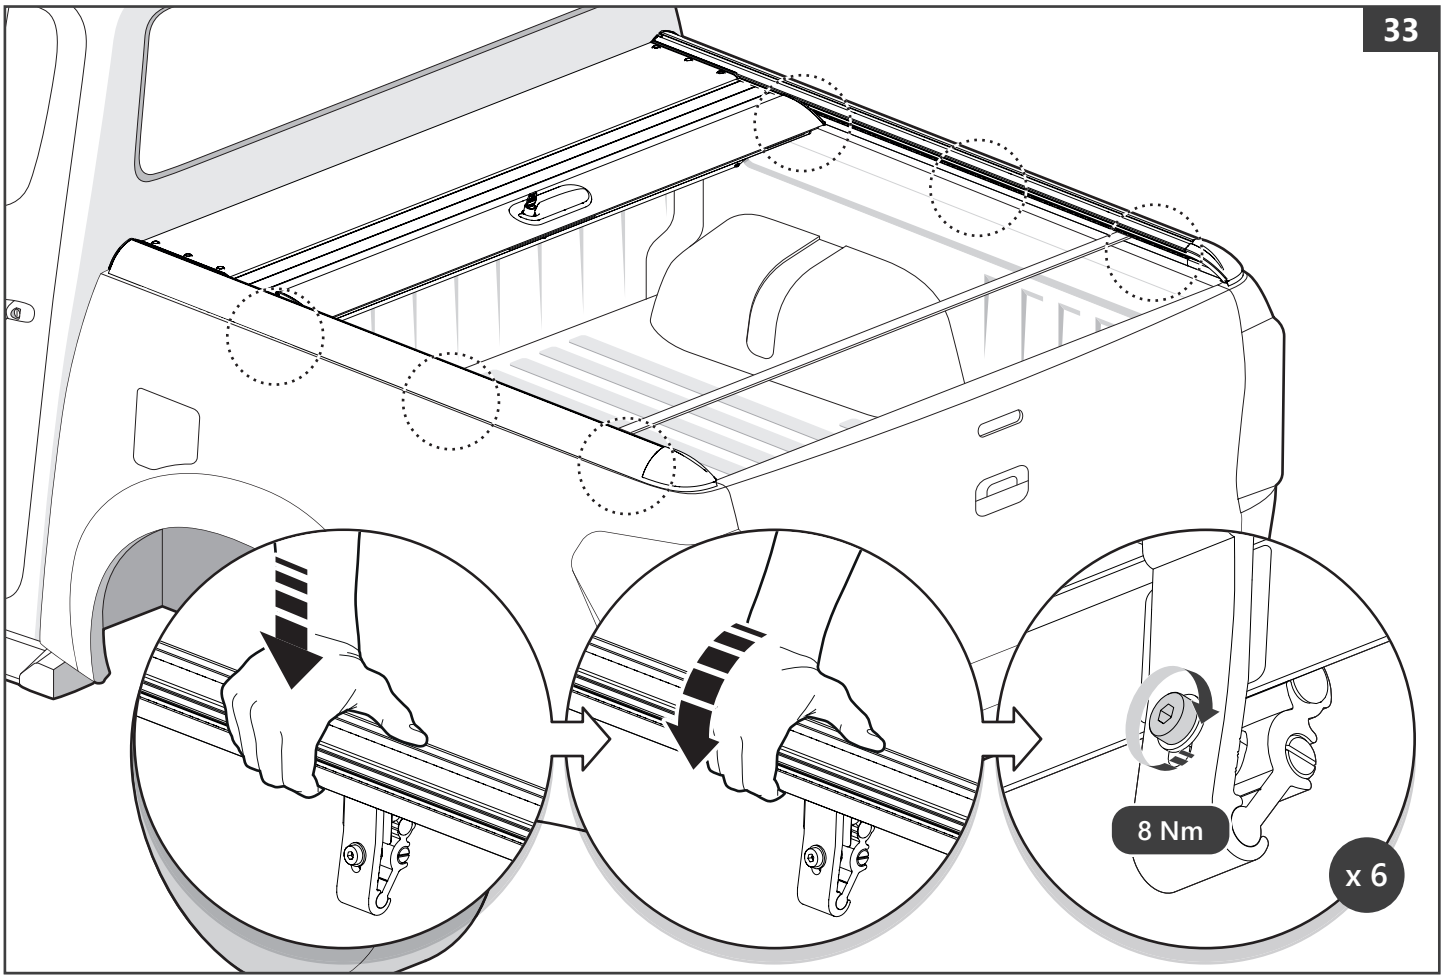


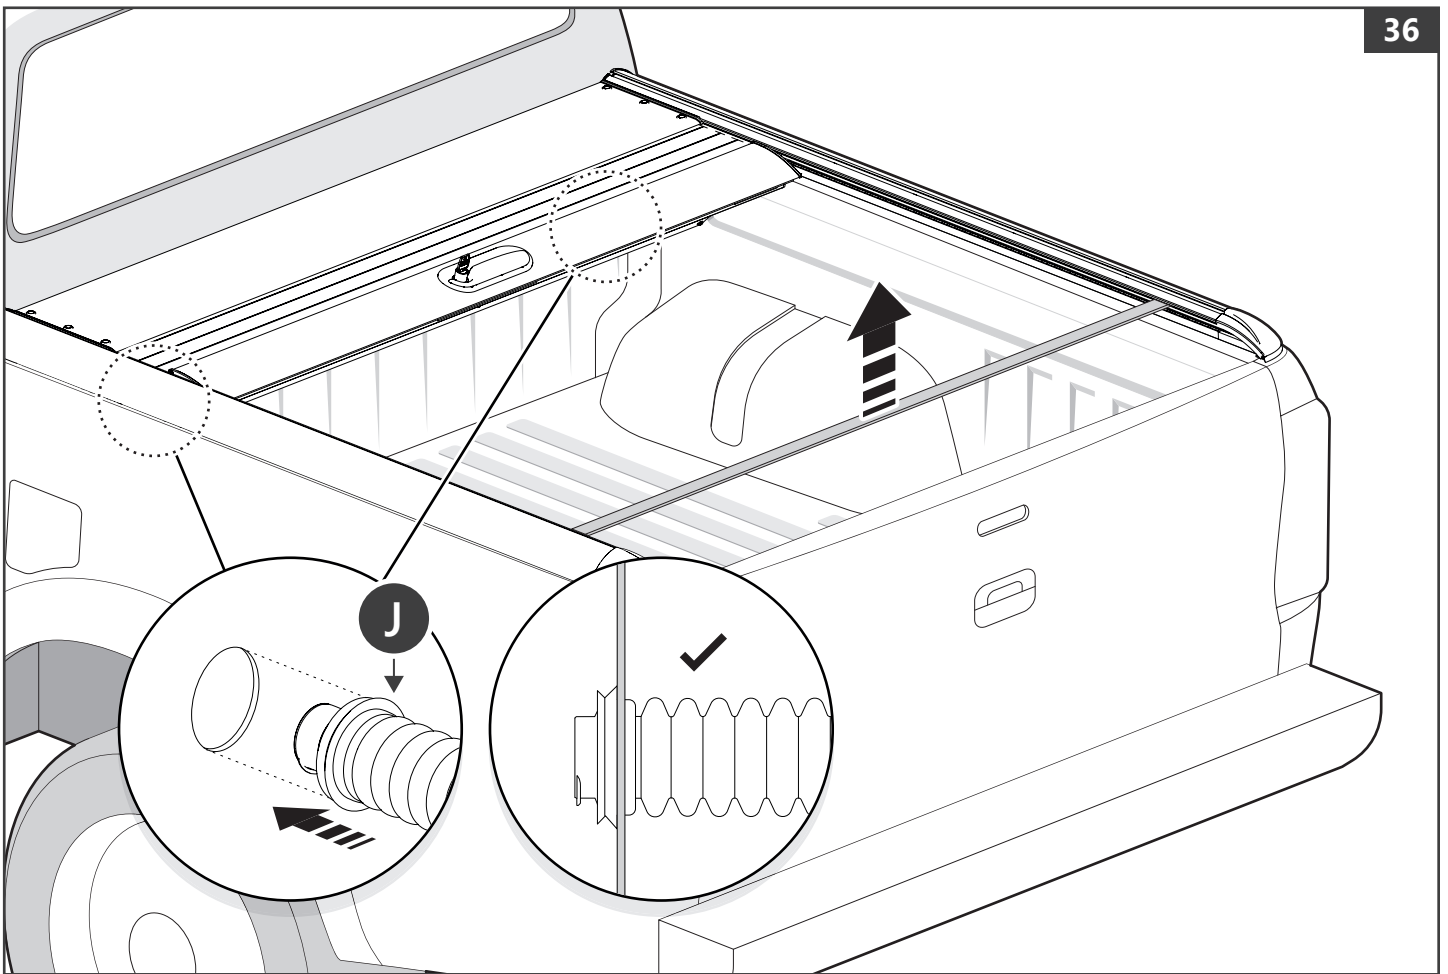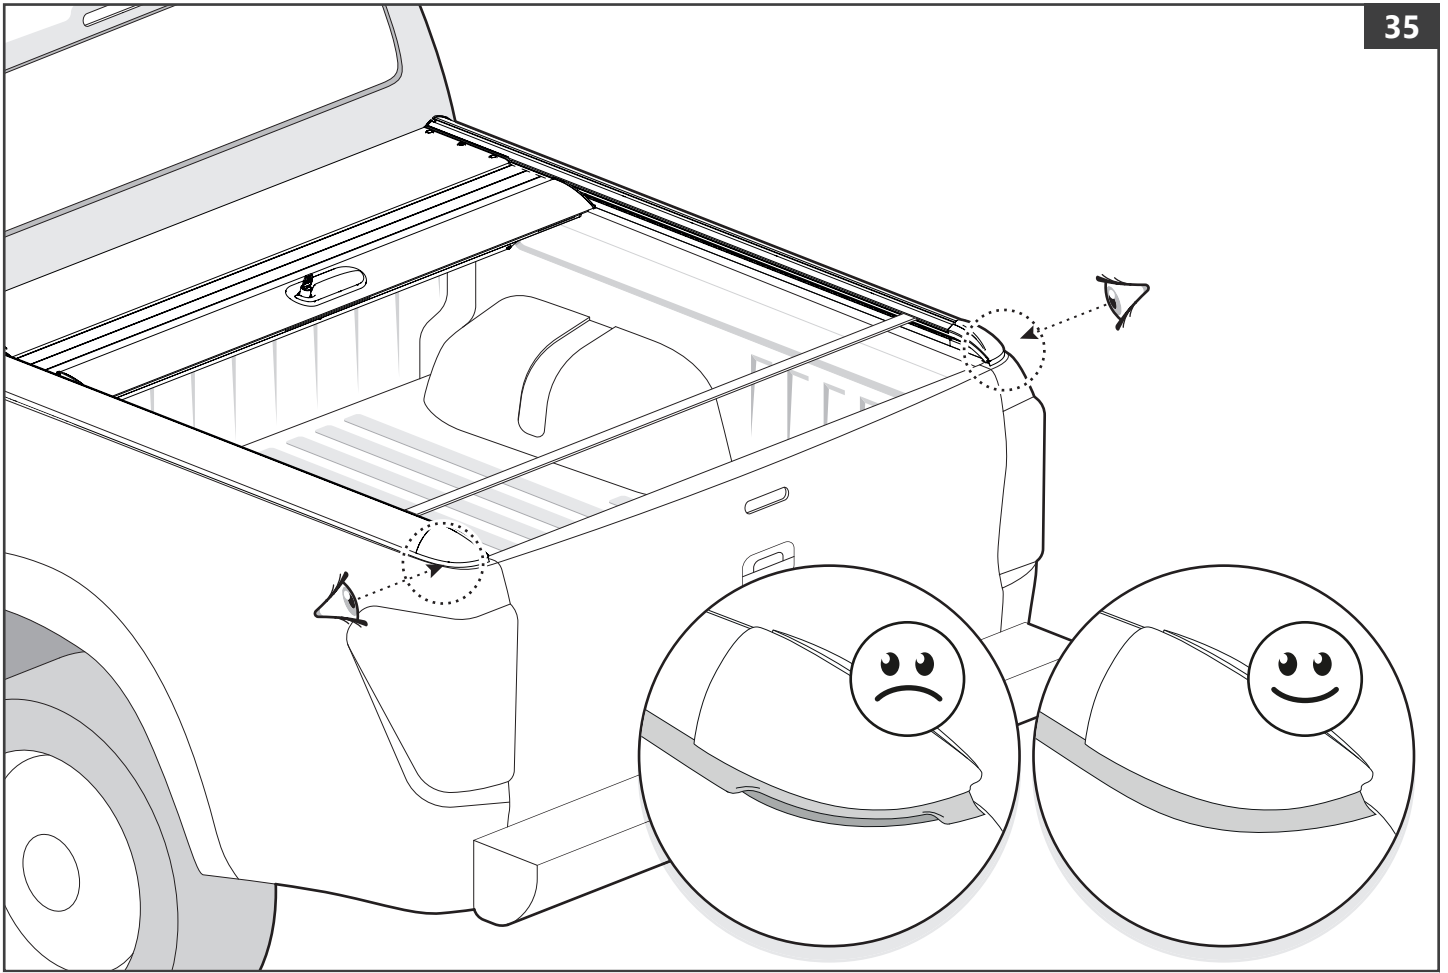

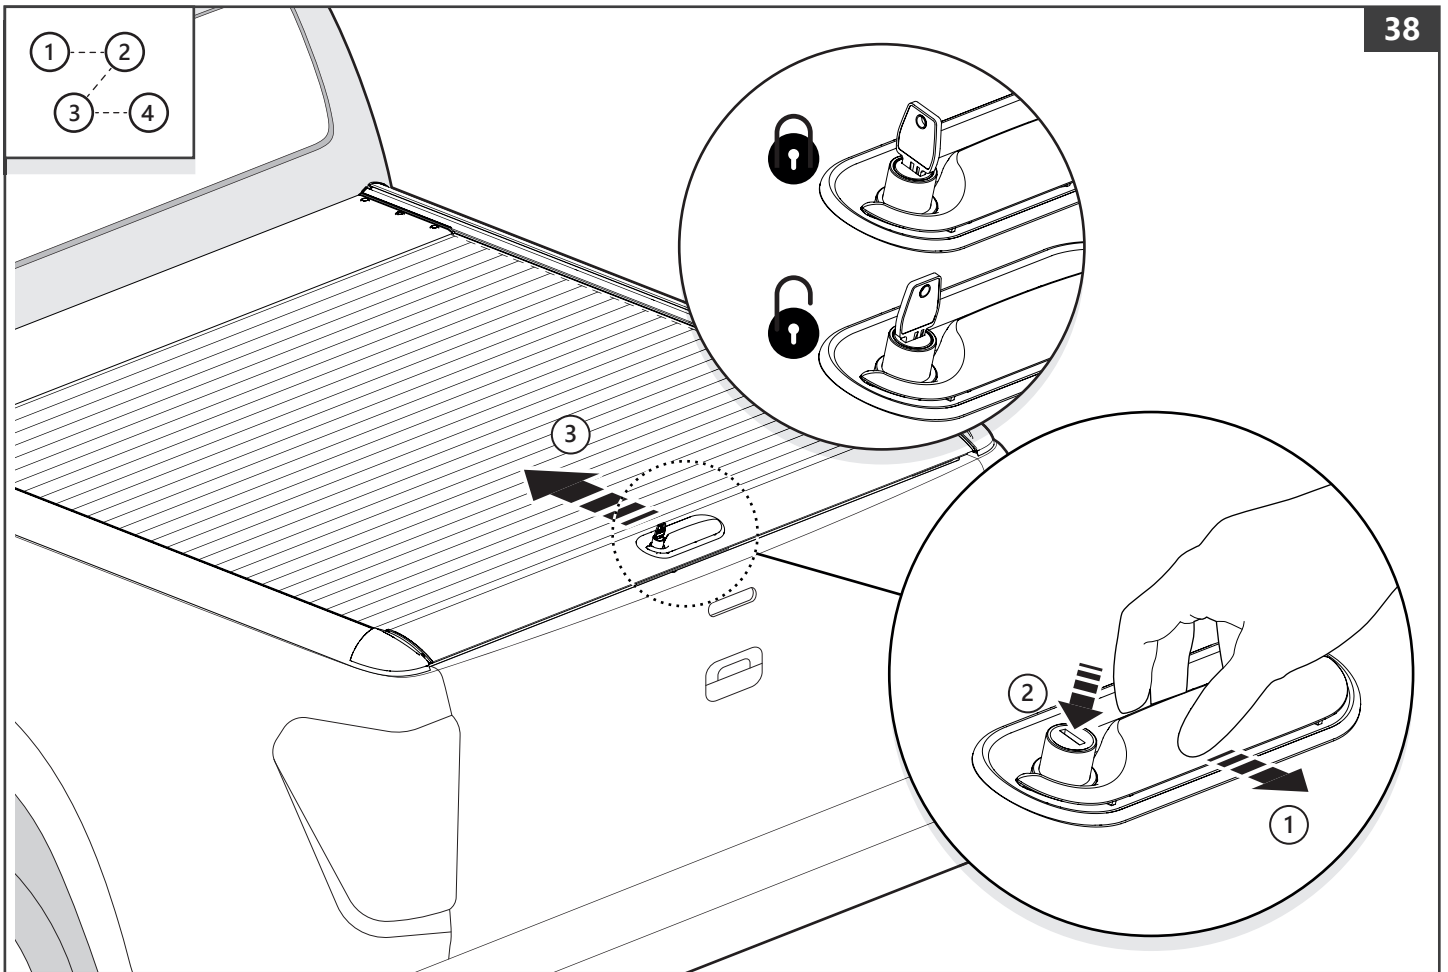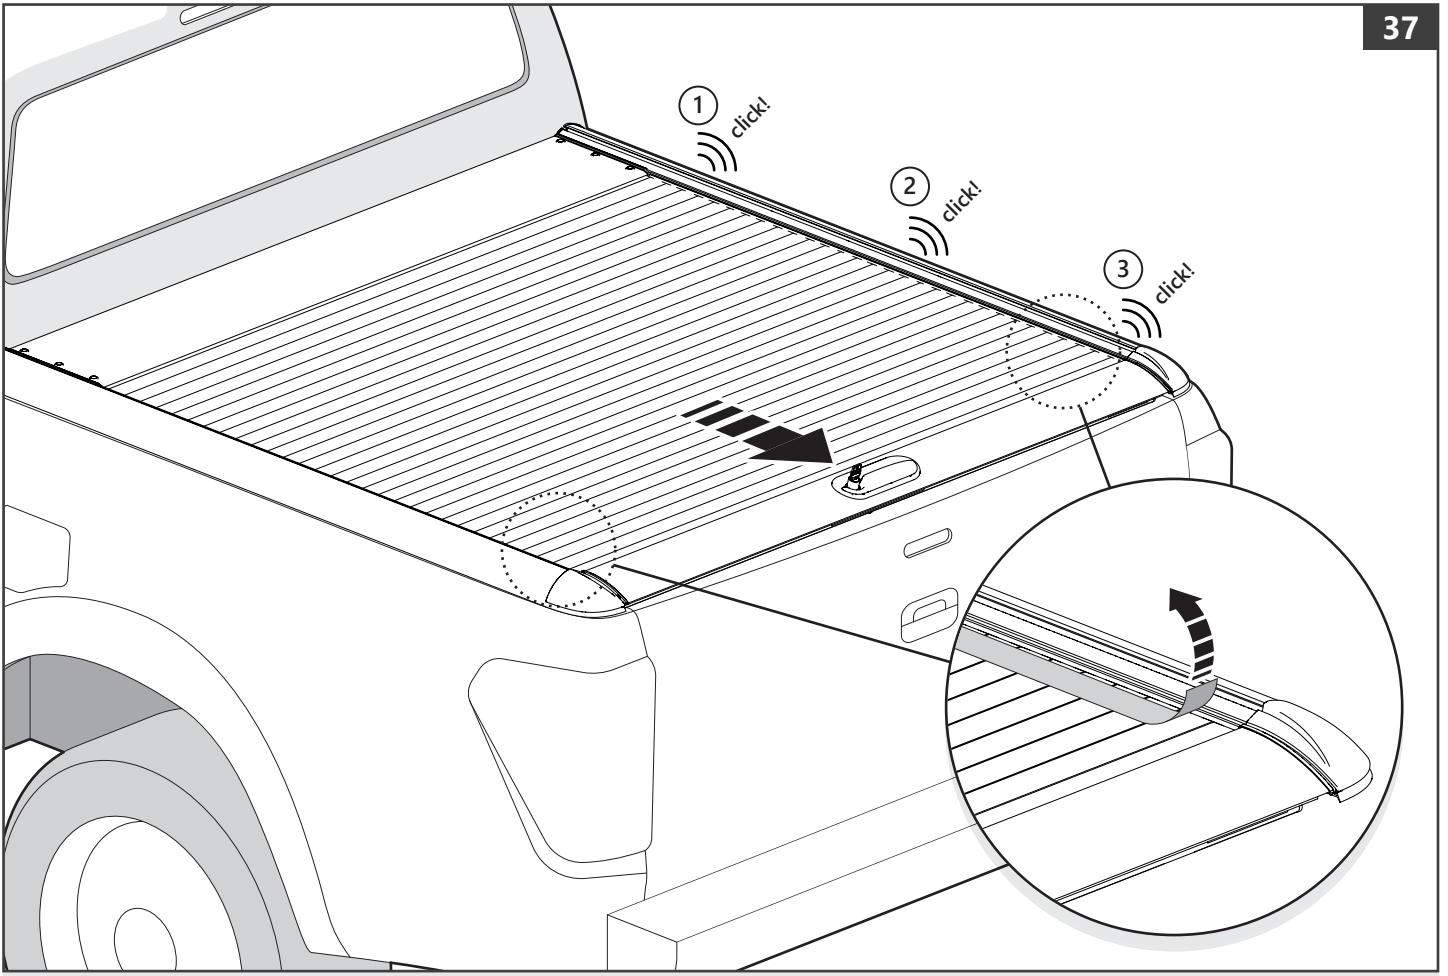



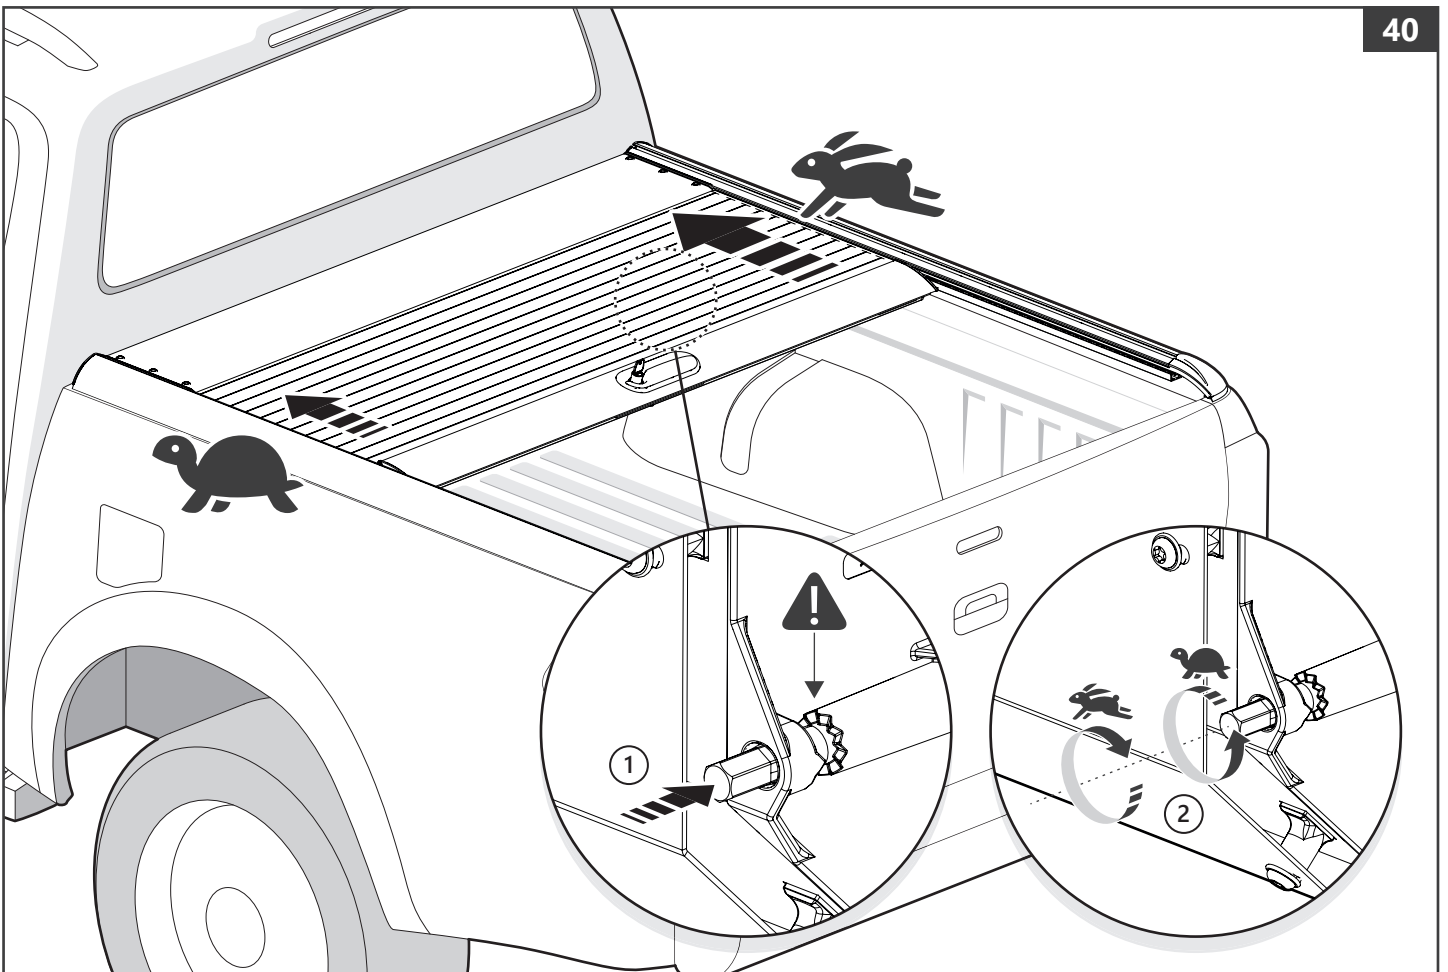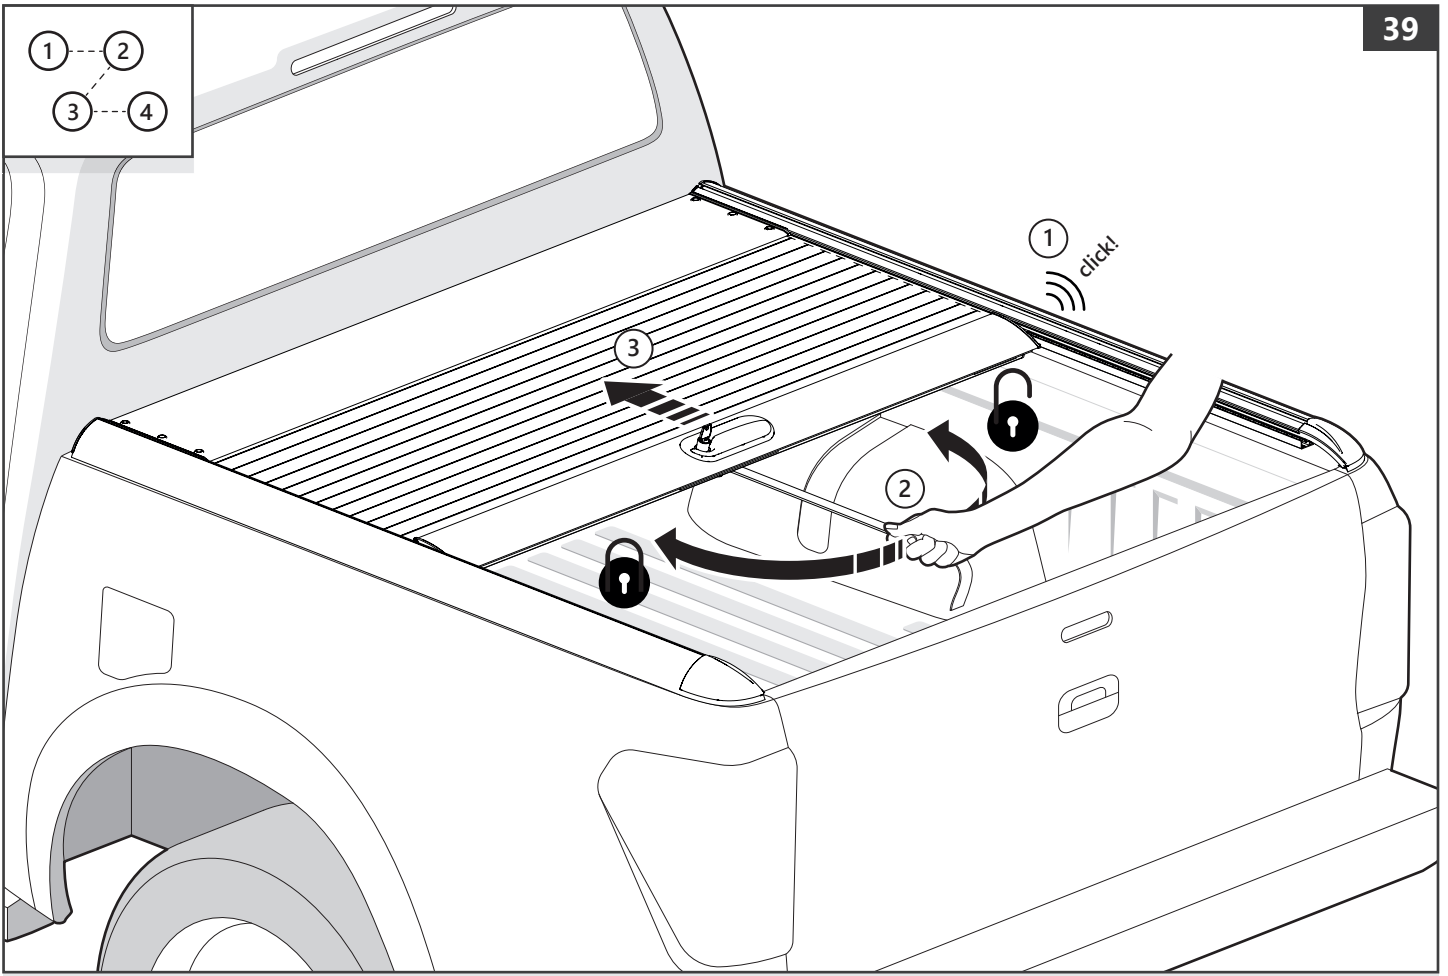

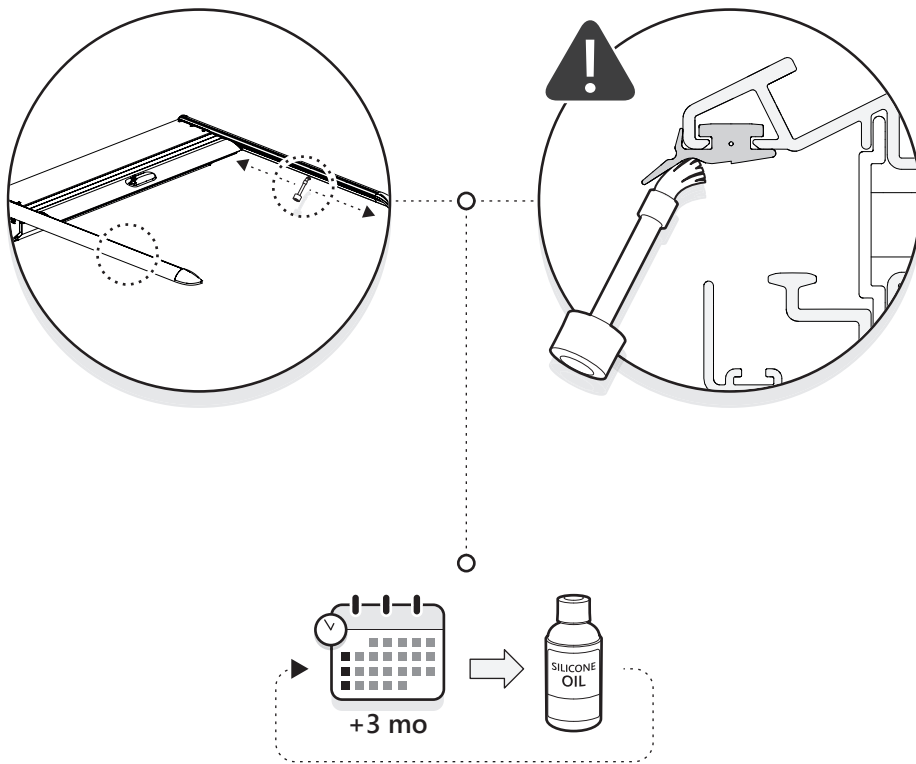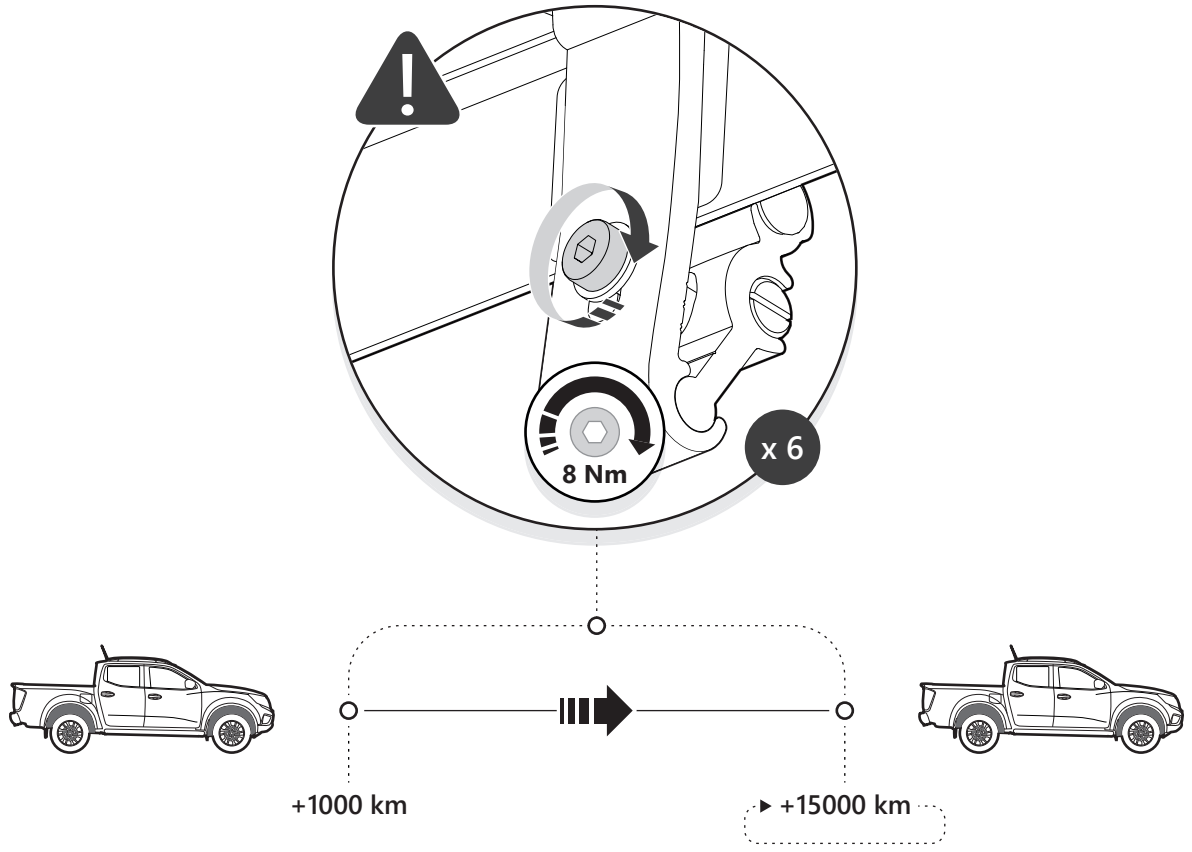





Customer Service +45 4810 2950 (08:00 - 16:00 CET)  
Fax +45 4810 2960  
Support info@mountaintop.dk  
Website www.mountaintop.dk  
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
MTR TO90/91	Toyota / 2015 →	Double / Extra	2 hour(s)	31 - 36 Kg
MTR RE90/91	Renault / 2017 →	Double / King	2 hour(s)	31 - 36 Kg

<b>GB</b> Installation manual	<b>S</b> Monteringsanvisning	<b>D</b> Einbauanleitung
<b>SF</b> Asennusohje	<b>E</b> Instrucciones de montaje	<b>CZ</b> Návod k instalaci
<b>F</b> Notice de montage	<b>H</b> Szerelési utasítás	<b>I</b> Istruzioni de montaggio
<b>PL</b> Instrukcja montażu	<b>P</b> Instruções de instalação	<b>GR</b> Οδηγίες Εγκατάστασης
<b>NL</b> Installatie-instructies	<b>RUS</b> Инструкция по установке	<b>DK</b> Monteringsvejledning
<b>TR</b> Montaj Talimatı	<b>N</b> Monteringsveiledning	<b>RO</b> Instructiuni de instalare