

Sports Bar - Adapter kit

Installation manual




DOWNLOAD PDF



Parts


A

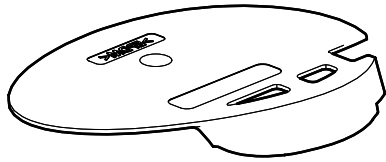

REAR LEFT

x 1


B

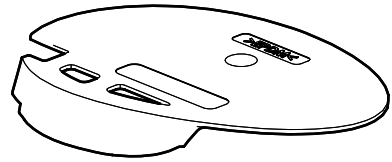

REAR RIGHT

x 1


C

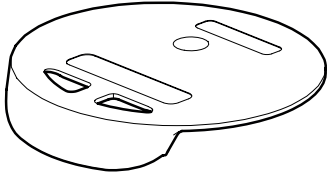

MIDDLE LEFT

x 1


D

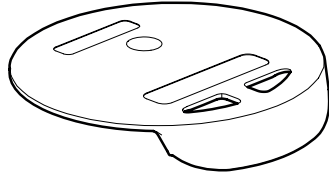

MIDDLE RIGHT

x 1

E

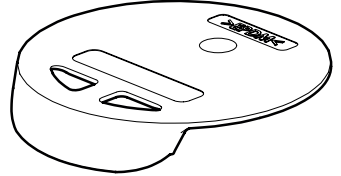


FRONT

x 2




Kit

F

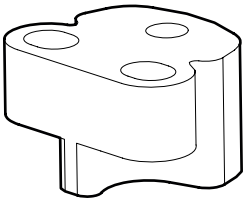


x 2

G

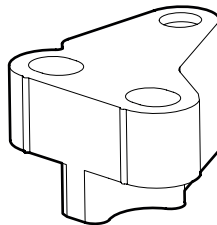

x 2


H

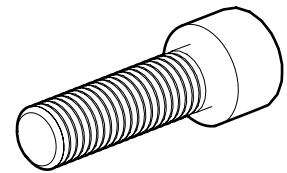

M10x35


x 4

I

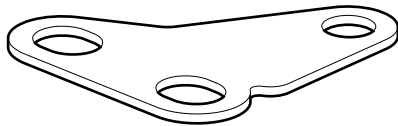


x 2

J

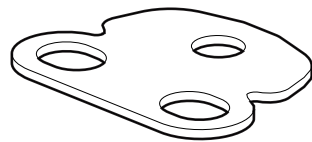

x 2

K




M10

x 4





Manual(s)

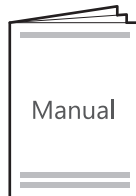

x 1




Tools and materials needed

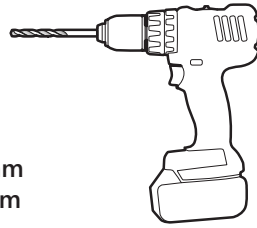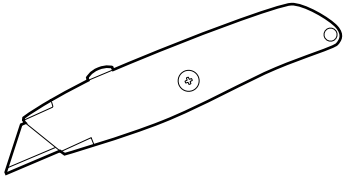

Ø 3,5mm
Ø 14 mm




1 - 25 Nm


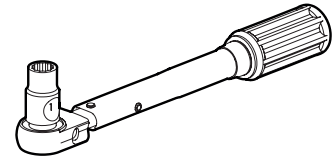





5+6+8 mm

1

Applying rust protection

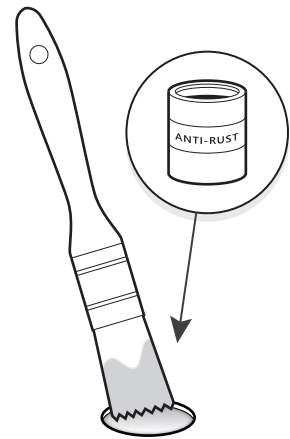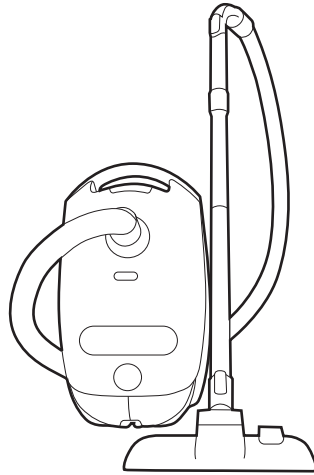
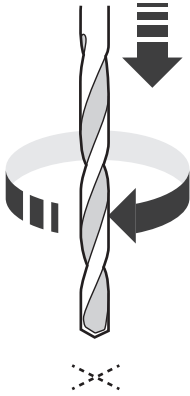


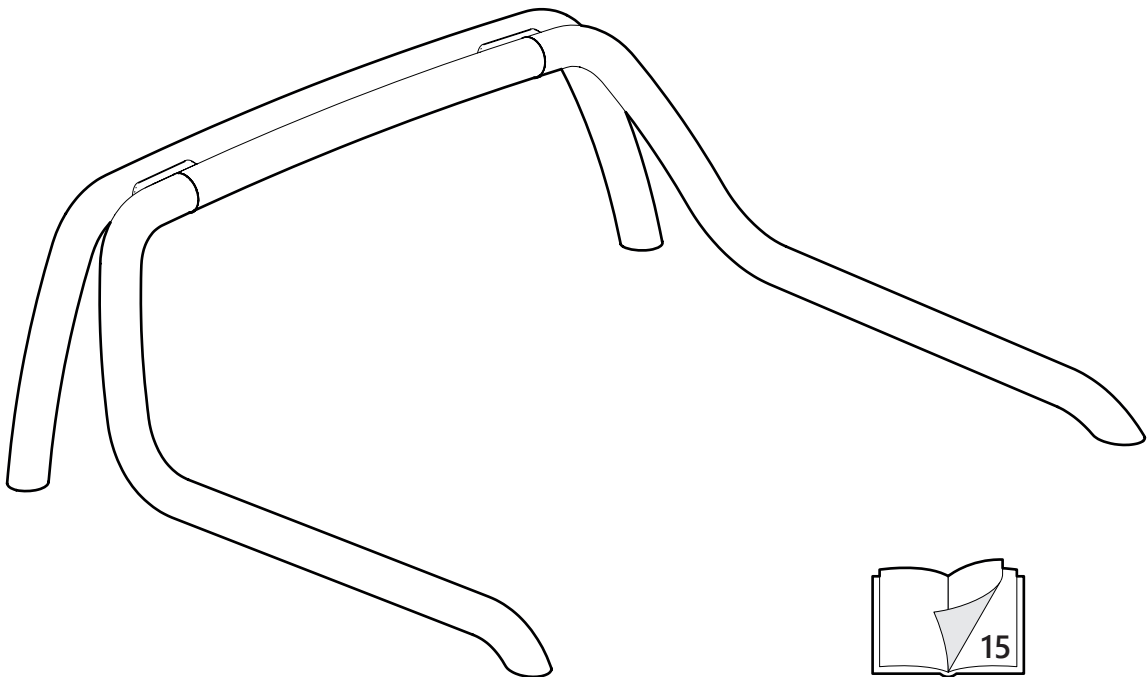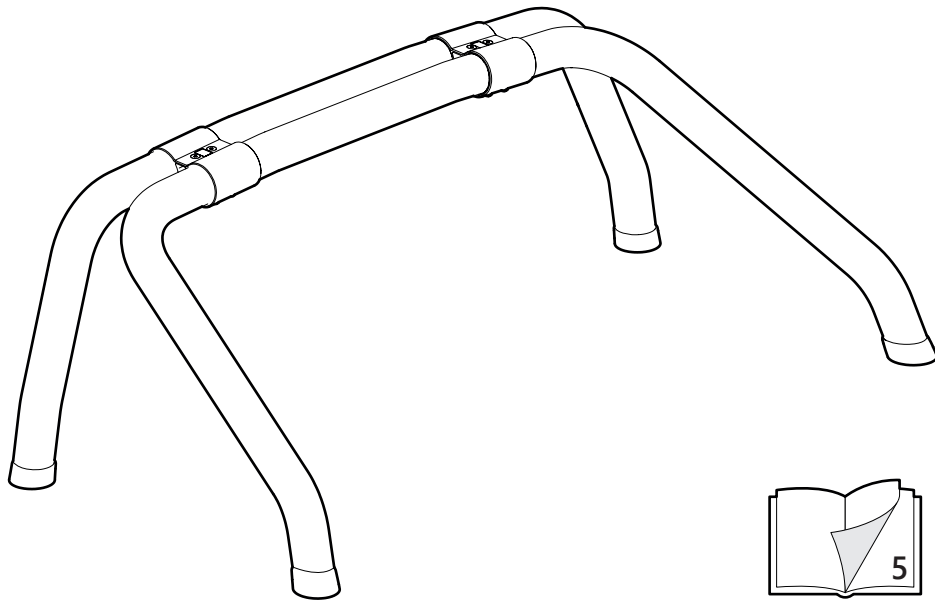

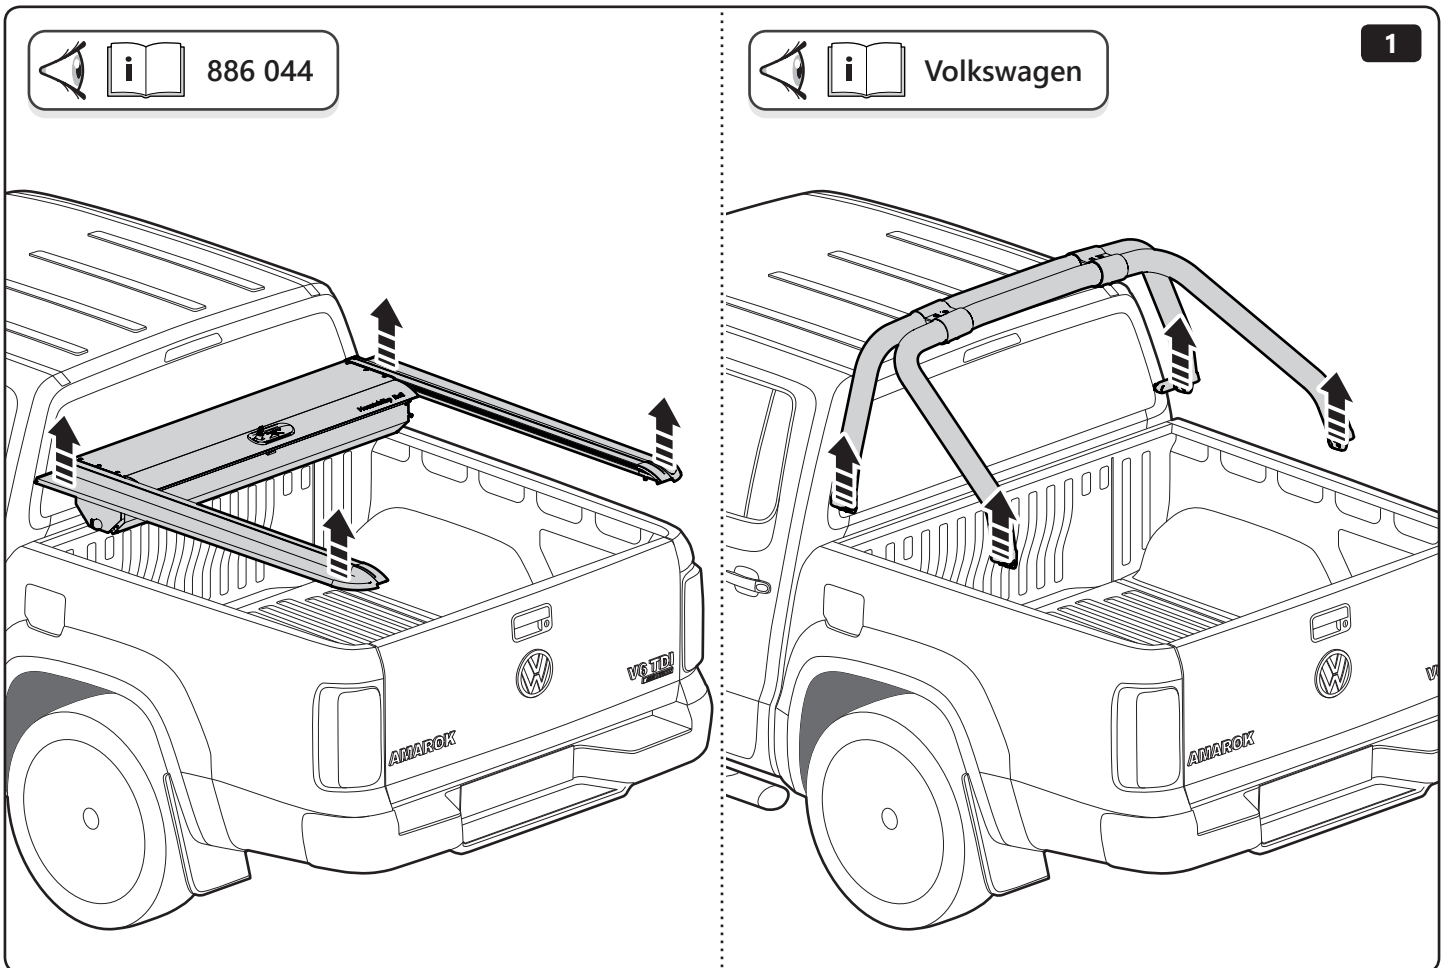
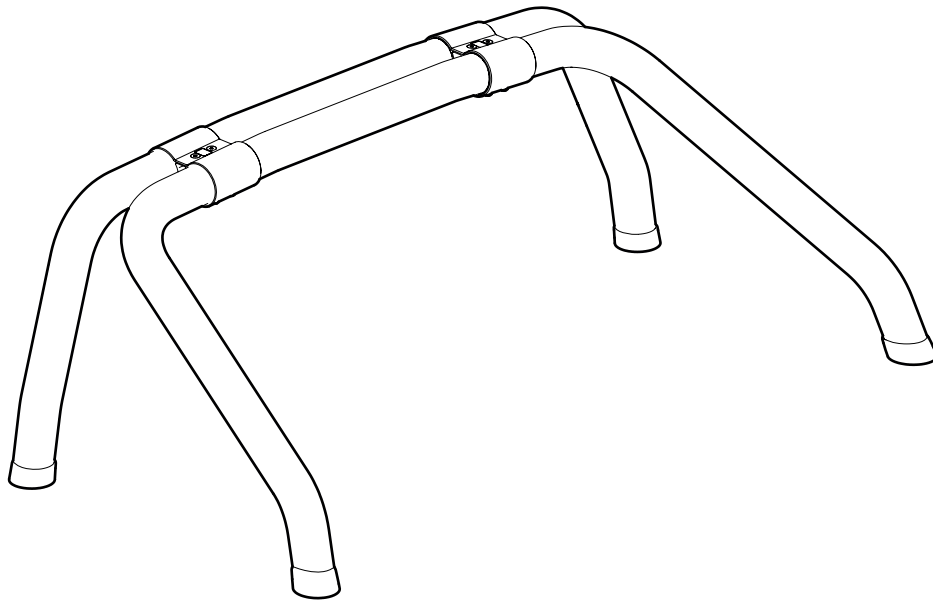



Ø 3,5 + 14mm

! Rust Protection

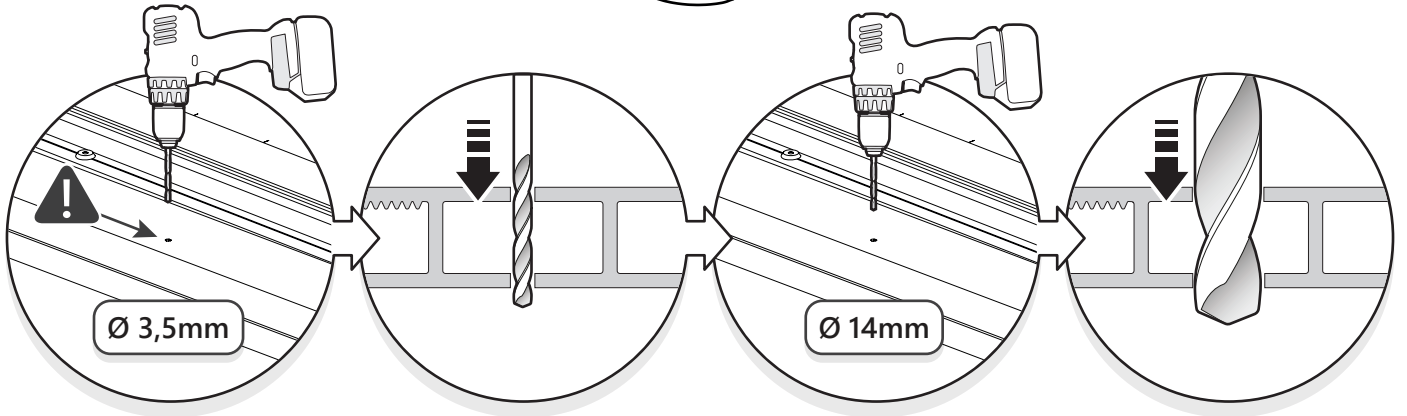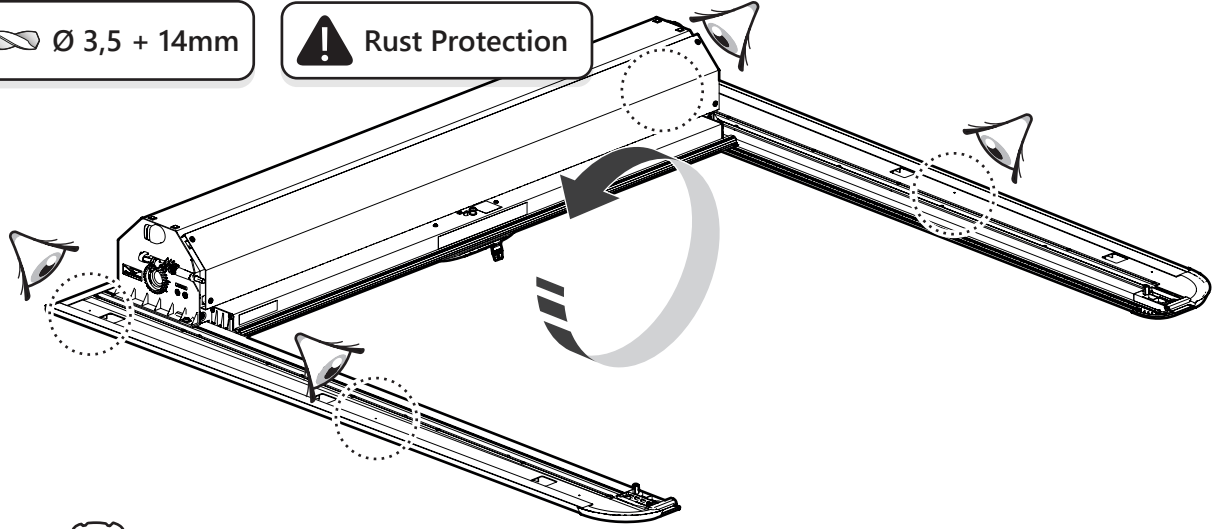


6mm

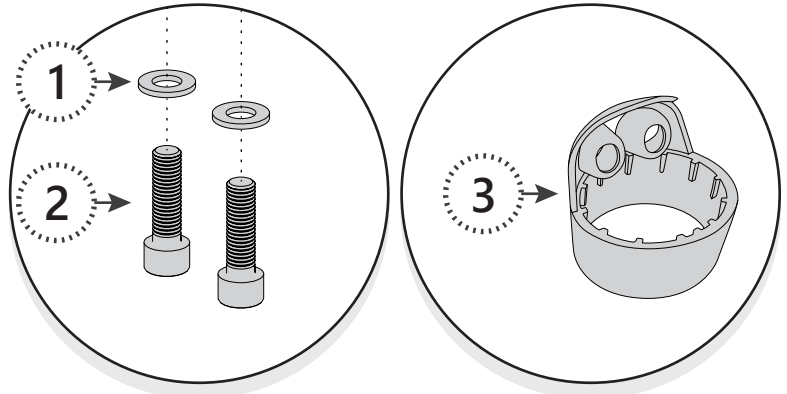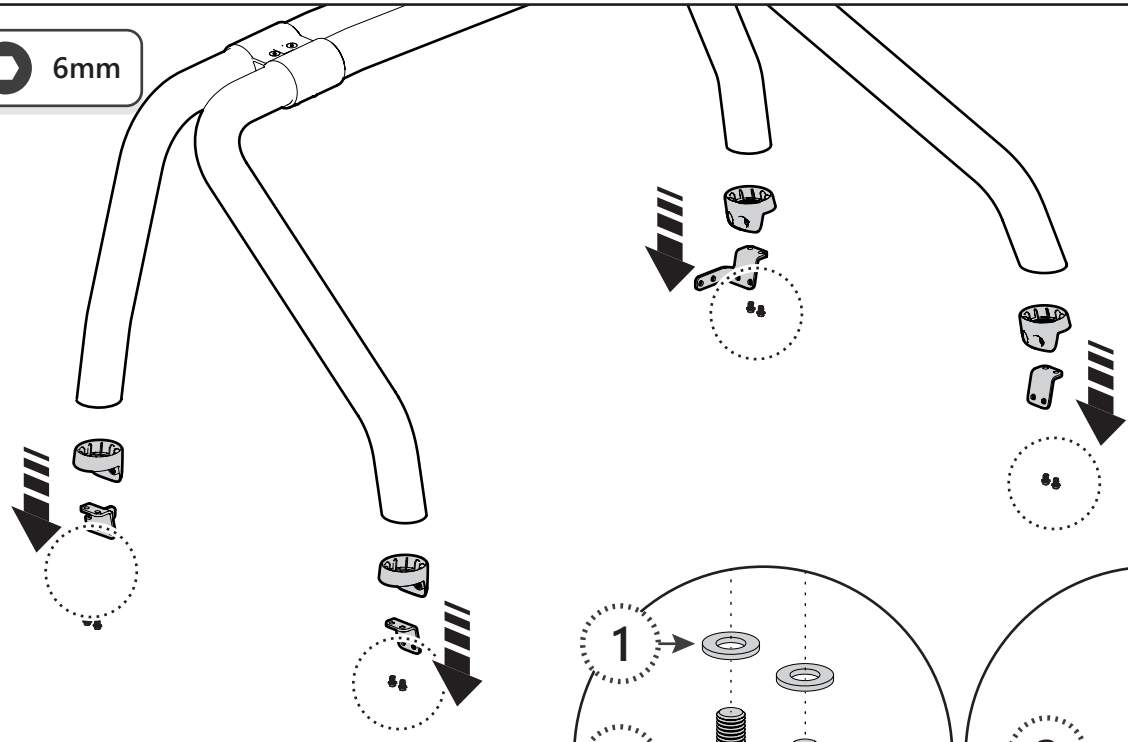


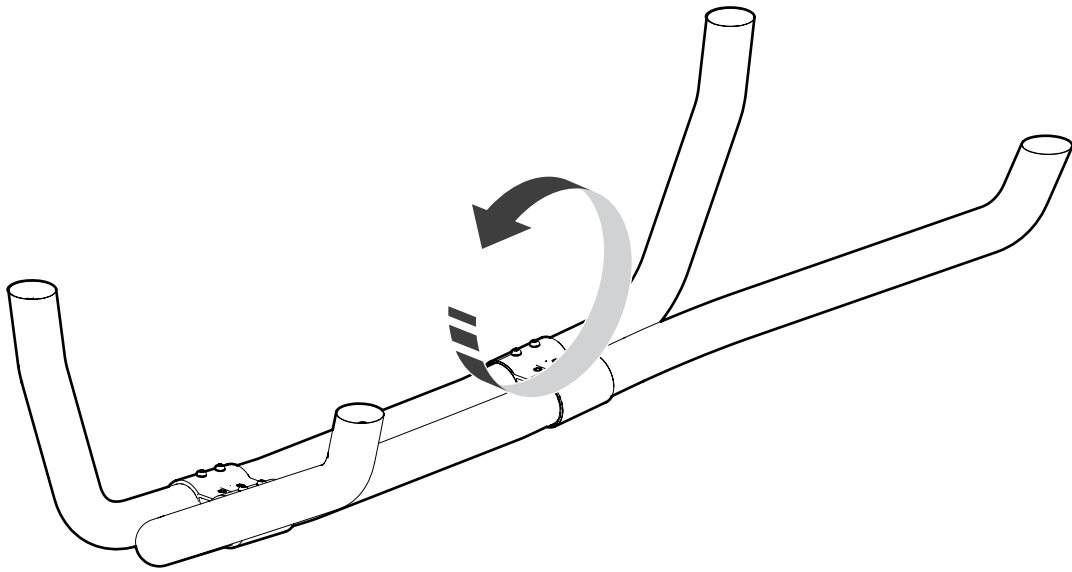


6mm 26Nm

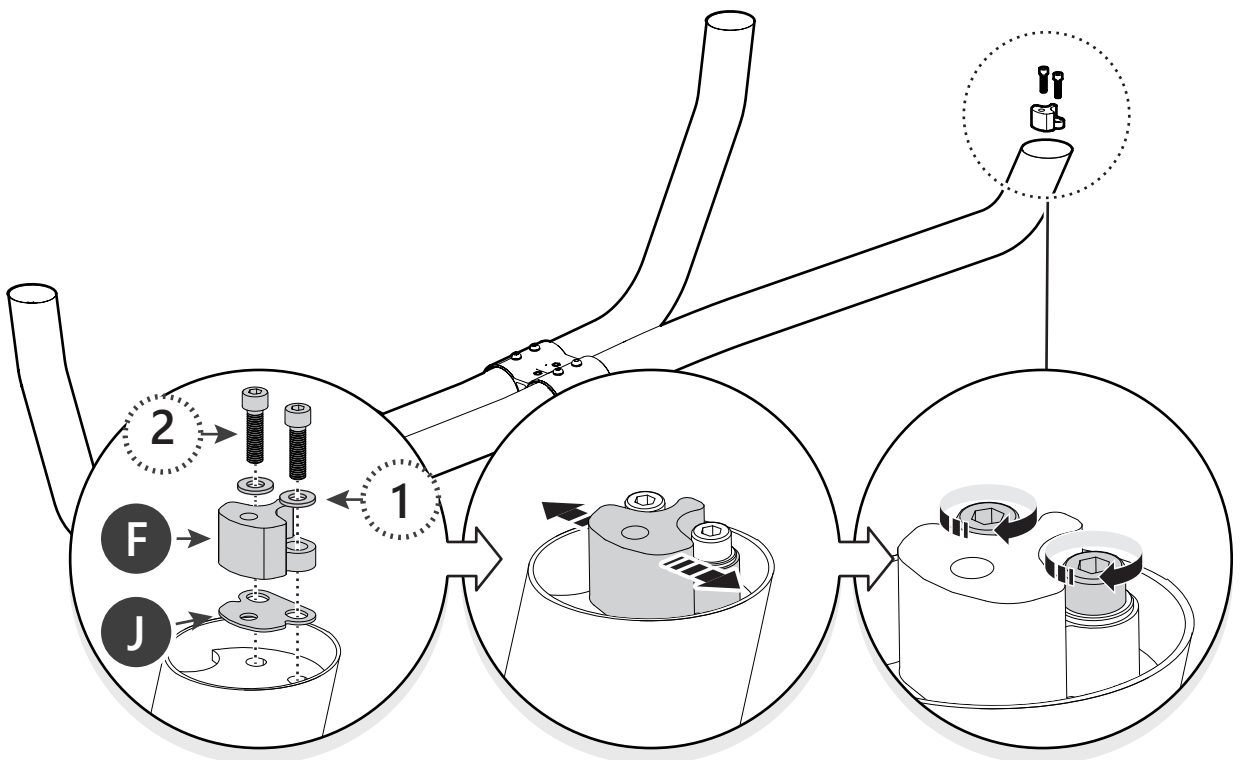

6mm 26Nm

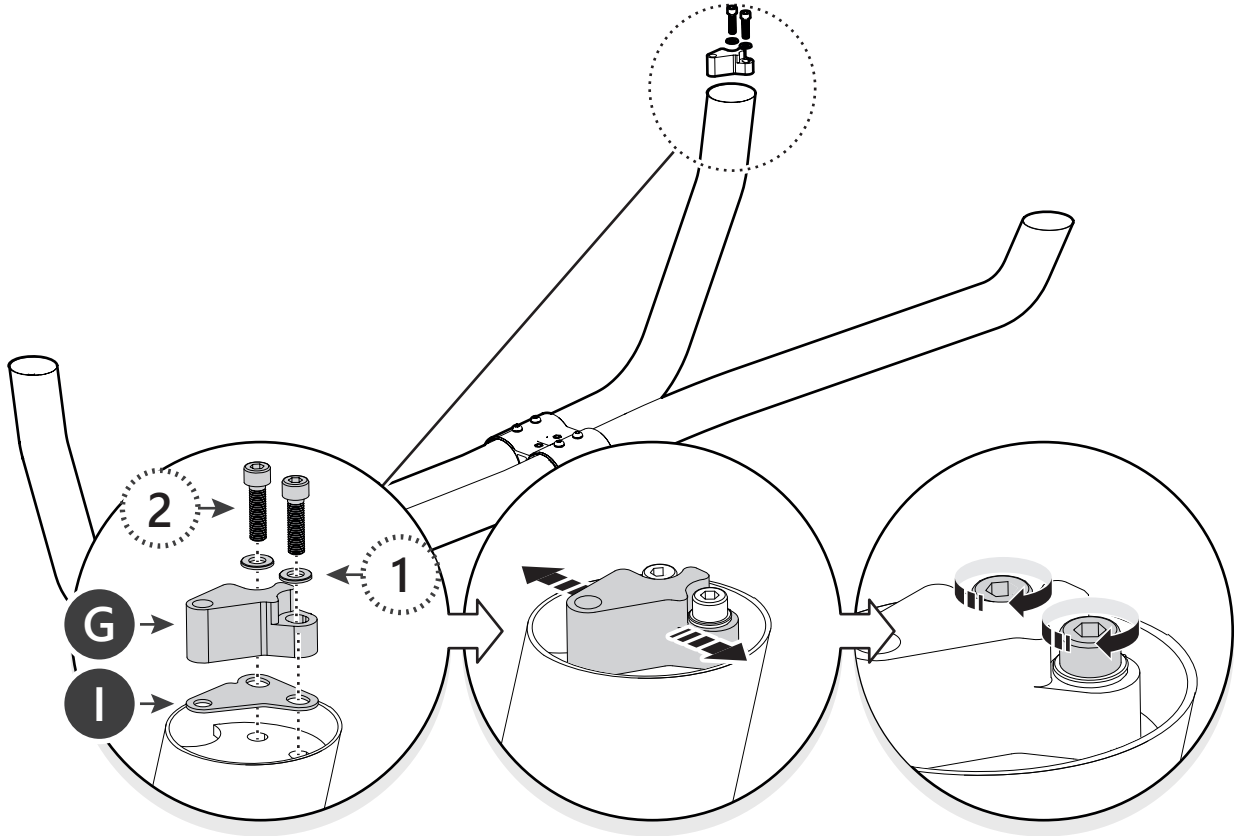

6mm 26Nm

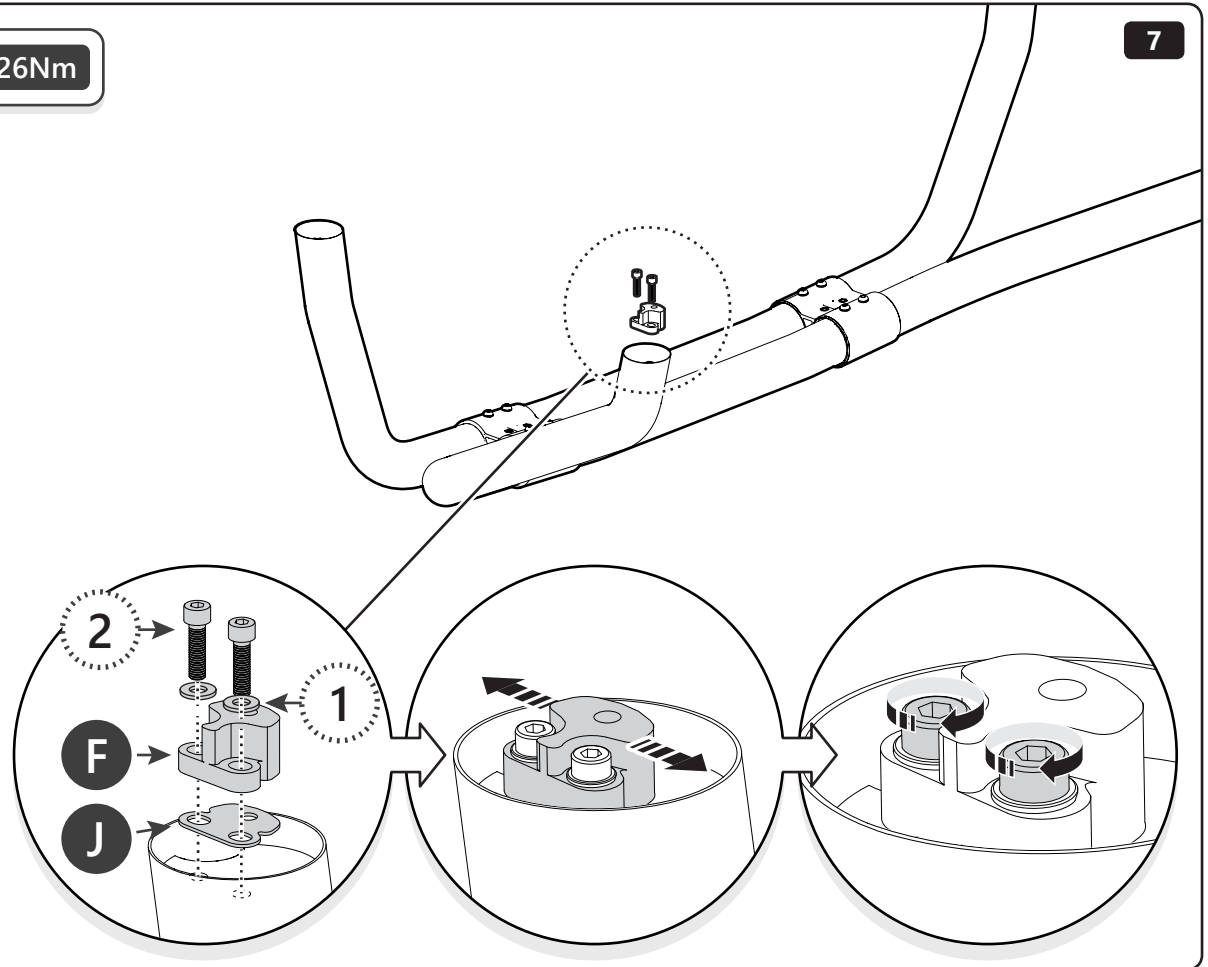





6mm

26Nm

8

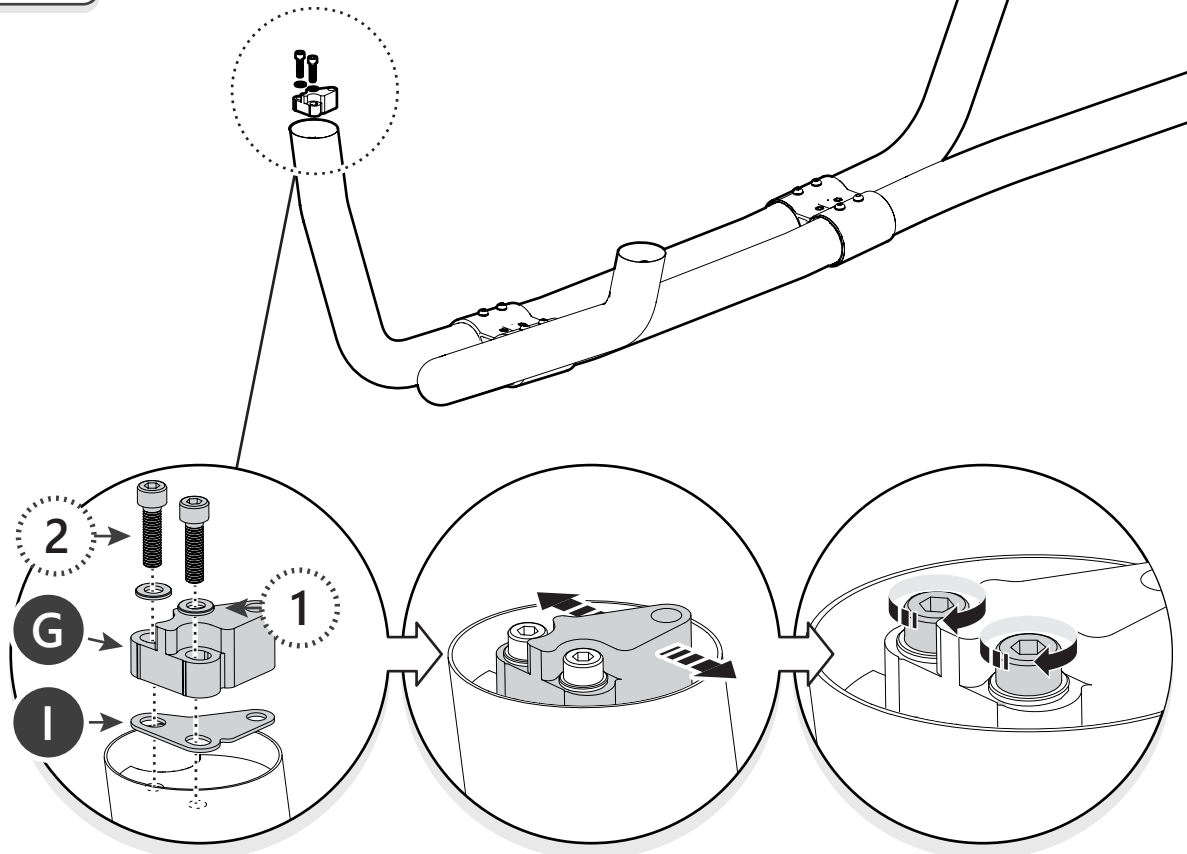


9

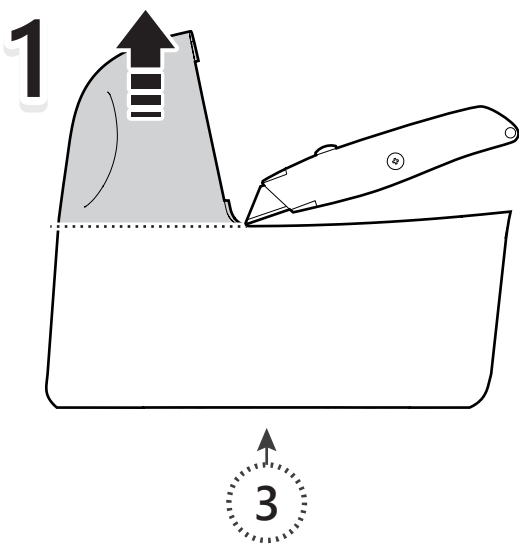


2

3



x 4


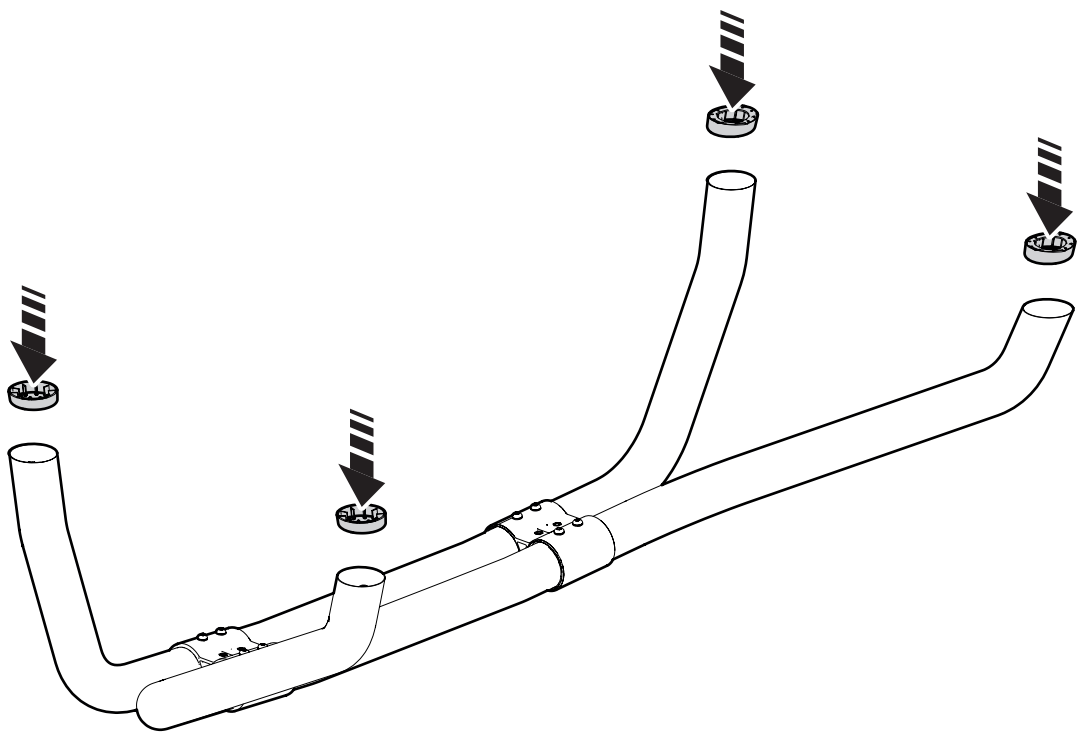


 6mm


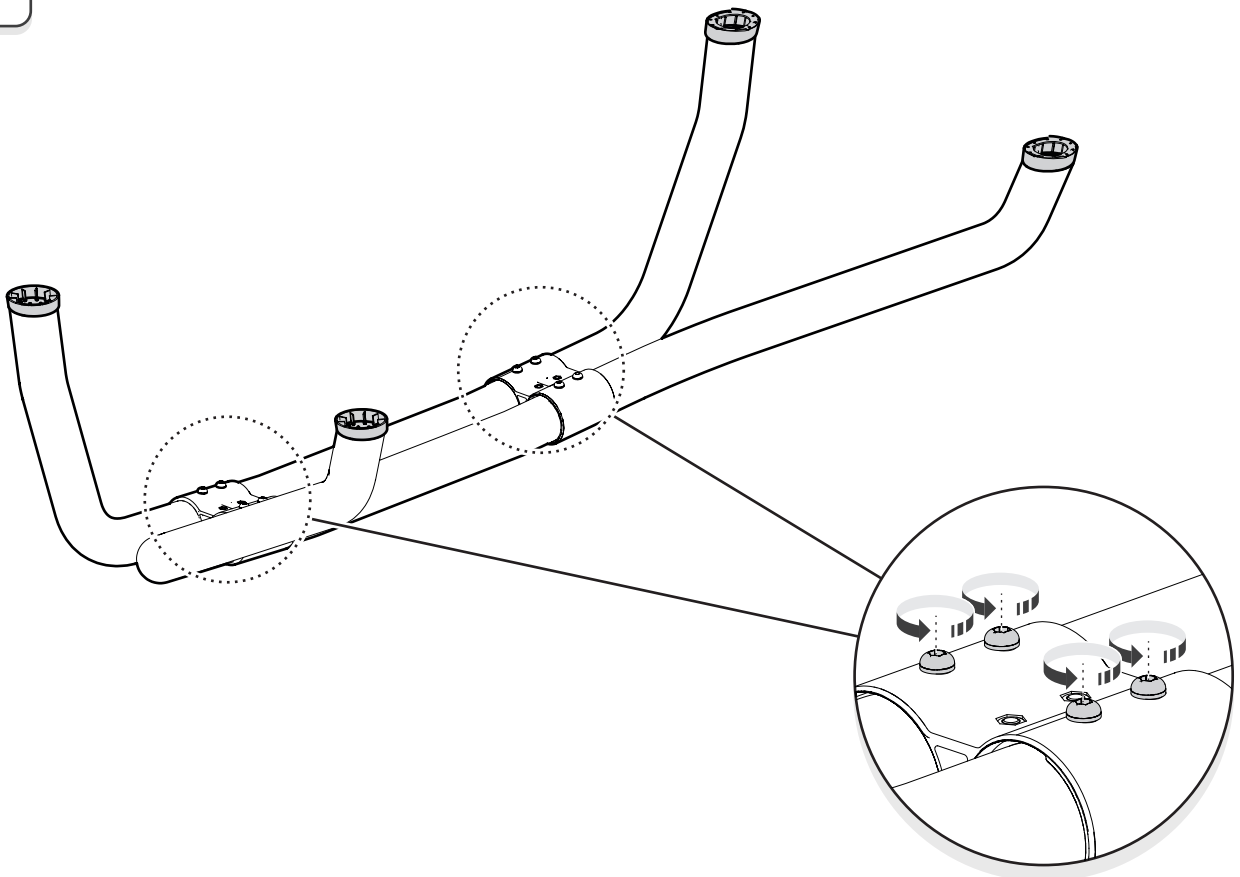


5mm

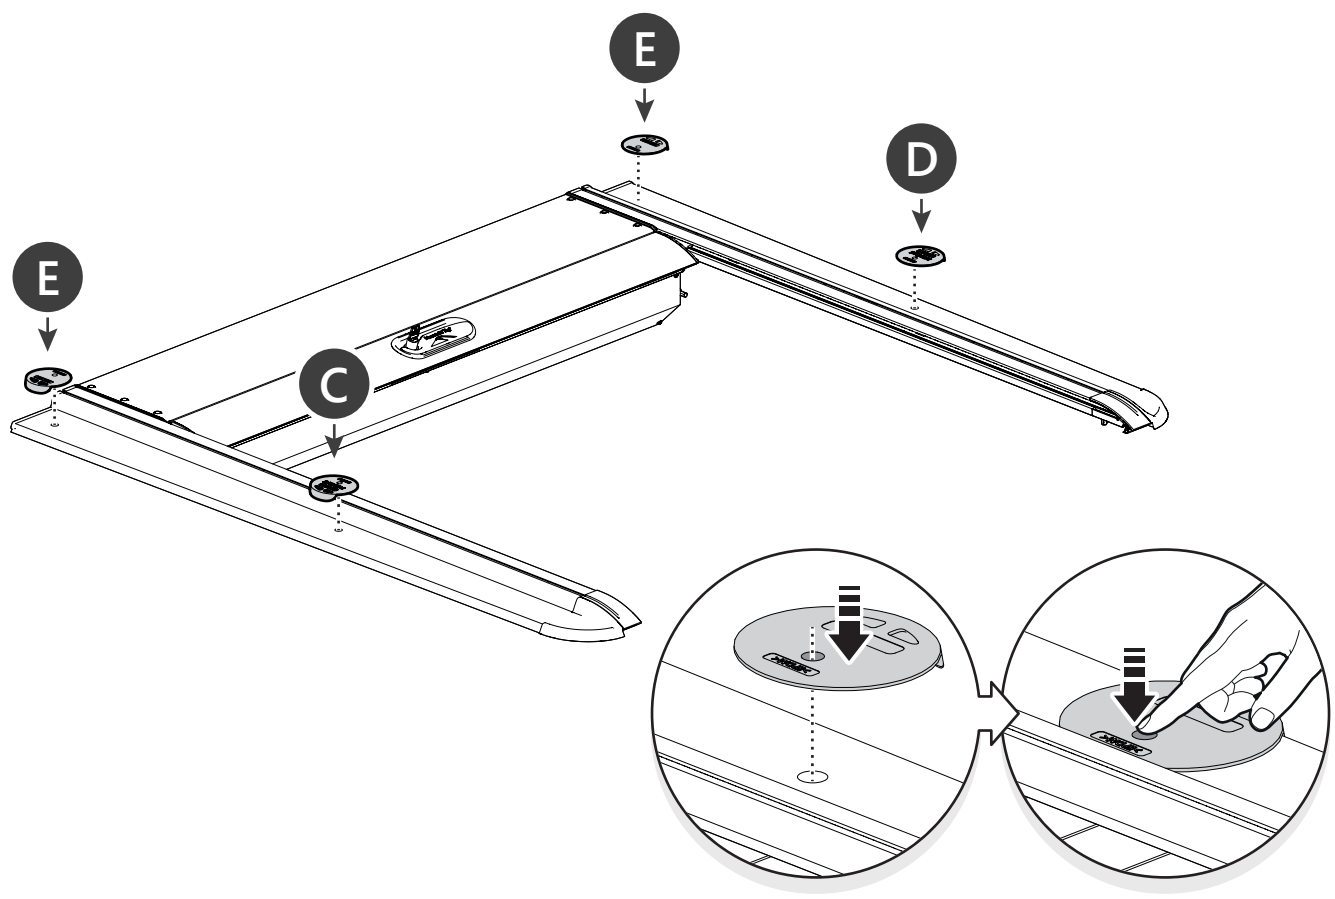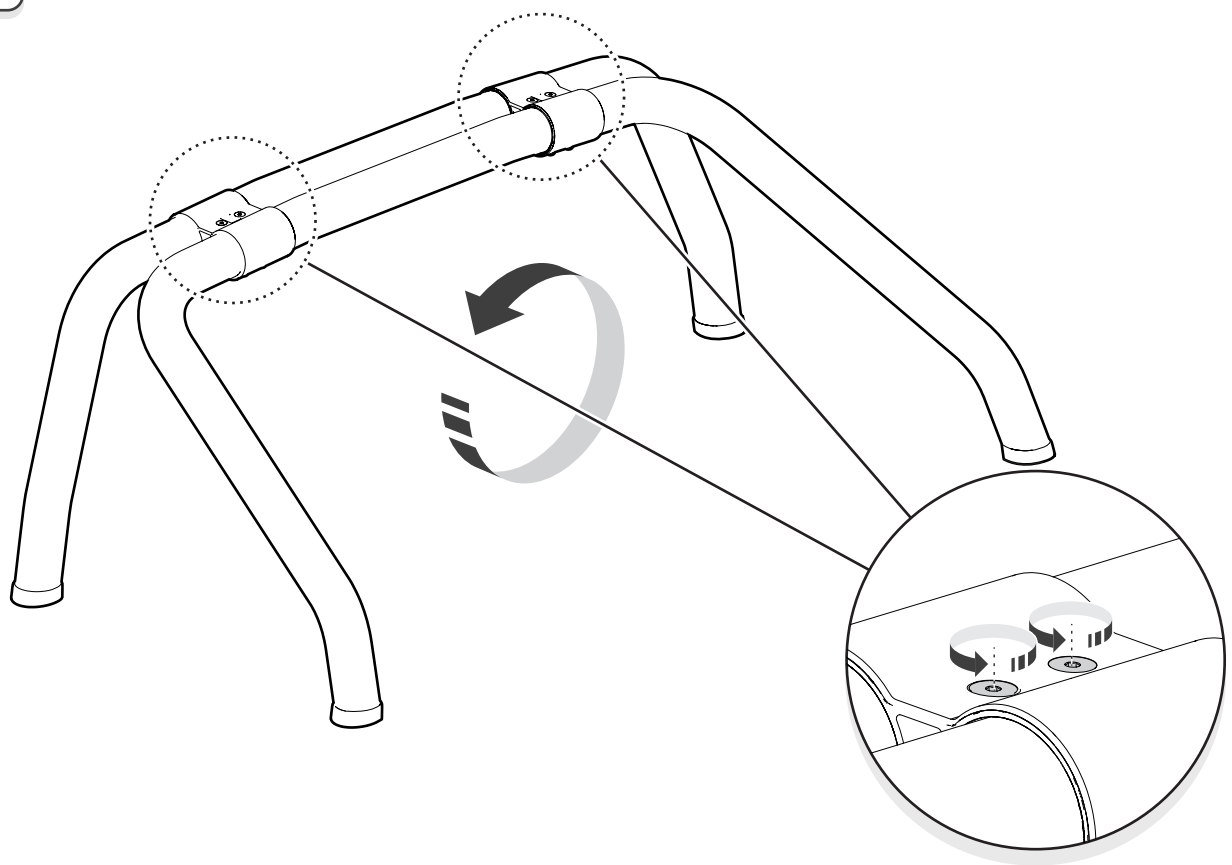

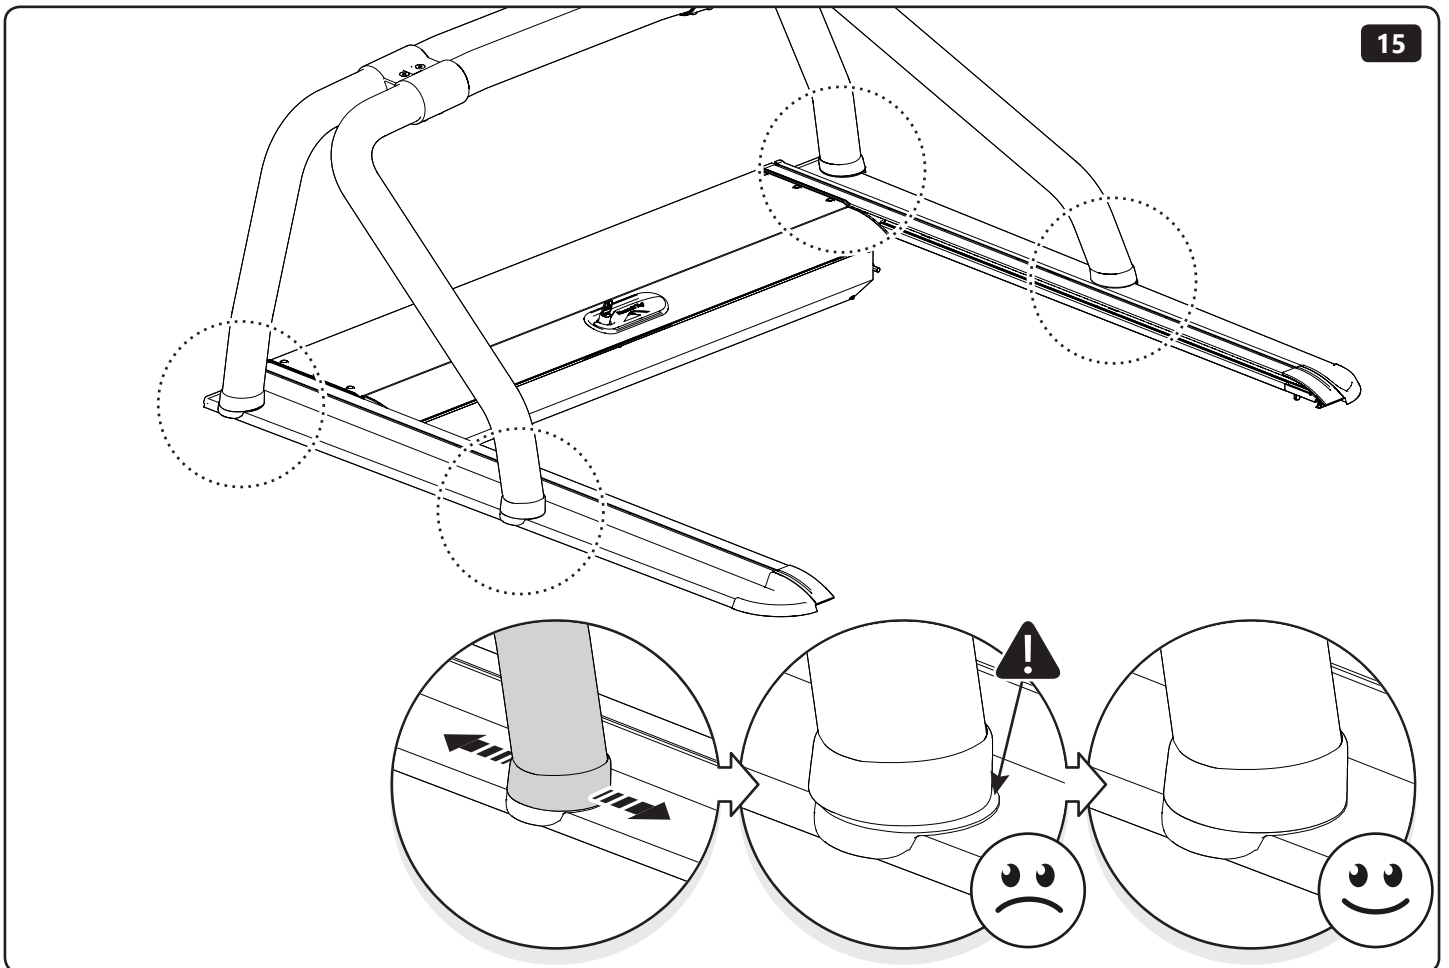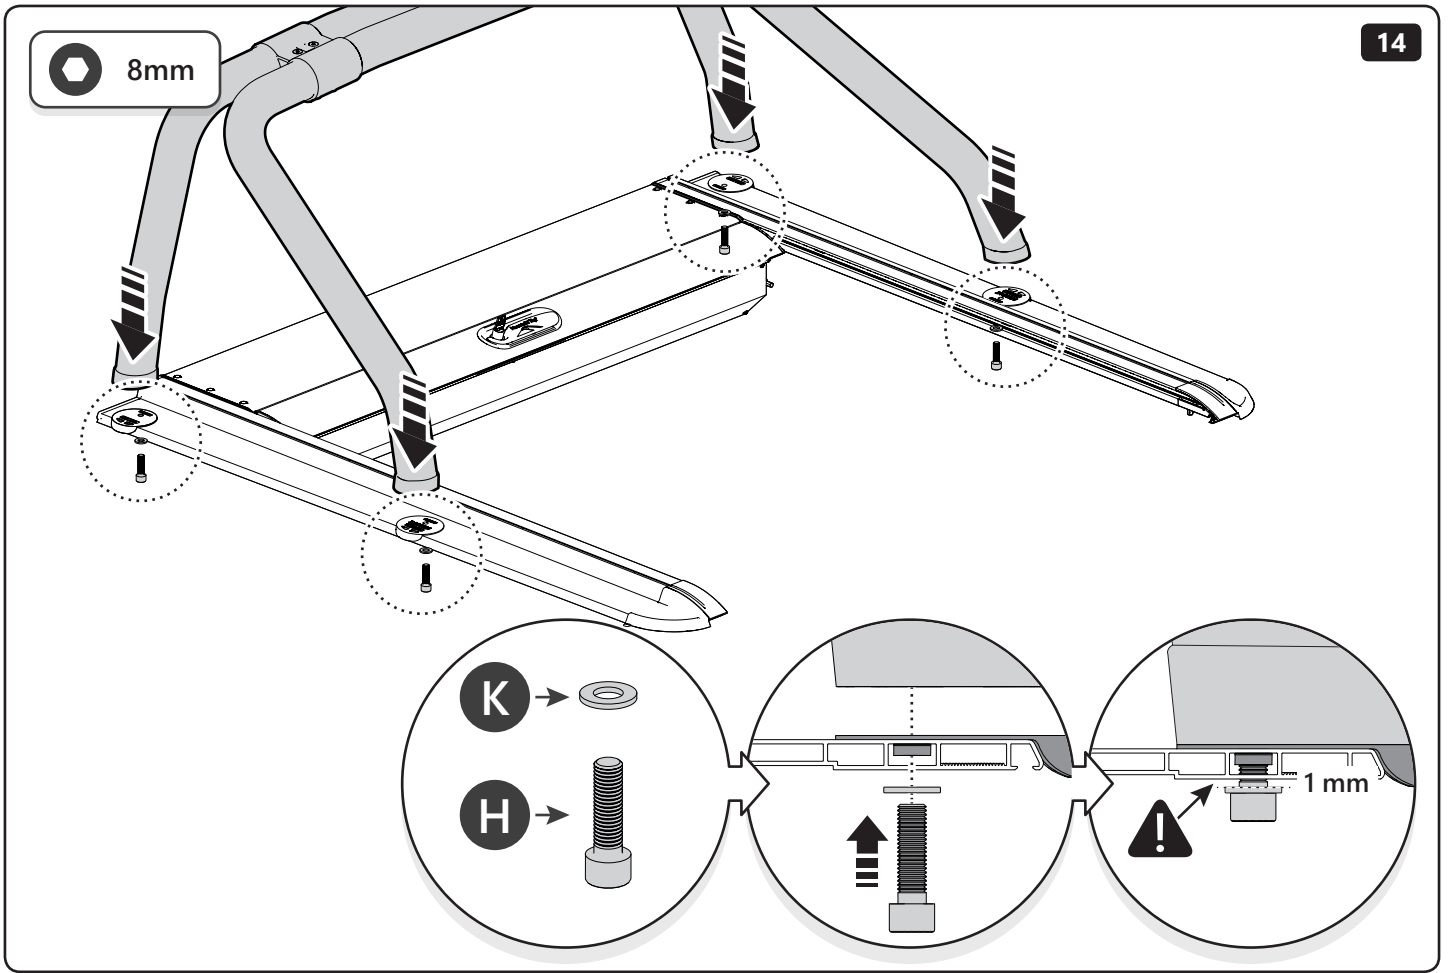





8mm 10Nm

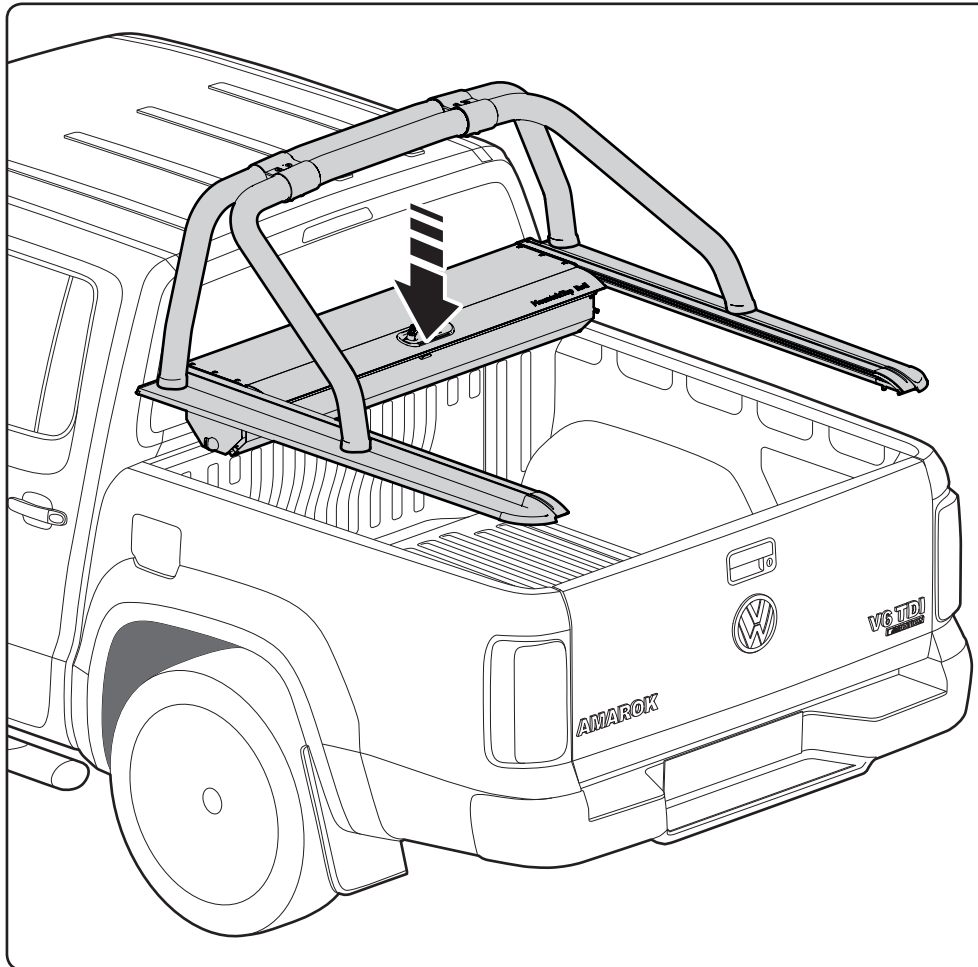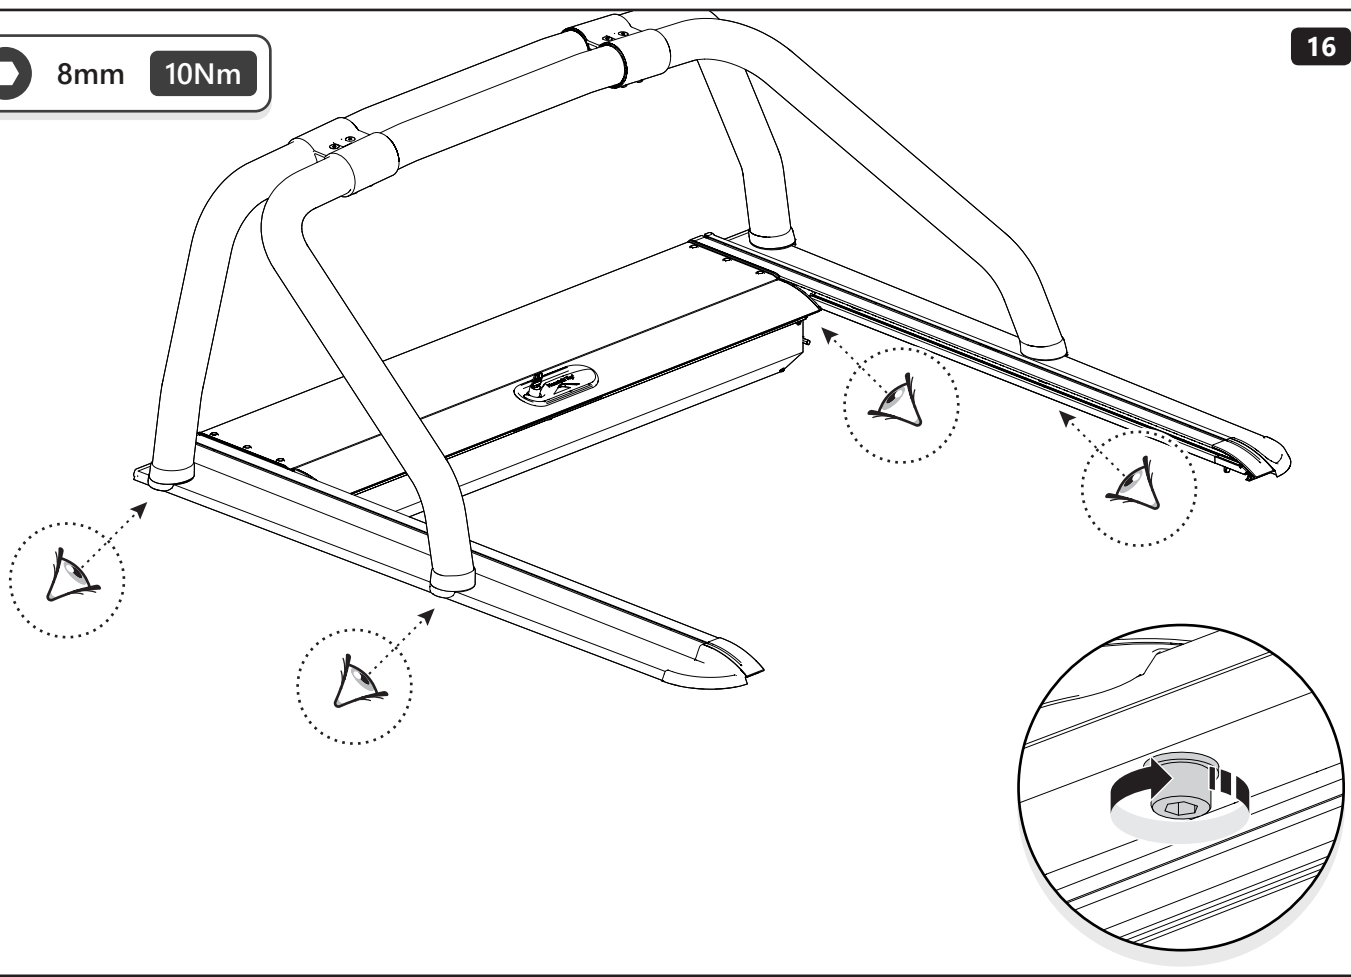

13
886 044
DOWNLOAD PDF






5mm 2Nm 6mm 20Nm

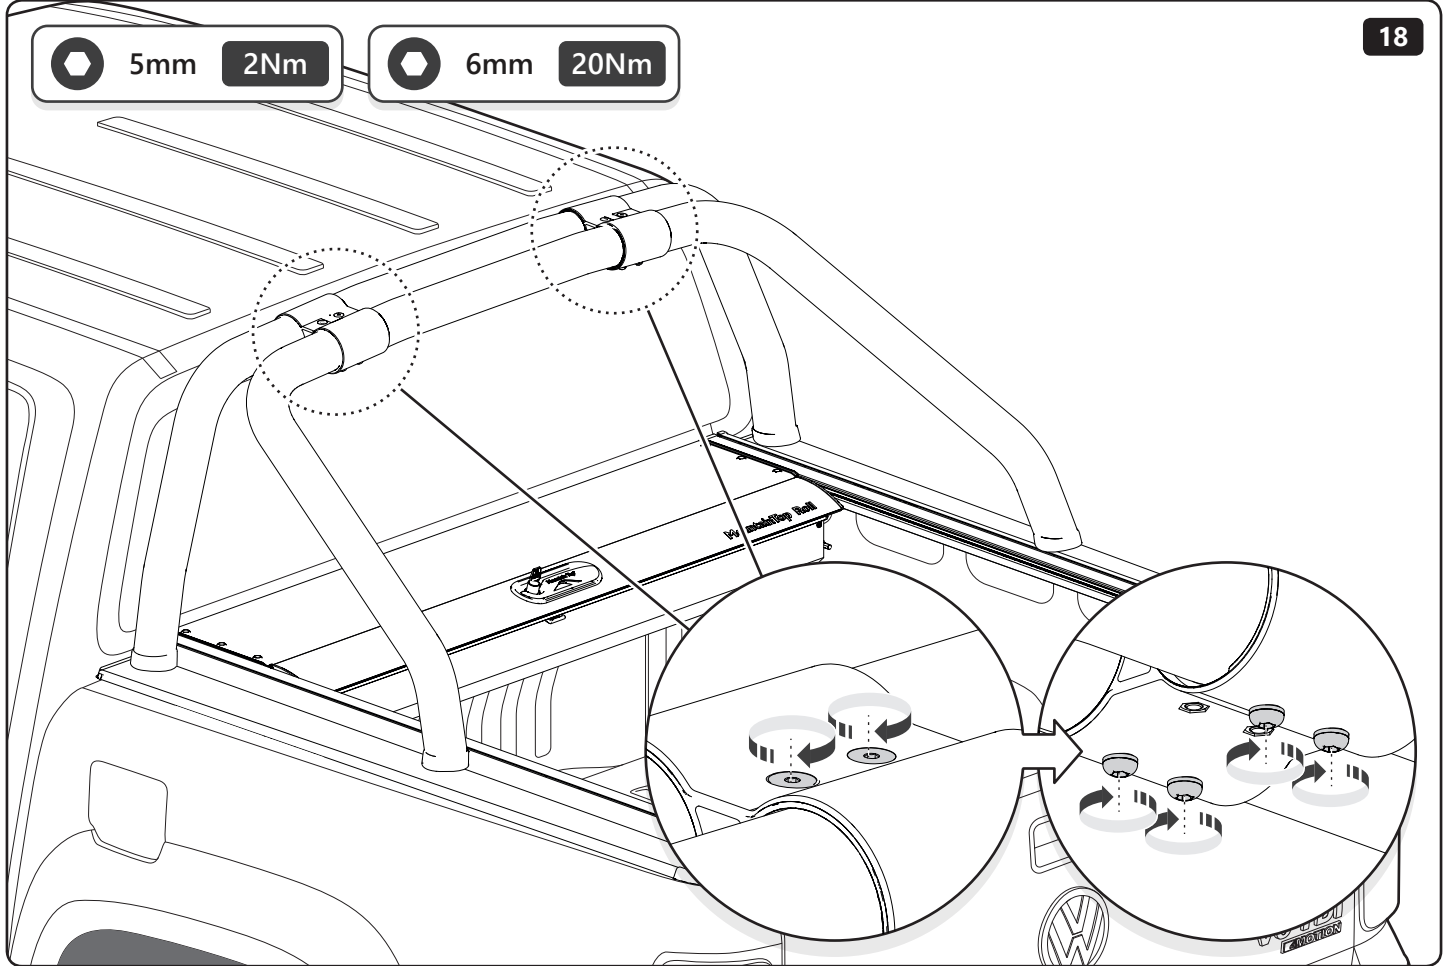

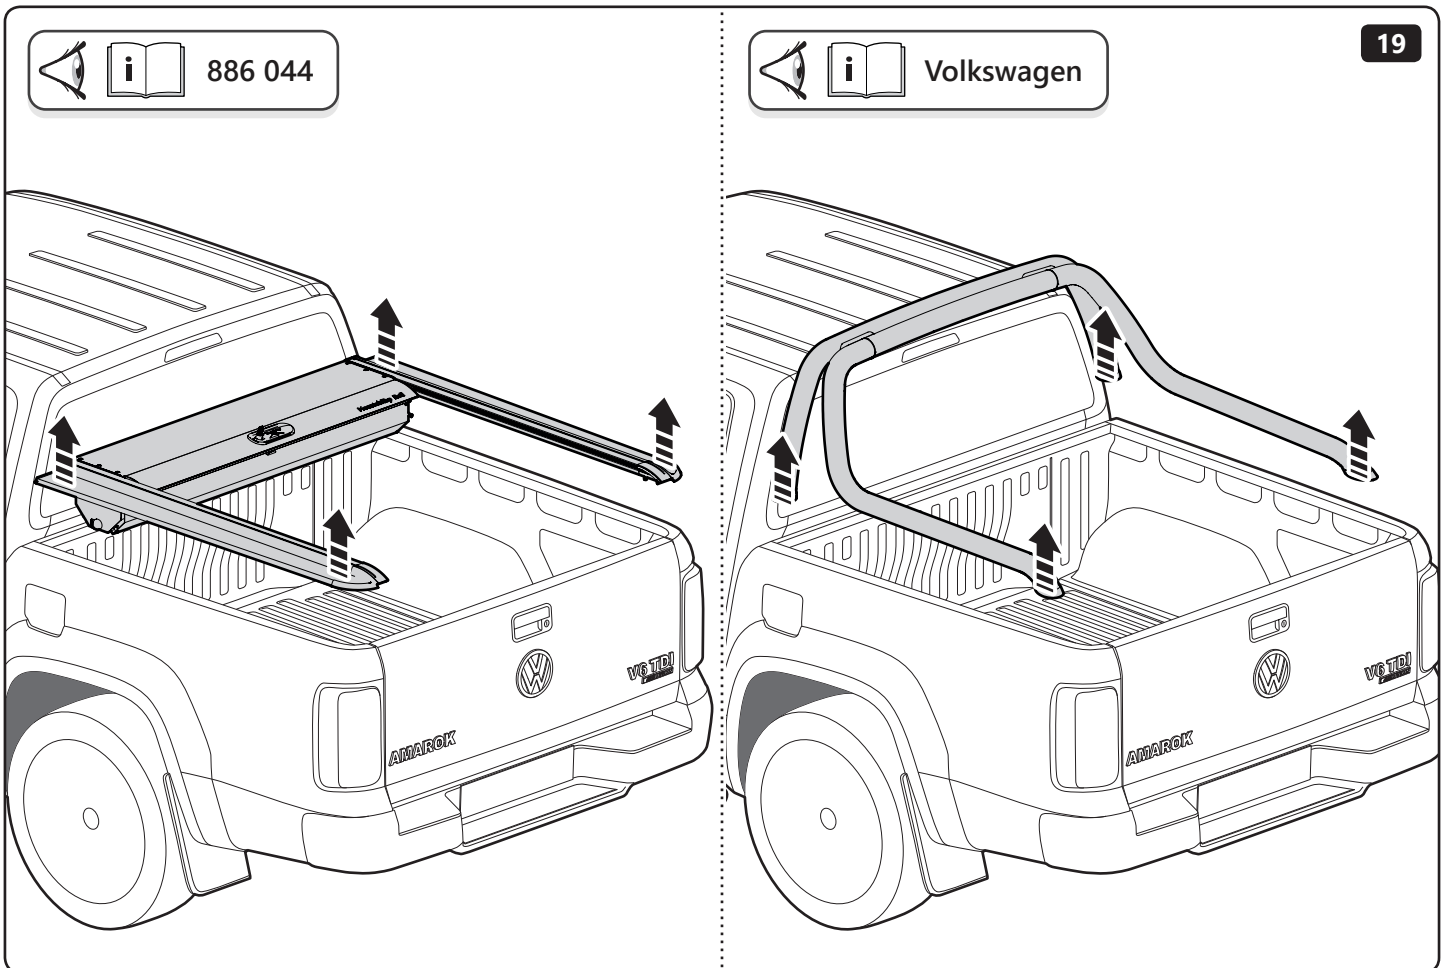

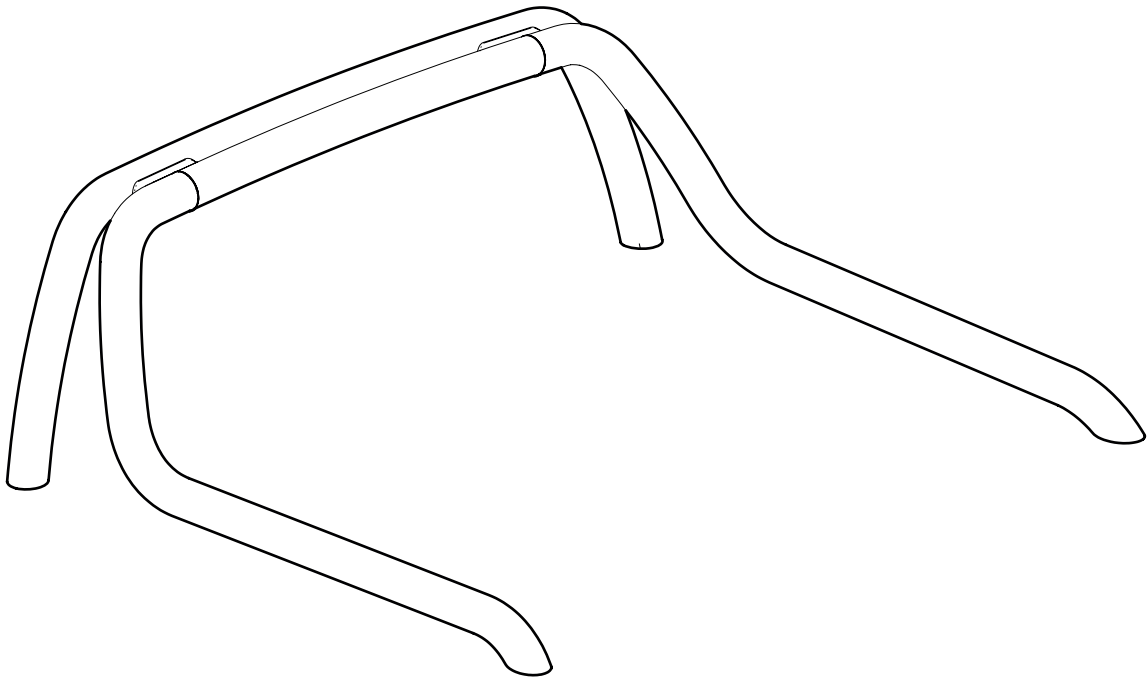



Ø 3,5 + 14mm

! Rust Protection

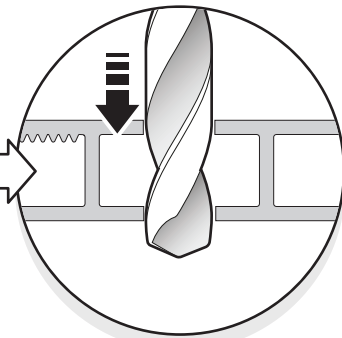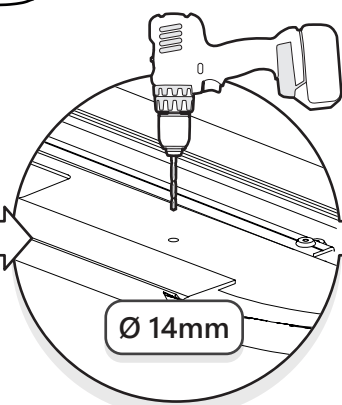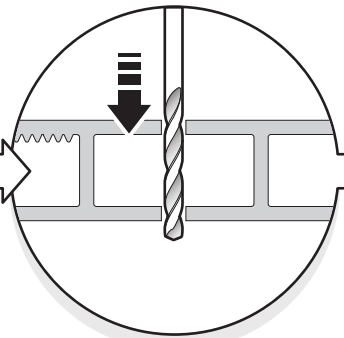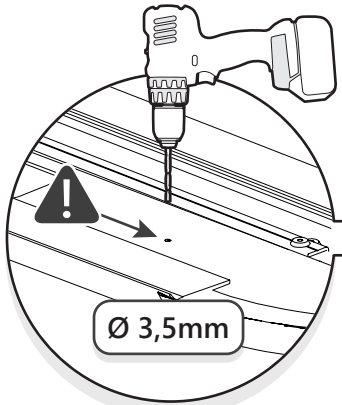
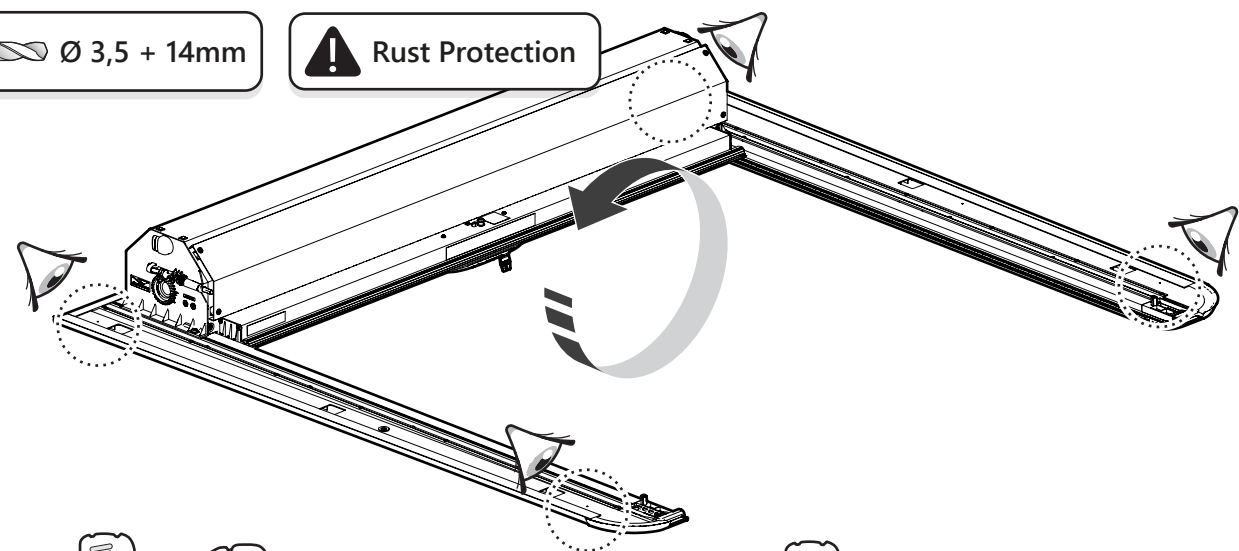


6mm

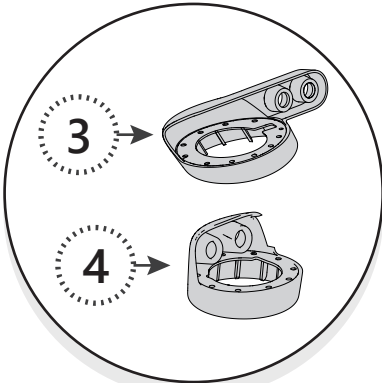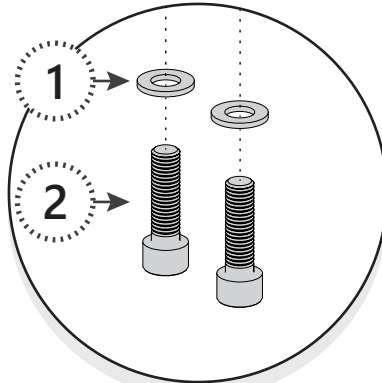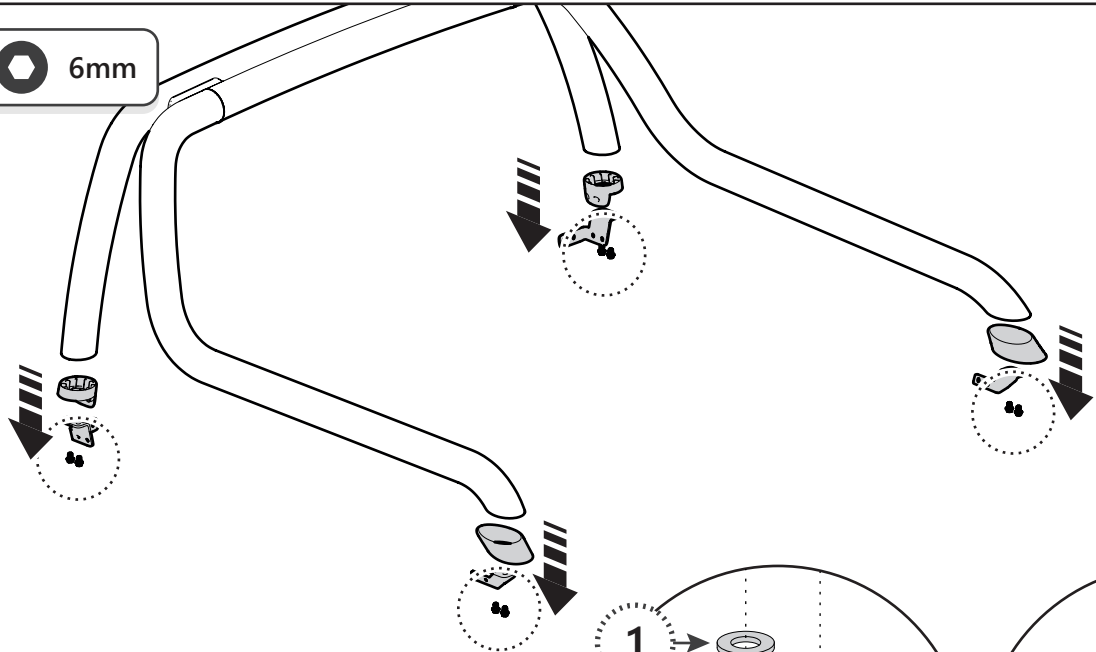


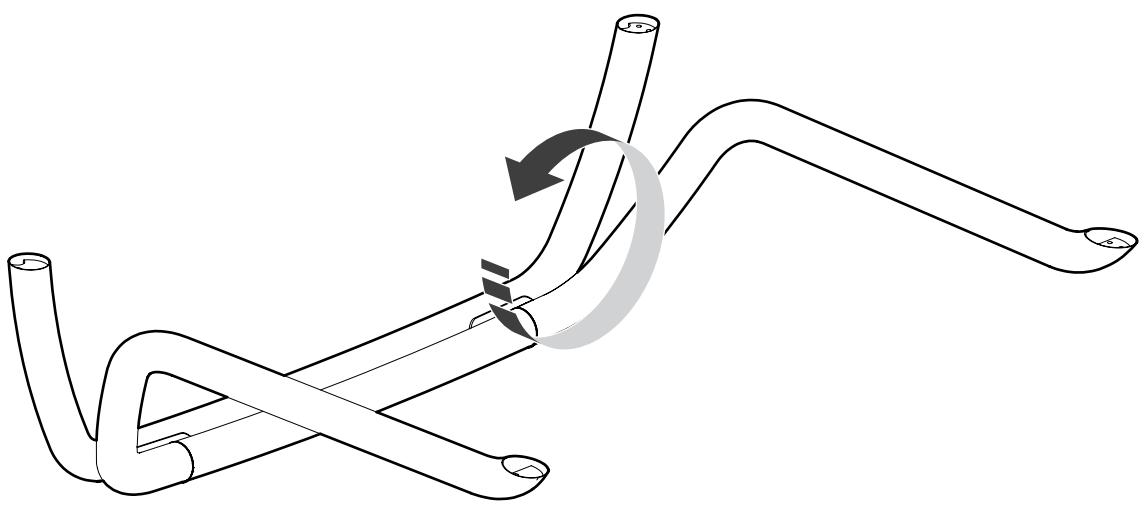



6mm 26Nm

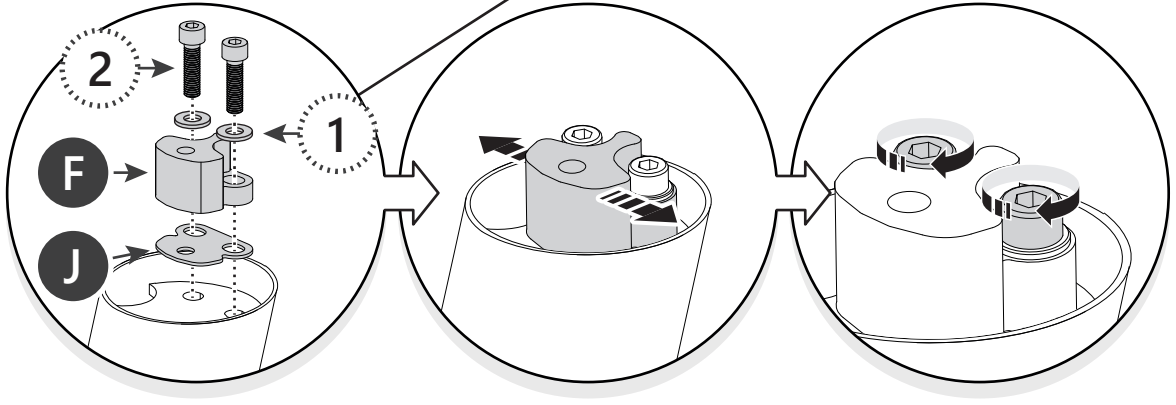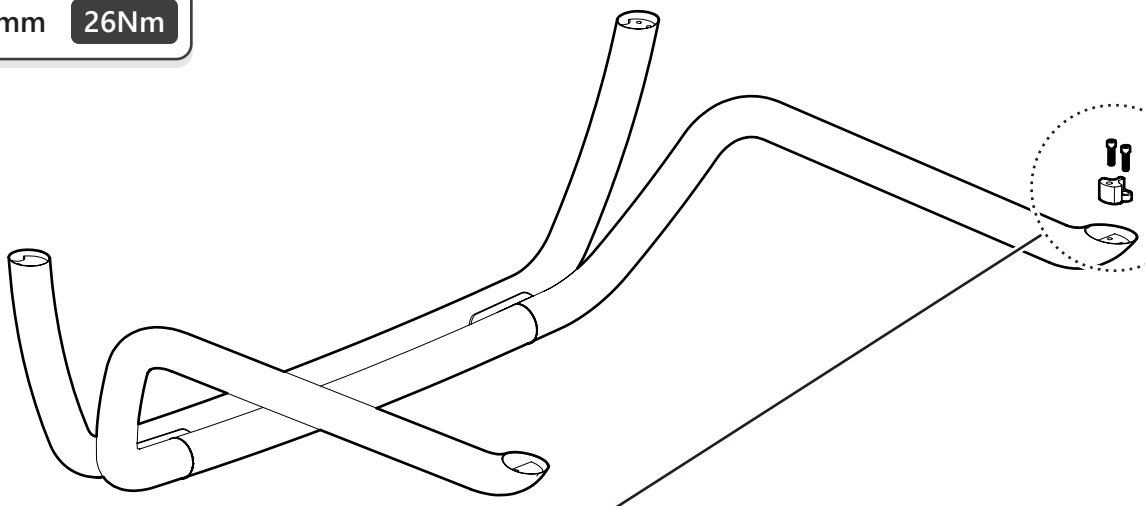



6mm 26Nm

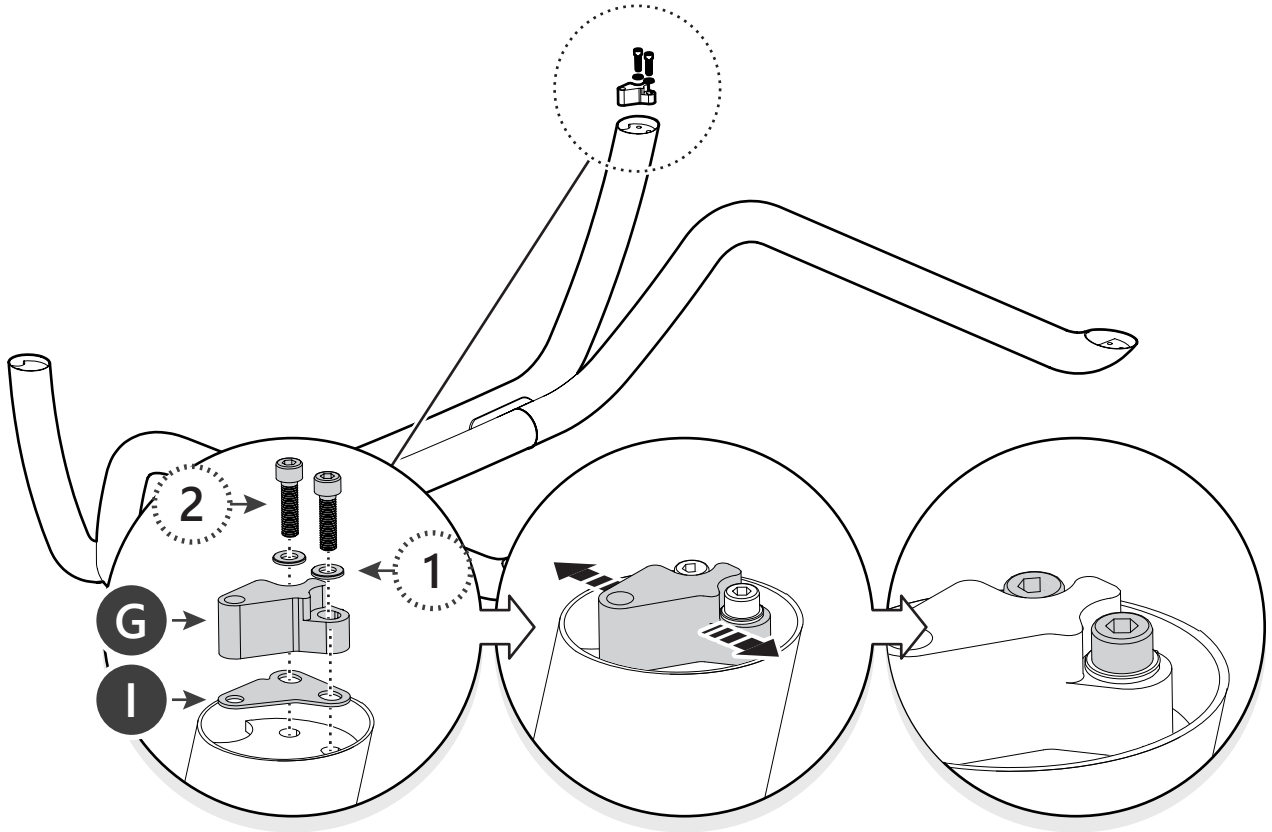





6mm 26Nm

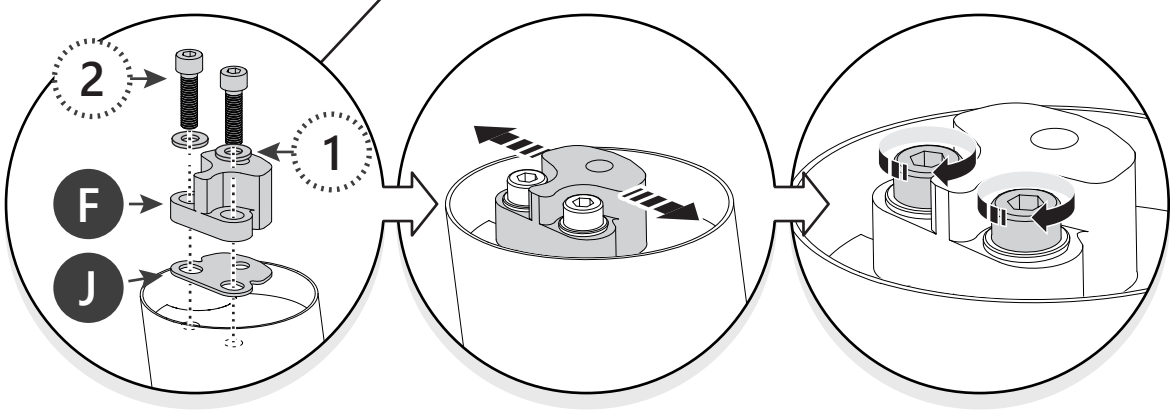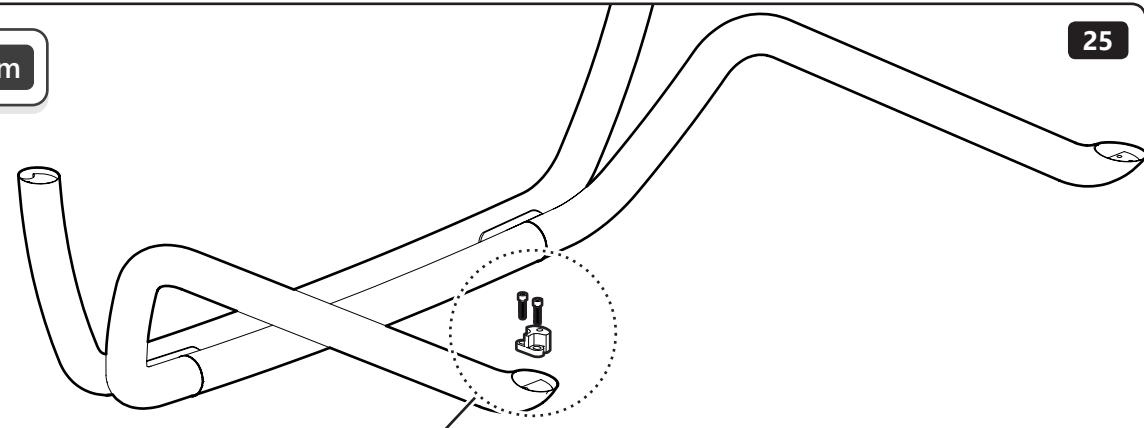



6mm 26Nm

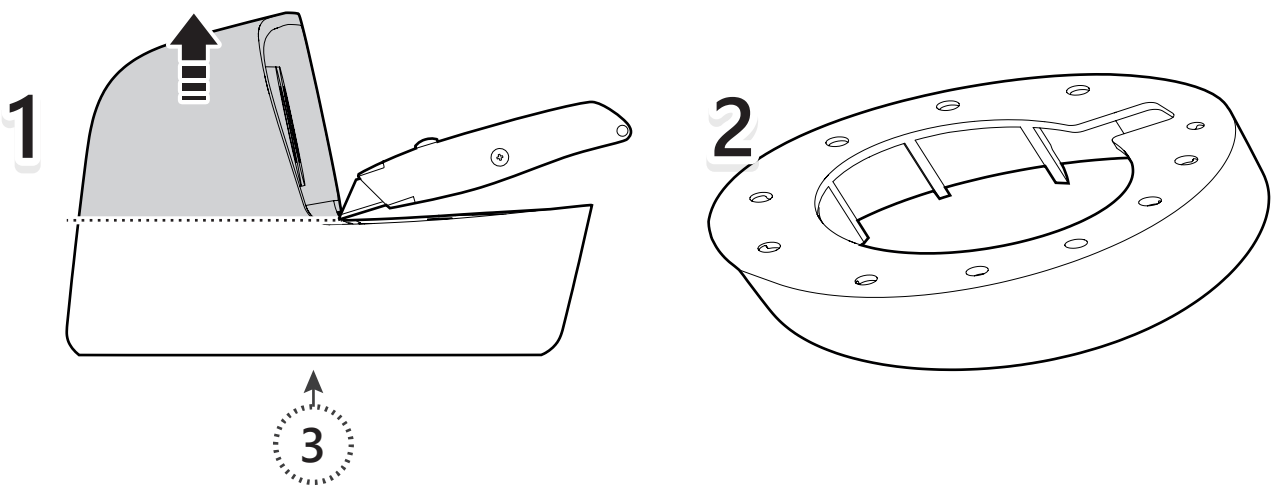
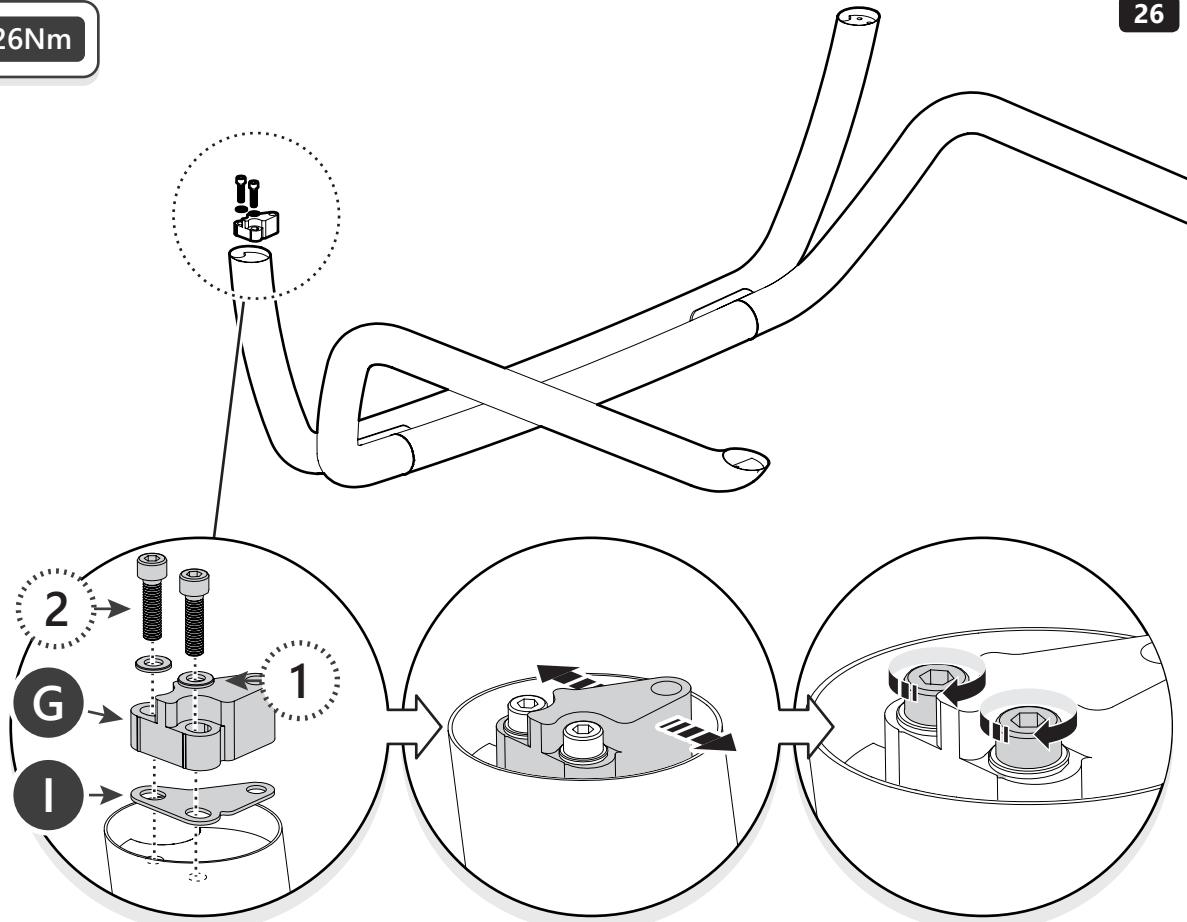




x 2

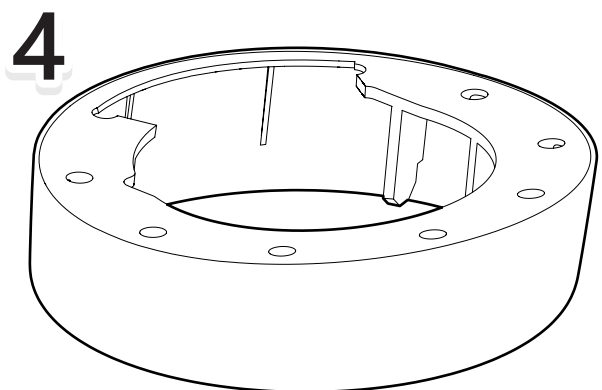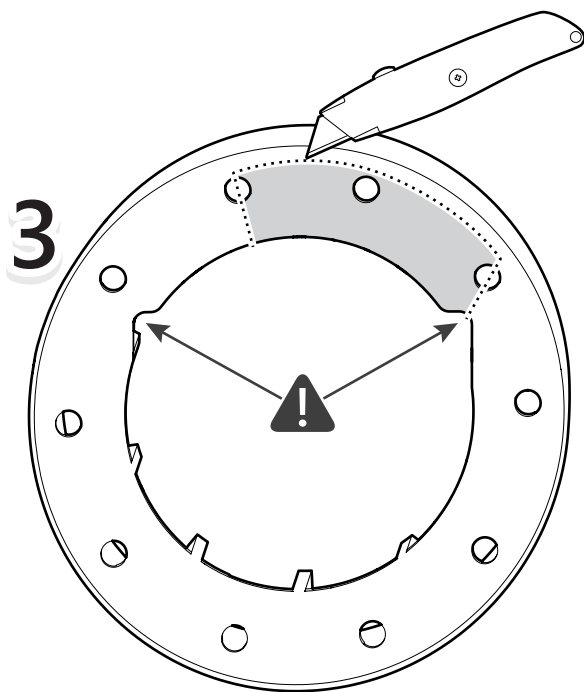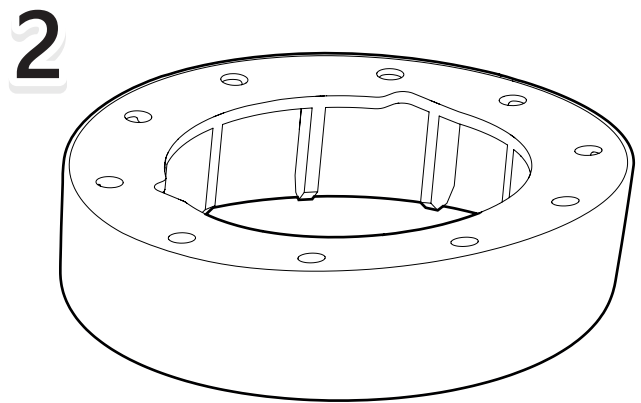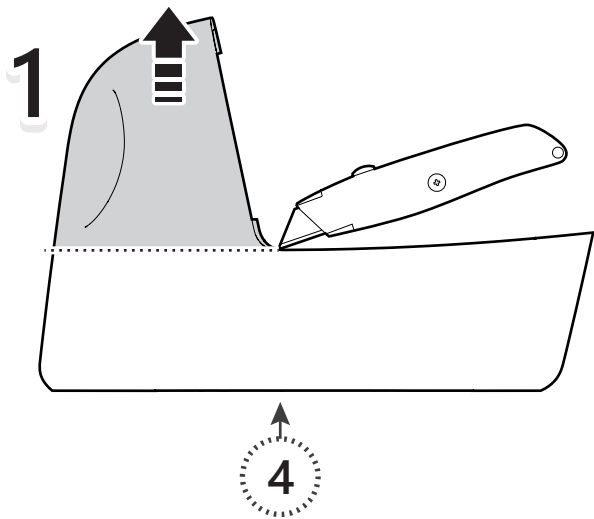


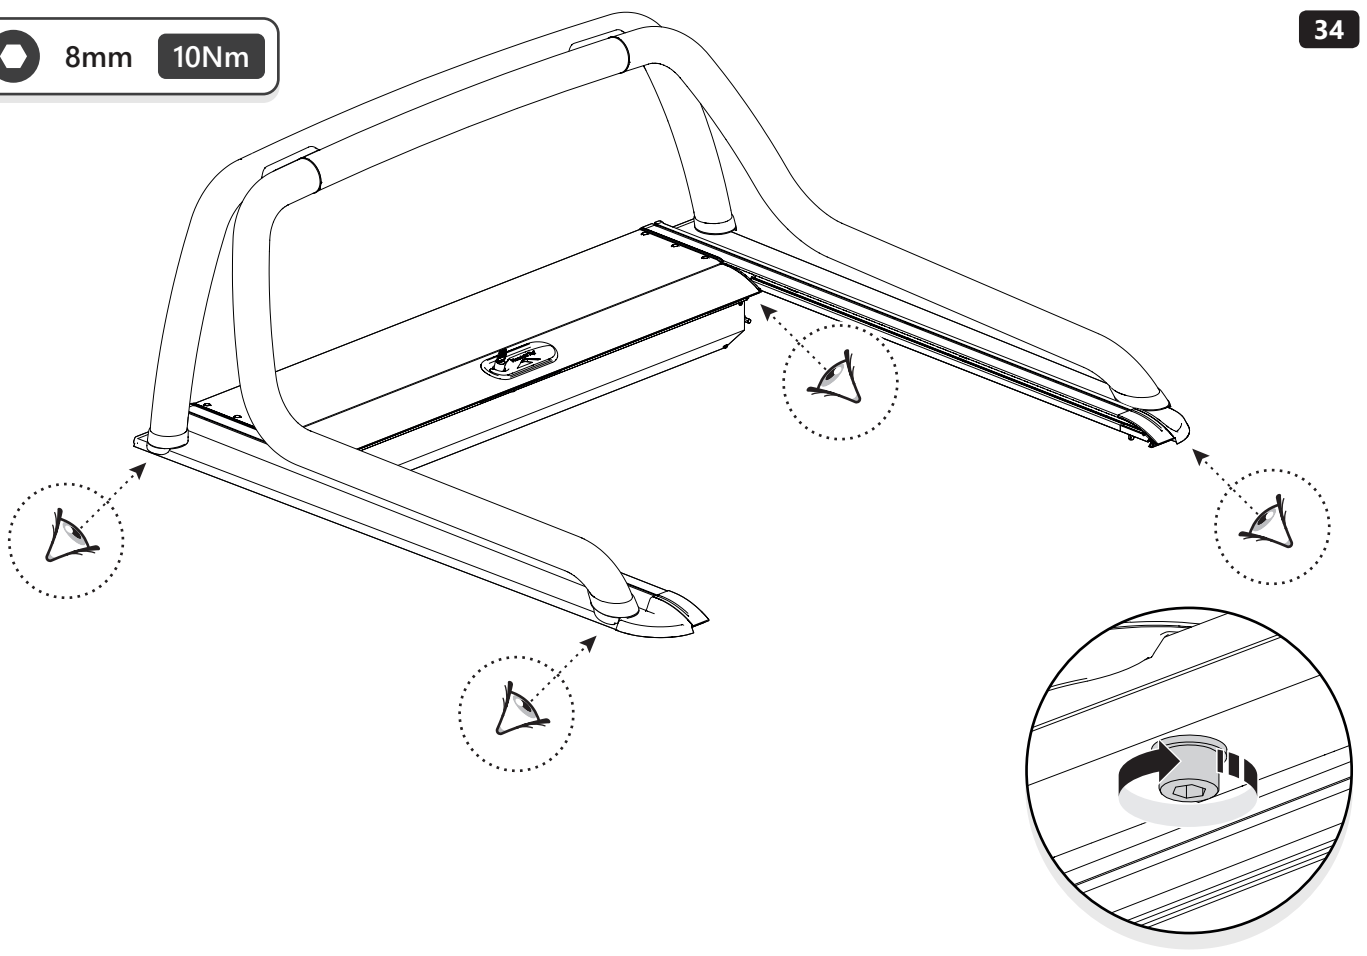
x 2

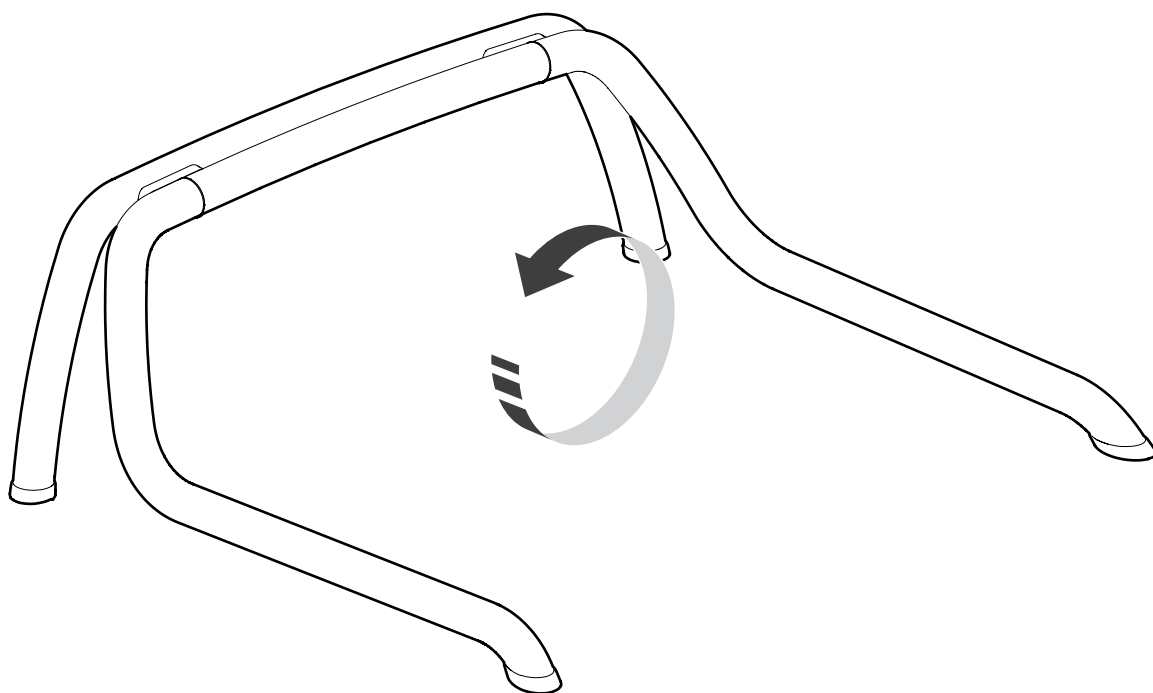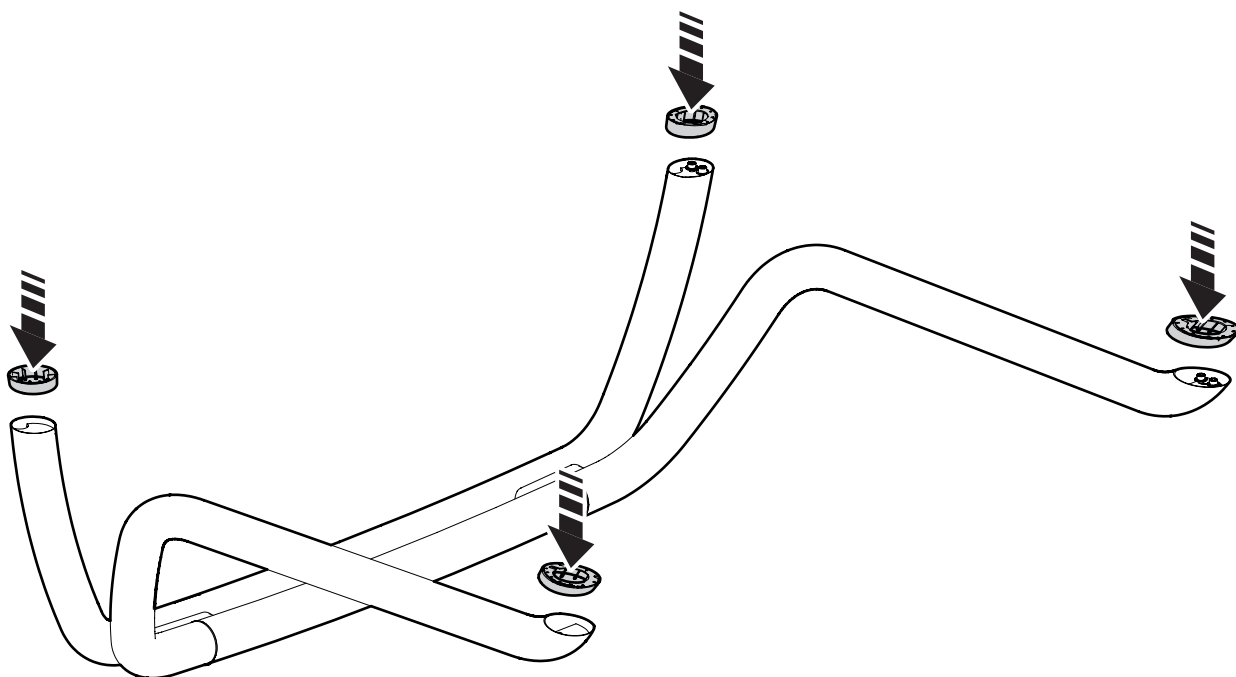


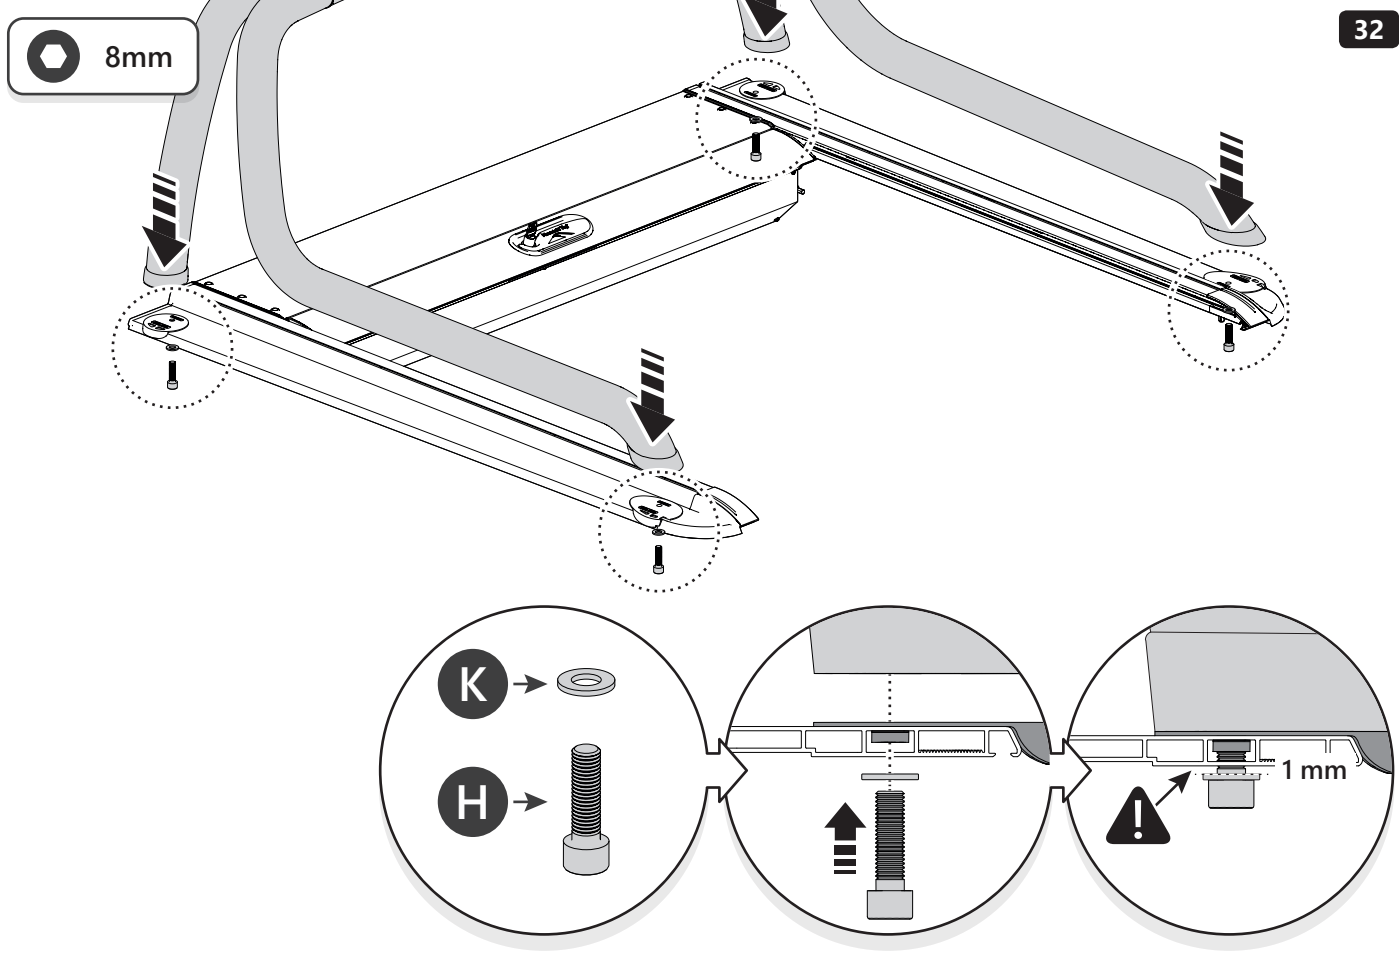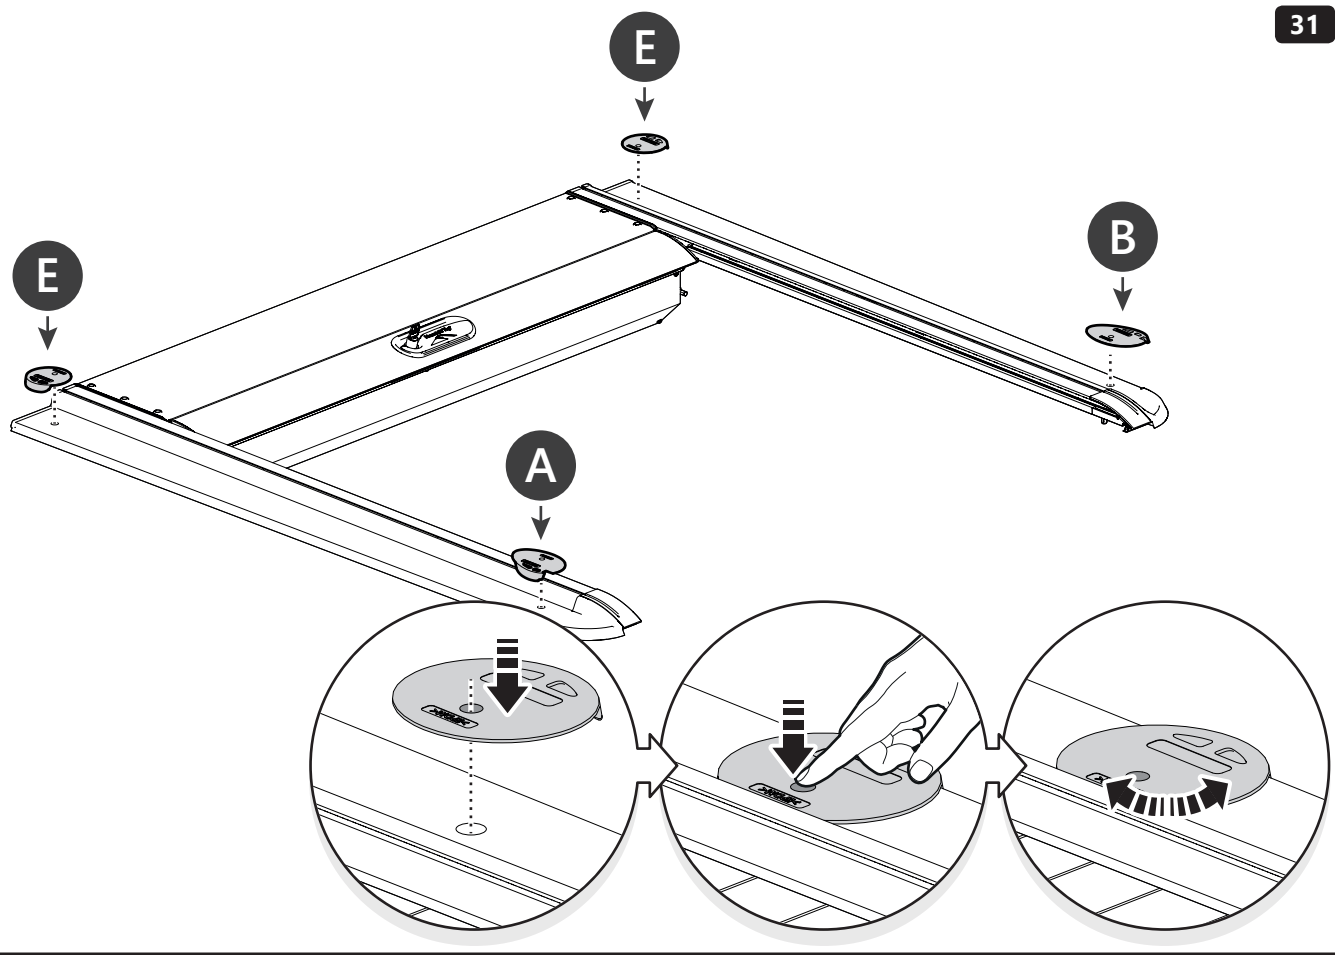

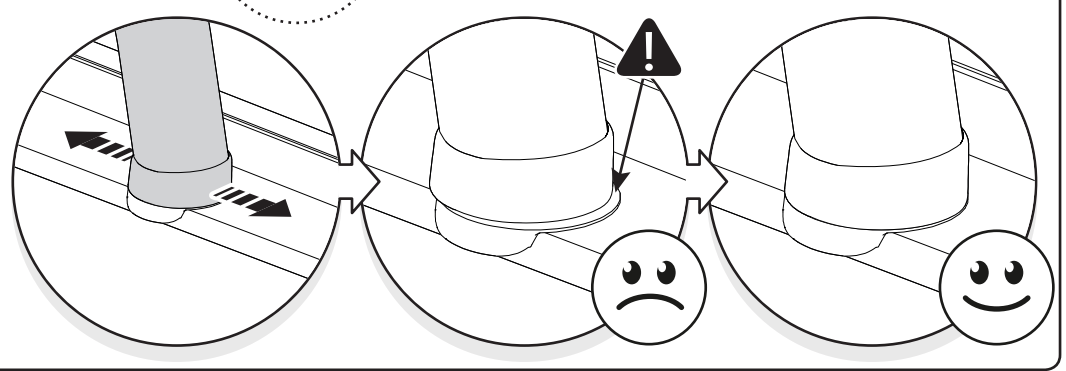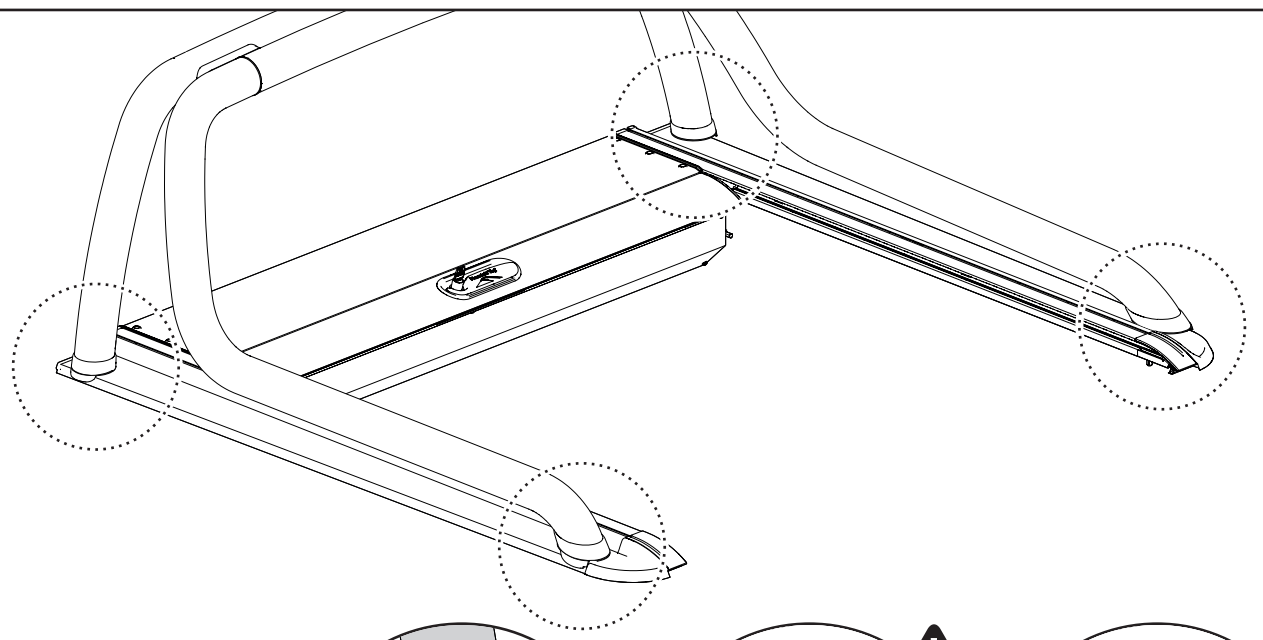

 8mm **10Nm**



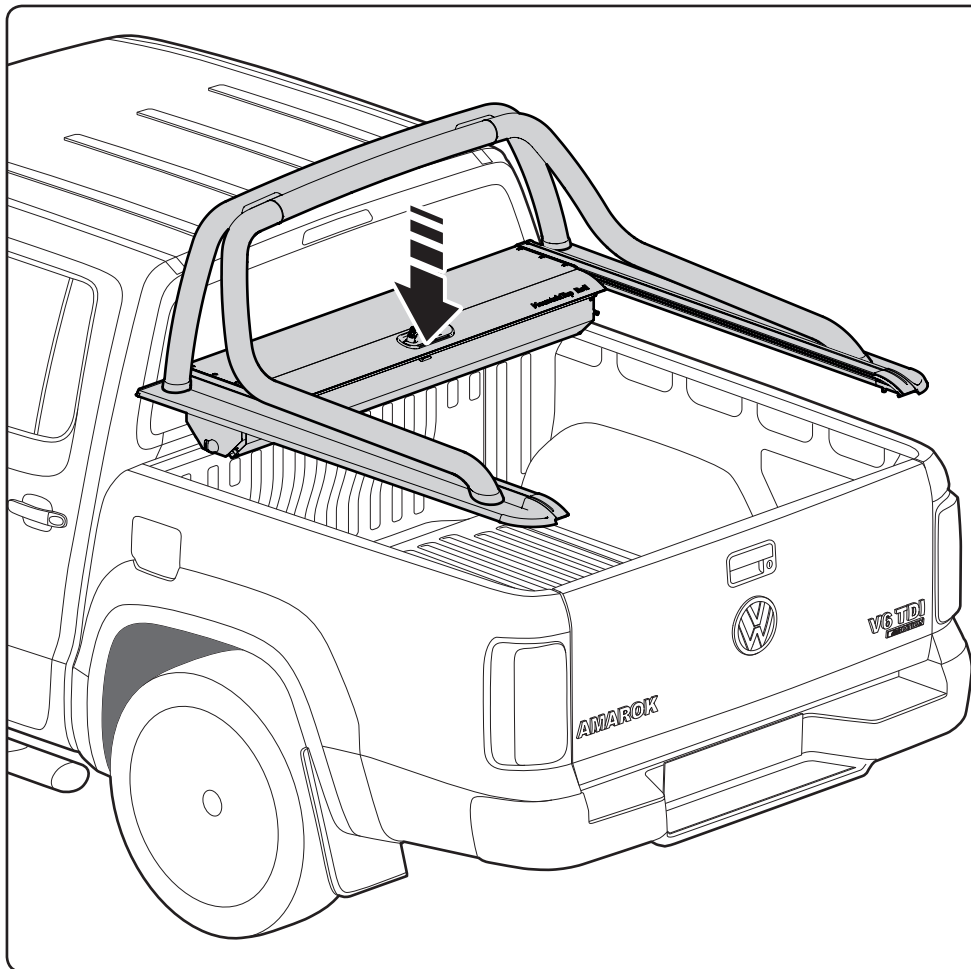

13

886 044

DOWNLOAD PDF



Customer Service +45 4810 2950 (08:00 - 16:00 CET)
Fax +45 4810 2960
Support info@mountaintop.dk
Website www.mountaintop.dk
Address Pedersholmparken 10, 3600 Frederikssund, Denmark

PART NUMBER(S)	MODEL / YEAR	CAB TYPE(S)	INSTALLATION TIME	WEIGHT
SB 0060	Volkswagen / 2016 →	Double Cab	1 hour(s)	1 Kg

GB Installation manual	S Monteringsanvisning	D Einbauanleitung
SF Asennusohje	E Instrucciones de montaje	CZ Návod k instalaci
F Notice de montage	H Szerelési utasítás	I Istruzioni de montaggio
PL Instrukcja montażu	P Instruções de instalação	GR Οδηγίες Εγκατάστασης
NL Installatie-instructies	RUS Инструкция по установке	DK Monteringsvejledning
TR Montaj Talimatı	N Monteringsveiledning	RO Instructiuni de instalare